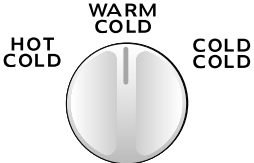 
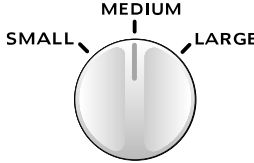 
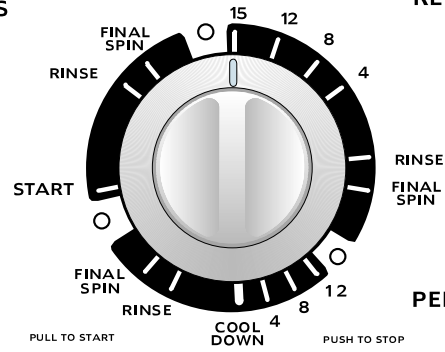 


|  |  |   |
|--|--|---|
| <p><b>WASH/RINSE TEMPERATURE</b></p>  <p><b>FRIGIDAIRE</b><br/>8 CYCLES - FLEX CARE</p> | <p><b>LOAD SIZE</b></p>  <p>HEAVY DUTY<br/>EXTRA LARGE CAPACITY</p> | <p><b>KNITS &amp; DELICATES</b></p>  |
|--|--|---|

**Versión en español**  
 Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N 131597800.  
 Spanish Owner's Guides  
 Frigidaire Company  
 P. O. Box 9061  
 Dublin, Ohio 43017-0961

**Before Operating Your Washer**  
 Read your washer Owner's Guide. It has important safety and warranty information. It also has many suggestions for best washing results.

**⚠ WARNING** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your washer Owner's Guide before operating this appliance.

**Operating Steps**

Read Washing Procedures in your Owner's Guide. It explains these operating steps in detail.

- Sort laundry into loads that can be washed together.
- Prepare items for washing.
- Pretreat stains and heavy soil.
- Add the measured amount of detergent to wash tub.
- If desired, add diluted liquid bleach to Bleach Dispenser.
- Add laundry load to wash tub.
- Set cycle selector and washer controls according to type, size, and soil level of each load.

- Close lid and pull cycle selector knob to start washer.
- If desired, add diluted liquid fabric softener during the final rinse.
- Remove items at end of cycle. Wait about 1 minute for safety lid lock to release.

**Cycle Selection**

 
Always follow instructions on fabric care labels.

The Regular, Perm Press and Knits & Delicates cycles provide a spray rinse during the first spin, followed by a deep rinse and final spin.

**Regular Cycle**

Provides up to 15 minutes of wash agitation for most fabrics.

*(continued, reverse side)*

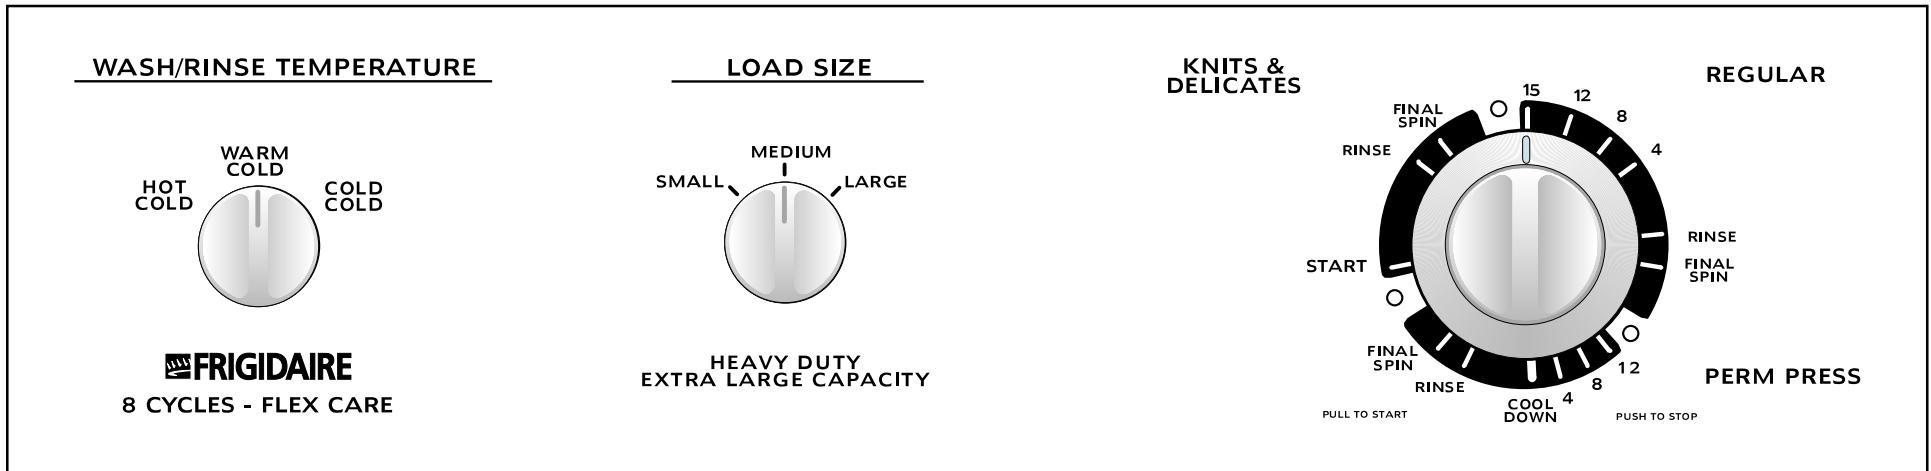

## Cycle Selection (continued)

### Perm Press Cycle

Provides up to 12 minutes of wash agitation for cottons and blends with a no-iron finish.

### Knits & Delicates Cycle

Provides 8 minutes of wash/pause agitation for the gentle care of knit and delicate items. Always set the Knits & Delicates cycle to begin at the START position.

## Controls

Always follow instructions on fabric care labels.

**WASH/RINSE TEMPERATURE** sets the water temperatures for washing and rinsing. Select wash water temperature according to fiber content and soil level of the load, and type of detergent used. A cold water rinse saves energy and reduces wrinkling.

The following chart suggests wash/rinse temperatures for basic fabric types.

| <u>Fabric Type</u>                                       | <u>Wash/Rinse Temperature</u> |
|--|-------------------------------|
| Heavily soiled white/colorfast cotton, perm press        | Hot/Cold                      |
| Lightly soiled white/colorfast cotton, perm press        | Warm/Cold                     |
| Noncolorfast fabrics, knits, delicates, washable woolens | Cold/Cold                     |

**LOAD SIZE** sets the amount of wash and rinse water for the wash load. Select a water level appropriate for the load size. There should be enough water for items to move freely.

## Energy Saving Tips

- Wash full loads. Oversize loads use extra energy. Undersize loads waste energy.
- When small wash loads cannot be avoided, use lower water levels.
- Select the appropriate cycle and time for each load. Shorten wash times for lightly soiled loads.
- To reduce drying time, select a fast spin speed to remove more water from heavy items such as towels and jeans.
- Use warm water to wash most loads. Limit hot water washes to heavily soiled and white loads. Use cold water for lightly soiled items and rinsing.
- Operate the washer in early morning and late evening when utility demands are low.
- Follow proper laundry procedures to avoid rewashing.