 




Use & Care Guide

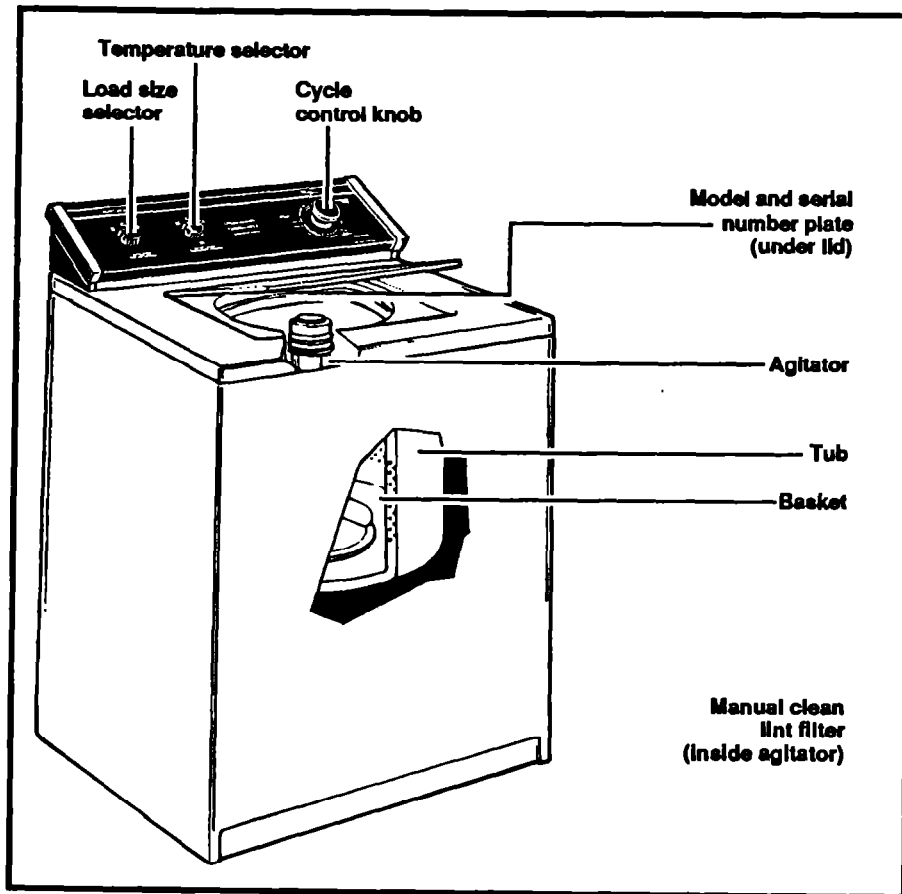

**LARGE CAPACITY TWO SPEED
AUTOMATIC WASHER
LA5525XT**

Contents

	Page
Important Safety Instructions	3
Operating Instructions	
Starting your washer	4
What happens in each cycle	5
Other Operating Instructions	
Rinse and spin	9
Drain and spin	9
Manual clean lint filter	9
If You Need Service Or Assistance	10
Whirlpool Automatic Washer Warranty	12
<hr/>	
©1992 Whirlpool Corporation	

Thank you for buying a Whirlpool appliance. Please complete and mail the Owner Registration Card provided with this product. Then complete the form below. Have this information ready if you need service or call with a question.

- Copy model and serial numbers from plate (under lid near hinge) and the purchase date from the sales slip.
- Keep this book, the Laundry Guide and the sales slip together in a handy place.

Model Number

Serial Number

Purchase Date

Service Company Phone Number

If your washer has a Consumer Buy Guide label, remove it. It will be easier to remove before the washer is used. To remove any remaining glue:

- Rub briskly with thumb to make a ball, then remove.
or
- Soak area with liquid hand dishwashing detergent before removing glue as described above.

Do not use sharp instruments, rubbing alcohol, flammable fluids or abrasive cleaners. These can damage the finish. See "Important Safety Instructions" on page 3.

Important Safety Instructions

⚠ WARNING

To reduce the risk of fire, electrical shock, or injury to persons when using your washer, follow basic precautions, including the following:

- Read all instructions before using the washer.
 - NEVER wash items cleaned, washed, soaked in or spotted with wax, paint, gasoline, or flammable fluids in the washer. The fumes can create a FIRE HAZARD or EXPLOSION. ALWAYS hand launder and air dry fabrics containing these materials.
 - NEVER allow children to operate, play with, or crawl inside the washer. Close supervision of children is necessary when the washer is used near children.
 - When discarding an old washer, ALWAYS remove the lid to prevent accidental entrapment.
 - DO NOT reach into the washer basket while it is filling with water, while agitator is moving or while basket is spinning. If the lid is opened while the basket is spinning, the basket will automatically stop in a few seconds.
 - DO NOT tamper with controls.
 - NEVER use or store flammable fluids (dry-cleaning solvents, kerosene) in or near your washer. DO NOT add flammable fluids to the wash water.
- These substances give off vapors that can create a FIRE HAZARD or EXPLOSION.
- If hot water has not been used recently (usually 2 weeks or longer), hydrogen gases may build up in the water heater and the hot water pipes. HYDROGEN GAS IS EXPLOSIVE. To prevent injury or damage, before using your washer, turn on all hot water faucets and allow water to run for several minutes. This will allow gases to escape. DO NOT smoke or use any open flame near the faucet while it is open.
 - You are responsible for making sure that your washer:
 - is installed, repaired, and has parts replaced by a qualified person.
 - is properly installed and leveled on a floor that can support the weight.*
 - is connected to the correct 3-prong outlet, electric supply, water supply and drain.*
 - is properly grounded.*
 - is properly maintained.*
 - is protected from the weather and kept where the temperature will not fall below freezing.

*See the Installation Instructions.

– SAVE THESE INSTRUCTIONS –

Additional safety instructions and your responsibilities

- ALWAYS store detergent, laundry aids and other materials in a cool, dry place where children can't reach them—in a locked cabinet if possible.
- ALWAYS read and follow instructions on packages of detergents and laundry aids—especially warnings and precautions.
- HAZARDOUS FUMES can be formed if chlorine bleach is used in the same wash as ammonia or acids such as vinegar or rust remover.
- ALWAYS unplug the power supply cord before attempting to service the washer.
- DO NOT machine wash glass fiber materials. Small particles can stick to fabrics washed in following loads and cause skin irritation.
- You are responsible for making sure that your washer:
 - is used only for jobs normally expected of home automatic washers.
 - is not run by children or anyone unable to operate it properly.

Operating Instructions

Starting your washer

Be sure to measure and add detergent, then place a sorted load in the washer before starting it.



 
1. Select a load size

- Turn the knob to point at a setting that describes the size of load you want to wash.
- The knob can be set anywhere on or between EX SMALL (a few small items) and LARGE (a full load).

NOTE: For best washing results, items should move freely in the washer. Do not overload the washer or choose a water level that is too low for your wash load.

For best results with permanent press clothes, use the LARGE water level.

Reduce wash time when using the EX SMALL water level setting. Loads with only a few small items need less wash time for best results.

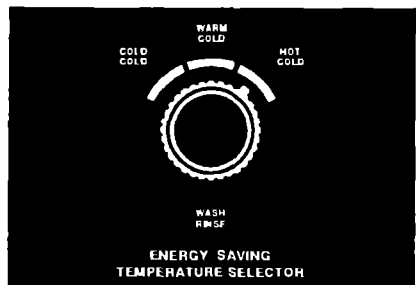


2. Select water temperature

- Match the water temperature to the type of fabric and soils being washed.
- The top temperature is the wash selection and the bottom temperature is the rinse selection.

NOTE: Use warm wash water with the PERMANENT PRESS or KNITS GENTLE Cycles.

For heavily soiled permanent press or knit clothes, pre-wash or pre-soak before washing in warm water.

 ALWAYS use cold rinse water for permanent press fabrics.

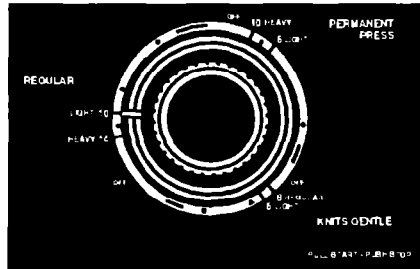

3. Select cycle and wash time Start the washer

- Push in the Cycle Control Knob and turn it clockwise.
- Stop when the indicator on the knob's outer ring points to the number in the wash cycle you want. The numbers are minutes of wash time.
- Start the washer by pulling out the Cycle Control Knob. The washer will fill to the selected water level with the selected wash water temperature. The washer will begin agitating immediately after filling. Agitation can occur with the washer lid up or down.
- To stop the washer at any time, push in the Cycle Control Knob. To restart the washer, pull out the Cycle Control Knob.

What happens in each cycle

Each cycle has been designed for different kinds of fabrics.

When the Cycle Control Knob is set to a number and pulled out, the washer fills before agitation and timing starts. After agitation starts, the knob turns clockwise until it points to OFF and the cycle ends.

The washer will pause briefly throughout each cycle. These pauses are normal for washer operation.

 
Gentle Wash System

For better fabric care in the REGULAR and PERMANENT PRESS Cycles, the agitation speed is reduced during the last few minutes of wash agitation time.

**Operating Instructions
Continued**

Regular/Heavy Cycle
A cycle for sturdily constructed fabrics that are heavily soiled.


Regular/Light Cycle
A cycle for regular loads of fabrics that are moderately soiled.

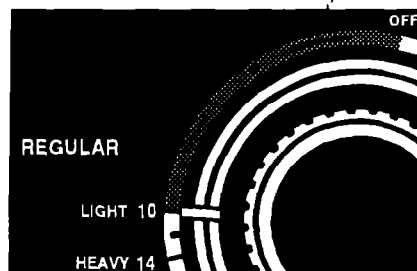

FILL	to Selected Level
WASH	8 Minutes High Speed
WASH	6 Minutes Low Speed
DRAIN	No Agitation
SPIN	High Speed
FILL	for Rinse
RINSE	High Speed
DRAIN	No Agitation
SPIN	High Speed, Spray Rinse


FILL	to Selected Level
WASH	4 Minutes High Speed
WASH	6 Minutes Low Speed
DRAIN	No Agitation
SPIN	High Speed
FILL	for Rinse
RINSE	High Speed
DRAIN	No Agitation
SPIN	High Speed, Spray Rinse

 Permanent Press/Heavy Cycle
 A cycle designed for moderately soiled permanent press and some synthetic fabrics. The cool-down rinse helps keep wrinkles from setting into these items.

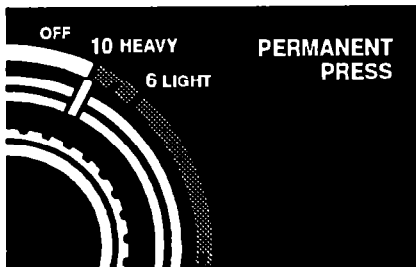

- FILL to Selected Level
- WASH 4 Minutes High Speed
- WASH 6 Minutes Low Speed
- PARTIAL DRAIN (Pause)
- REFILL COOL-DOWN
- WASH Low Speed
- DRAIN No Agitation
- SPIN Low Speed, Spray Rinse
- FILL for Rinse
- RINSE High Speed
- DRAIN No Agitation
- SPIN Low Speed, Spray Rinse
- SPIN High Speed

 Permanent Press/Light Cycle
 A cycle designed for lightly soiled permanent press and some synthetic fabrics. The cool-down rinse helps keep wrinkles from setting into these items.


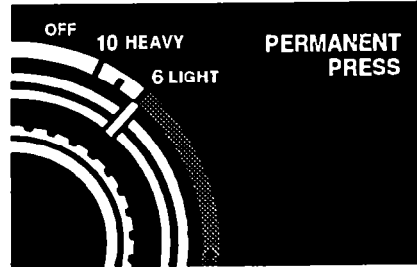


- FILL to Selected Level
- WASH 6 Minutes Low Speed
- PARTIAL DRAIN (Pause)
- REFILL COOL-DOWN
- WASH Low Speed
- DRAIN No Agitation
- SPIN Low Speed, Spray Rinse
- FILL for Rinse
- RINSE High Speed
- DRAIN No Agitation
- SPIN Low Speed, Spray Rinse
- SPIN High Speed

**Operating Instructions
Continued**

Knits Gentle/Regular Cycle
A cycle that gently washes and spins moderately soiled delicate items and washable knits.

  Knits Gentle/Light Cycle
A cycle that gently washes and spins lightly soiled delicate items and washable knits.

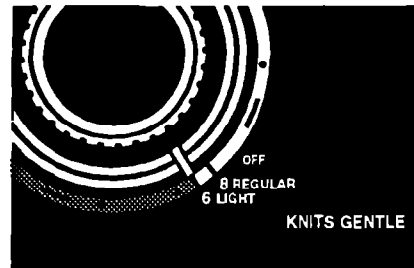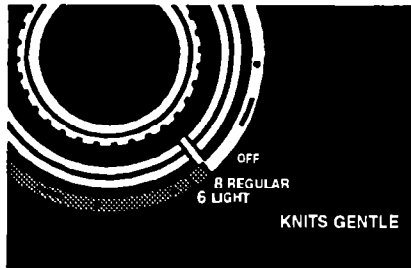


FILL to Selected Level
WASH 4 Minutes Low Speed
▲SOAK 2 Minutes No Agitation
WASH 2 Minutes Low Speed
DRAIN No Agitation
SPIN Low Speed
FILL for Rinse
RINSE Low Speed
DRAIN No Agitation
SPIN Low Speed, Spray Rinse

FILL to Selected Level
WASH 2 Minutes Low Speed
▲SOAK 2 Minutes No Agitation
WASH 2 Minutes Low Speed
DRAIN No Agitation
SPIN Low Speed
FILL for Rinse
RINSE Low Speed
DRAIN No Agitation
SPIN Low Speed, Spray Rinse

▲ Indicates that machine is pausing for a brief soak period.

 
Other Operating Instructions

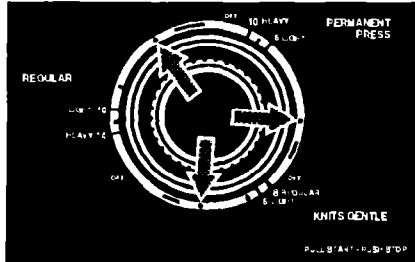

Rinse and spin

When using extra detergent for heavily soiled clothes, or washing special-care items, you may want an extra rinse and spin.

 
1. Push Cycle Control Knob in.
2. Turn clockwise to one of the dots on the dial, as illustrated.
3. Pull Cycle Control Knob out. The washer will fill to selected level, agitate 2 minutes, drain and spin.

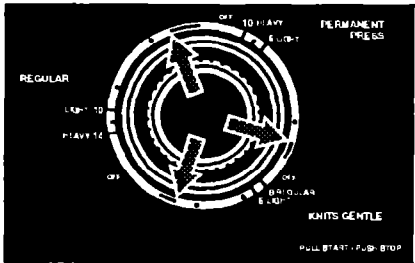

Drain and spin

A drain and spin may help shorten drying times for some heavy fabrics or special-care items by removing excess water.

 1. Push Cycle Control Knob in.
2. Turn clockwise until indicator points to any bar just before an OFF area on the dial, as illustrated.
3. Pull Cycle Control Knob out. The washer will drain and spin.

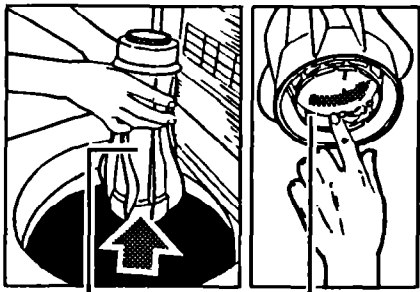

Agitator barrel

Manual clean lint filter

Manual clean lint filter

Clean the filter at the bottom of the agitator after every load for the best filtering results.

To clean:

1. Lift off the agitator barrel.
2. Wash or wipe the filter clean in the bottom of the agitator barrel. The filter is not removable.
3. Replace the agitator barrel and snap it into place.

If You Need Service Or Assistance

We suggest you follow these steps:

1. Before calling for assistance ...

Performance problems often result from little things you can find and fix yourself without tools of any kind.

If your washer does not fill:

- Is the power supply cord plugged into a live circuit with the proper voltage?
- Are both water faucets open?
- Have you checked your home's main fuses or circuit breaker box?
- Are the water supply hoses kinked?
- Is the Cycle Control Knob set and pulled out?

If your washer does not spin:

- Is the lid closed?
- Is the power supply cord plugged into a live circuit with the proper voltage?
- Have you checked your home's main fuses or circuit breaker box?

If your washer stops during a cycle:

- The washer pauses briefly at different times in each cycle. These pauses are normal.

If your washer fills and drains without running:

- Make sure that the Cycle Control Knob is pointing to a number in the cycle.

Make sure the drain hose is higher than the water level in the washer.

If it isn't:

- The washer may seem to be draining during wash and rinse cycles.
- Water can siphon out.
(See Installation Instructions.)

2. If you need assistance*...

Call Whirlpool Consumer Assistance Center telephone number. Dial free from anywhere in the U.S.:

1-800-253-1301

and talk with one of our trained consultants. The consultant can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

If you prefer, write to:

Mr. William Clark
Consumer Assistance Representative
Whirlpool Corporation
2000 M-63
Benton Harbor, MI 49022

Please include a daytime phone number in your correspondence.

3. If you need service*...



Whirlpool has a nationwide network of authorized Whirlpool[®] service companies.

Whirlpool service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate the authorized Whirlpool service company in your area, call our Consumer Assistance Center telephone number (see Step 2) or look in your telephone directory Yellow Pages under:

APPLIANCES - HOUSEHOLD - ELECTRICAL APPLIANCES -
MAJOR - SERVICE & REPAIR MAJOR - REPAIRING & PARTS

OR

WASHING MACHINES, DRYERS
& IRONERS - SERVICING

WHIRLPOOL APPLIANCES
AUTHORIZED WHIRLPOOL SERVICE

SERVICE COMPANIES
XYZ SERVICE CO
123 Maple _____ 800-0000

4. If you need FSP® replacement parts*...

FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance. FSP replacement parts will fit right and work right, because they are made to the same exacting specifications used to build every new Whirlpool appliance.

To locate FSP replacement parts in your area, refer to Step 3 or call the Whirlpool Consumer Assistance Center number in Step 2.

 
5. If you are not satisfied with how the problem was solved*...

- Contact the Major Appliance Consumer Action Panel (MACAP). MACAP is a group of independent consumer experts that voices consumer views at the highest levels of the major appliance industry.
- Contact MACAP only when the dealer, authorized servicer or Whirlpool have failed to resolve your problem.

Major Appliance Consumer
Action Panel
20 North Wacker Drive
Chicago, IL 60606

- MACAP will in turn inform us of your action.

*When requesting assistance, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request.

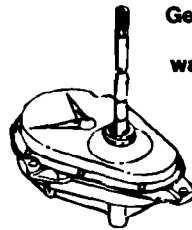

Gearcase assembly covered by your warranty. See back cover for more information.

WHIRLPOOL®

Automatic Washer Warranty

AW015

LENGTH OF WARRANTY	WHIRLPOOL WILL PAY FOR
FULL ONE-YEAR WARRANTY From Date of Purchase	FSP® replacement parts and repair labor to correct defects in materials (including top and lid rust) or workmanship. Service must be provided by an authorized Whirlpool SM service company.
LIMITED FIVE-YEAR WARRANTY From Date of Purchase	FSP replacement parts for any part of gearcase assembly if defective in materials or workmanship. The gearcase assembly is shown in the "Service or Assistance" section of this book. FSP replacement parts for any top and lid rust.
LIMITED TEN-YEAR WARRANTY From Date of Purchase	FSP replacement of outer tub should it crack, or fail to contain water, due to defective materials or workmanship.
WHIRLPOOL WILL NOT PAY FOR	
<p>A. Service calls to:</p> <ol style="list-style-type: none"> 1. Correct the installation of the washer. 2. Instruct you how to use the washer. 3. Replace house fuses or correct house wiring or plumbing. <p>B. Repairs when washer is used in other than normal, single-family household use.</p> <p>C. Pickup and delivery. This product is designed to be repaired in the home.</p> <p>D. Damage to washer caused by accident, misuse, fire, flood, acts of God or use of products not approved by Whirlpool.</p> <p>E. Any labor costs during the limited warranties.</p> <p>F. Repairs to parts or systems caused by unauthorized modifications made to the appliance.</p>	

WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so this limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Outside the United States, a different warranty may apply. For details, please contact your authorized Whirlpool distributor or military exchange.

If you need service, first see the "Service and Assistance" section of this book. After checking "Service and Assistance," additional help can be found by calling our Consumer Assistance Center telephone number, 1-800-253-1301, from anywhere in the U.S.

® Registered Trademark / SM Service Mark of Whirlpool Corporation

Part No. 3357454
 ©1992 Whirlpool Corporation

Printed in U.S.A.