


COOKTOP CIRCUIT

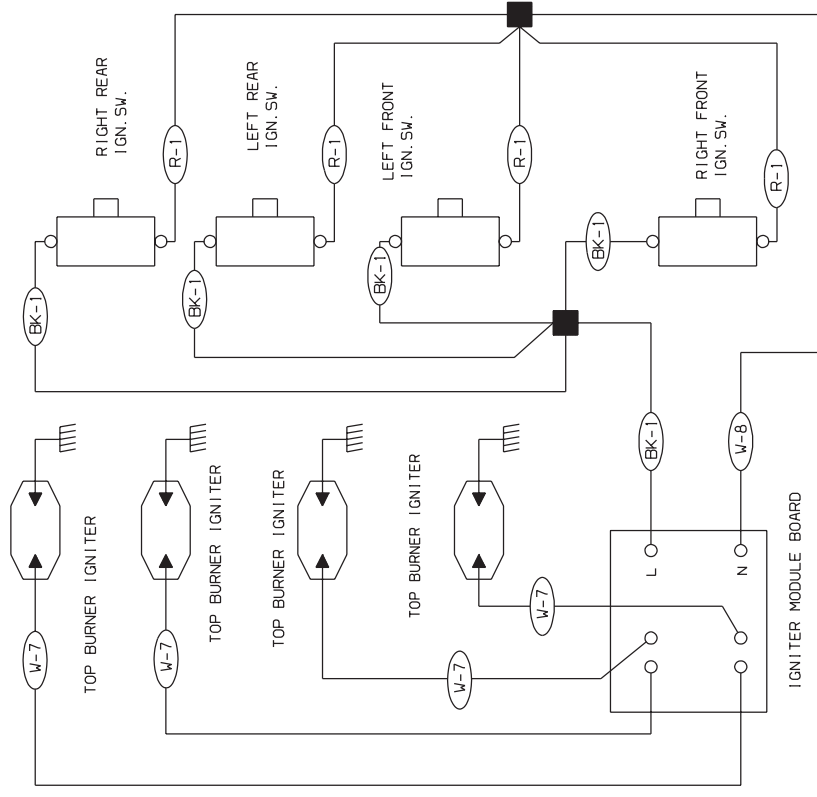

WARNING
DISCONNECT POWER BEFORE SERVICING UNIT.


BL/W-1
COLOR WIRE NO.

WIRE	GAGE	TEMP °C	UL STYLE
8	18	200	3122
7	18	200	3304
6	12	150	3321
5	16	200	3122
4	10	150	3321
3	14	150	3321
2	16	150	3321
1	18	150	3321

COLOR CODE

BK	BLACK	P	PINK
BL	BLUE	PR	PURPLE
BR	BROWN	R	RED
C	COPPER	T	TAN
G	GREEN	V	VIOLET
OY	GRAY	W	WHITE
O	ORANGE	Y	YELLOW
BL/W	BLUE/WHITE STRIPE		

WARMER DRAWER


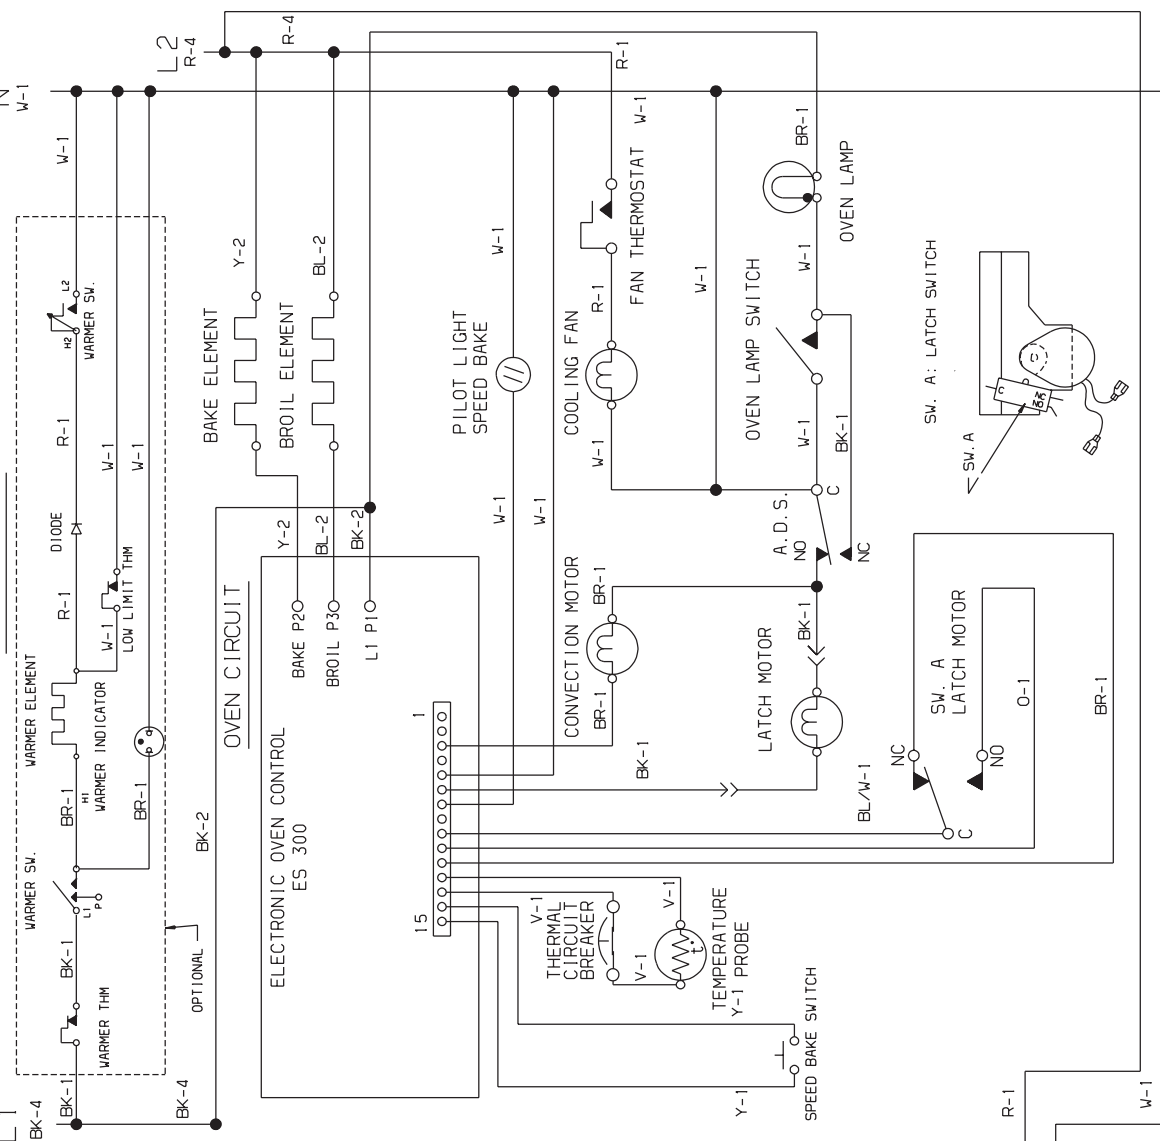


NOTE:
CIRCUIT SHOWN WITH ALL CONTROLS SET TO "OFF".
OVEN DOOR CLOSED AND UNLOCKED.

L 1
BK-4

COOKTOP CIRCUIT / PLANCHA DE COCINAR

L 2
R-4
N
W-1

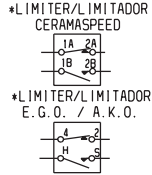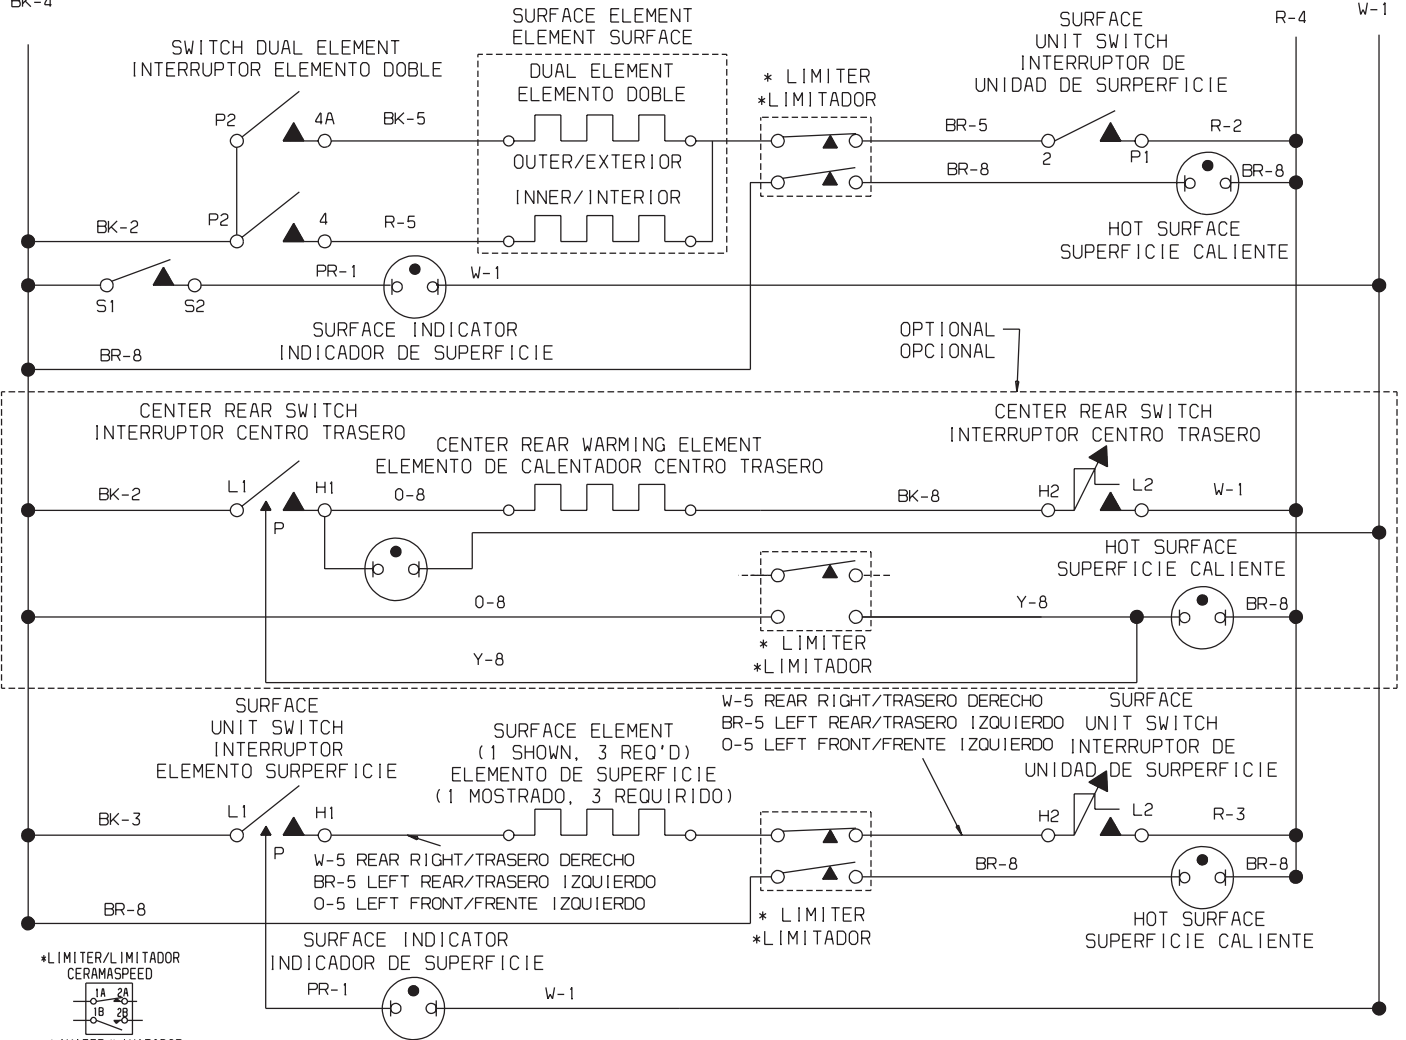

COOKTOP CIRCUIT / PLANCHA DE COCINAR

