


# OPERATING INSTRUCTIONS

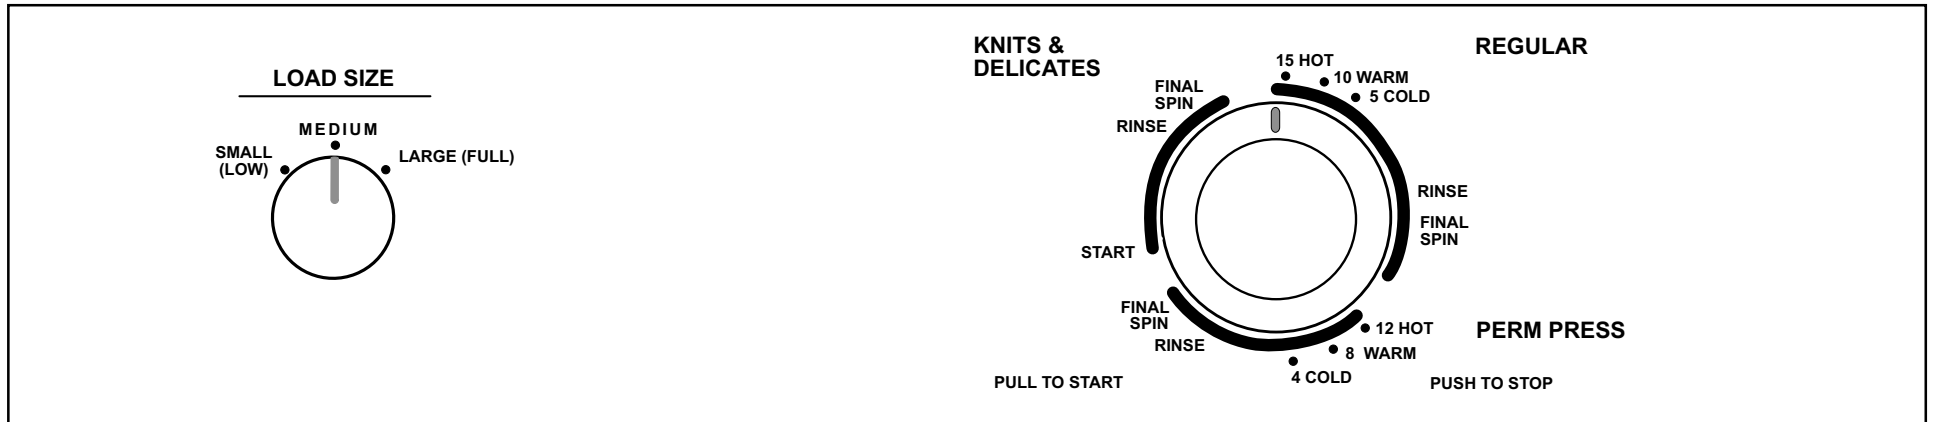

## Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N 131920000.

Spanish Owner's Guides  
Frigidaire Company  
P.O. Box 21278  
Augusta, GA 30917

## Before Operating Your Washer

Read your washer Owner's Guide. It has important safety and warranty information. It also has many suggestions for best washing results.

**⚠ WARNING** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your washer Owner's Guide before operating this appliance.

## Operating Steps

Read Washing Procedures in your Owner's Guide. It explains these operating steps in detail.

1. Sort laundry into loads that can be washed together.
2. Prepare items for washing.
3. Pretreat stains and heavy soil.
4. Add the measured amount of detergent to wash tub.
5. If desired, add diluted liquid bleach to Bleach Dispenser on some models. (For models without a dispenser, add diluted bleach after the tub has filled and the load has agitated a few minutes. DO NOT pour bleach directly onto the wash load.)
6. Add laundry load to wash tub.
7. If desired, add liquid fabric softener to the Fabric Softener Dispenser on some

models. (For models without a dispenser add softener to the final rinse.)

8. Set cycle selector and washer control according to type, size, and soil level of each load.
9. Close lid and pull cycle selector knob to start washer.
10. Remove items at end of cycle. Wait about 1 minute for safety lid lock to release.

## Cycle Selection

For best results, follow the fabric care label directions on items to be washed. Check the Control Settings Chart if the care label is not available.

The Regular, Perm Press and Knits/Delicates cycles provide a spray rinse during the first spin, followed by a deep rinse and a final spin.

(continued, reverse side)

## Cycle Selection (continued)

### Regular Cycle

Up to 15 minutes of wash agitation for most fabrics.

- **15 Hot** 15 minutes of wash agitation. A hot water wash and a cold water rinse are provided for heavily soiled items.
- **10 Warm** 10 minutes of wash agitation. A warm water wash and a cold water rinse are provided for normally soiled items. (some models)
- **5 Cold** 5 minutes of wash agitation. A cold water wash and a cold water rinse are provided for lightly soiled items.

### Perm Press Cycle

Up to 12 minutes of wash agitation for cottons and blends with a no-iron finish.

- **12 Hot** 12 minutes of wash agitation. A hot water wash and a cold water rinse are provided for heavily soiled items.
- **8 Warm** 8 minutes of wash agitation. A warm water wash and a cold water rinse are provided for normally soiled items. ( some models)
- **4 Cold** 4 minutes of wash agitation. A cold water wash and a cold water rinse are provided for lightly soiled items.

### Knits/Delicates Cycle

8 minutes of wash/pause agitation. A warm water wash and a cold water rinse are provided for knit and delicate items.

**LOAD SIZE/WATER LEVEL** sets the amount of wash and rinse water for the wash load. Select a water level appropriate for the load size. There should be enough water for items to move freely.

## Control Settings Chart

Locate fabric type and read across guide for suggested wash cycle and cycle settings.

**This is only a general guide. For best results, follow fabric care label directions on specific items to be washed.**

Fabric Type	Wash Cycle	Cycle Setting
<b>REGULAR</b> Heavily Soiled Colorfast & White Cotton & Linen	Regular	15 Hot
Normally Soiled Colorfast & White Cotton & Linen	Regular	10 Warm (some models)
Lightly Soiled Noncolorfast Bright Colors	Regular	5 Cold
<b>PERMANENT PRESS</b> Heavily Soiled Colorfast & White	Perm Press	12 Hot
Normally Soiled	Perm Press	8 Warm
Lightly Soiled Noncolorfast Bright Colors	PermPress	4 Cold
<b>KNITS/DELICATES</b> Knitted Fabrics Delicates	Knits/Delicates	Start*(8)
Washable Woolens	Knits/Delicates	Start*(8)

**\*Always set the Knits/Delicates cycle to begin at the START position.**