




DRYER OPERATING INSTRUCTIONS

SEARS Kenmore Advantage

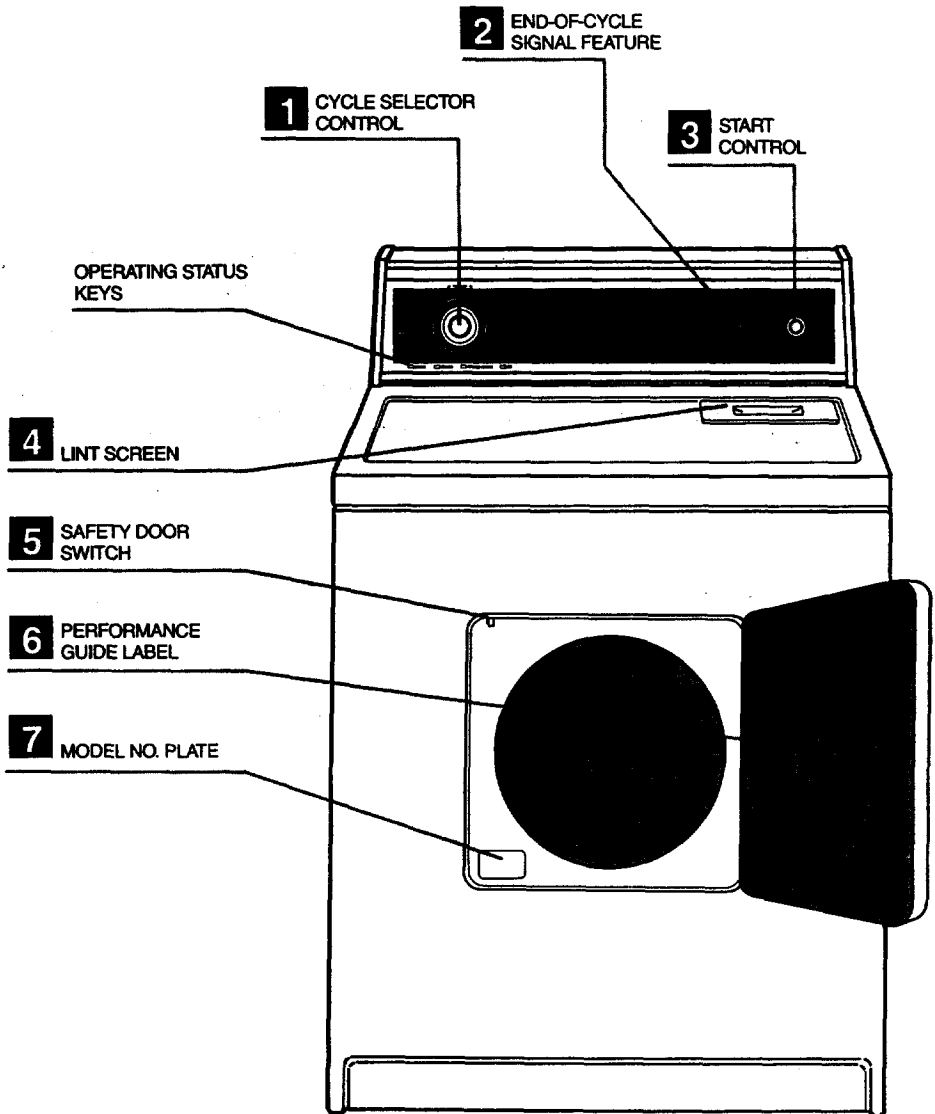

! WARNING Electric Shock Hazard.
 To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in the Laundry Guide and Installation Instructions before operating this appliance.

If you need SERVICE or PARTS for your Kenmore dryer:
 Be ready to give your Sears Service Department the model number, serial number and date of purchase. Write in below. The plate **7** with model and serial numbers is located behind the dryer door.

110. _____ | M _____ | _____
 MODEL NO. SERIAL NO. DATE OF PURCHASE

**ELECTRIC
 MODEL 64681**

**GAS
 MODEL 74681**

How to dry a load of laundry


A Clean lint screen before each load.

C Set Cycle Selector Control **1**.

E Remove load when dry.

B Put laundry into dryer and shut the door.

D Push the Start Control **3** to start your dryer.

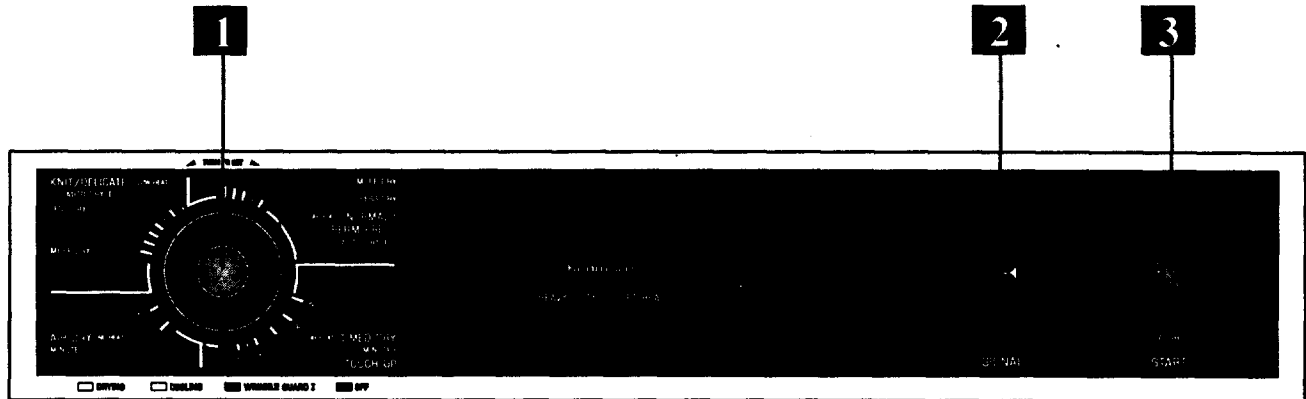

1 Cycle Selector Control

Use this control to select the proper drying method for the type of items in the load. The control can be set for Automatic or Timed Drying, Touch Up or Air. You can turn the control at any time to make drying time longer or shorter or you can turn the control to an OFF position to shut the dryer off.

OPERATING STATUS KEYS

Color coordinated keys indicate in which portion of the cycle the dryer is operating.

2 End-of-Cycle Signal

This signal buzzes to tell you the drying cycle is over. The dryer should be unloaded as soon as the cycle is over to get the best wrinkle free results.

During Wrinkle Guard I the buzzer will sound every 5 minutes.

3 Start Control

Use this control to start the dryer after cycle is selected. Be sure the door is closed.

Opening the door stops the dryer. It will not start again until you close the door and push the START control. Be sure the Cycle Selector Control is on a dry setting.

1 CYCLE SELECTOR CONTROL

AUTO DRY I Normal/Permanent Press Cycle

Use this cycle for most loads of sturdy clothes or synthetic, permanent press items. Clothes are dried at high heat followed by a 10 minute (approx.) cooldown.

When the dryness selected is reached the dryer goes into cooldown then a buzzer sounds. If you do not unload the dryer, it goes into Wrinkle Guard I automatically.

- Set the Cycle Selector Control to the (*) which is good for most fabrics. You can set the control for MORE DRY if clothes are still damp at the end of the cycle or LESS DRY for clothes that are too dry or are to be ironed.
- Push the Start Control.

AUTO DRY I Knit/Delicate Cycle

Use this cycle for most loads of knitted, delicate or sheer fabrics. Clothes are dried at low heat followed by a 5 minute (approx.) cooldown.

When dryness selected is reached, the dryer goes into cooldown then turns off and a buzzer sounds.

- Set the Cycle Selector Control to the (*) which is good for most fabrics. You can set the control for MORE DRY if clothes are still damp at the end of the cycle or LESS DRY for clothes that are too dry or are to be ironed.
- Push the Start Control.

This cycle gives the best drying in the shortest time. Drying time varies according to type of fabric, size of load and dryness setting. Dryness is determined by thermostats that react to the amount of moisture in the air exhausted from the dryer. Moist air indicates clothes are still damp, dry air indicates moisture has been removed.

AIR DRY Cycle

Use this cycle to get up to 20 minutes of drying time in room temperature air. Use this setting for items that will not tolerate heat, such as plastics, foam rubber, etc. and for airing and fluffing items such as pillows.

- Do not dry these items with heat.
- Set the Cycle Selector Control for the number of minutes you want in the Air Cycle.
- Push the Start Control.

TIMED DRY Cycle

Use this cycle to get up to 50 minutes of drying time at high heat, followed by a 10 minute (approx.) cooldown.

- Set the Cycle Selector Control to the amount of time you want in the Timed Cycle.
- Push the Start Control.

TOUCH-UP Cycle

Use this cycle to "smooth" synthetic and permanent press clothes that are clean but wrinkled from being crowded in a closet or suitcase. This setting provides about 15 minutes of tumbling at high heat followed by a 10-minute (approx.) cooldown.

- Put just a few garments into the dryer.
- Set the Cycle Selector Control to TOUCH-UP.
- Push the Start Control.
- Remove clothes immediately when tumbling stops.

SOFT-HEAT®

In the AUTOMATIC and TIMED DRY Cycles, clothes are dried at the selected temperature until the last few minutes of the cycle when the dryer switches to low heat. This helps prevent overdrying.

Cooldown

Approximately five or ten minutes before the end of the AUTOMATIC and TIMED DRY Cycles, clothes are tumbled without heat to help reduce wrinkles and make clothes more comfortable to handle.

Wrinkle Guard I

Wrinkle Guard I helps keep permanent press items wrinkle free when you cannot unload the dryer promptly at the end of the Automatic Cycle. If you do not open the door at the end of the NORMAL/PERM PRESS AUTO DRY I Cycle, Wrinkle Guard I will tumble the clothes without heat for 30 minutes unless you open the door sooner. During Wrinkle Guard I the End-of-Cycle Signal will sound every 5 minutes.

FEATURES

4 Lint Screen

Keep the lint screen clean. A lint-clogged screen will slow down the flow of air. This makes drying time longer and wastes energy. Clean the lint screen before each load as follows:

1. With dryer off, remove the screen by pulling straight up.
2. Roll the dry lint off the screen. Do not wet the screen or lint; wet lint is hard to remove.
3. Replace the cleaned lint screen.

▲ WARNING

Fire Hazard.

Do not use your dryer while the lint screen is removed.

It could cause overheating and possible damage to fabrics and dryer parts or create a fire hazard. Lint screen must be pushed firmly into place.

NOTE: If lint screen gets clogged by detergent or fabric softener build-up, remove and clean it with a nylon brush, hot water and liquid detergent. Dry and replace screen.

5 Safety Door Switch

For safety, the switch shuts off dryer when door is opened. Dryer will not start until door is closed and START is pushed. Be sure the Cycle Selector Control is on a dry setting.

6 Performance Guide Label

Located inside the dryer door. Gives information on what to do if dryer does not perform normally.

7 Model No. Plate

Shows model and serial numbers. Have these ready if you ever call for service.

NOTE: If dryer drum is stained, clean it with a damp cloth and mild detergent.

For more detailed drying times, rules for safe operation, fabric care, maintenance and installation information, refer to the LAUNDRY GUIDE and INSTALLATION INSTRUCTIONS you received with your dryer.