


OPERATING INSTRUCTIONS

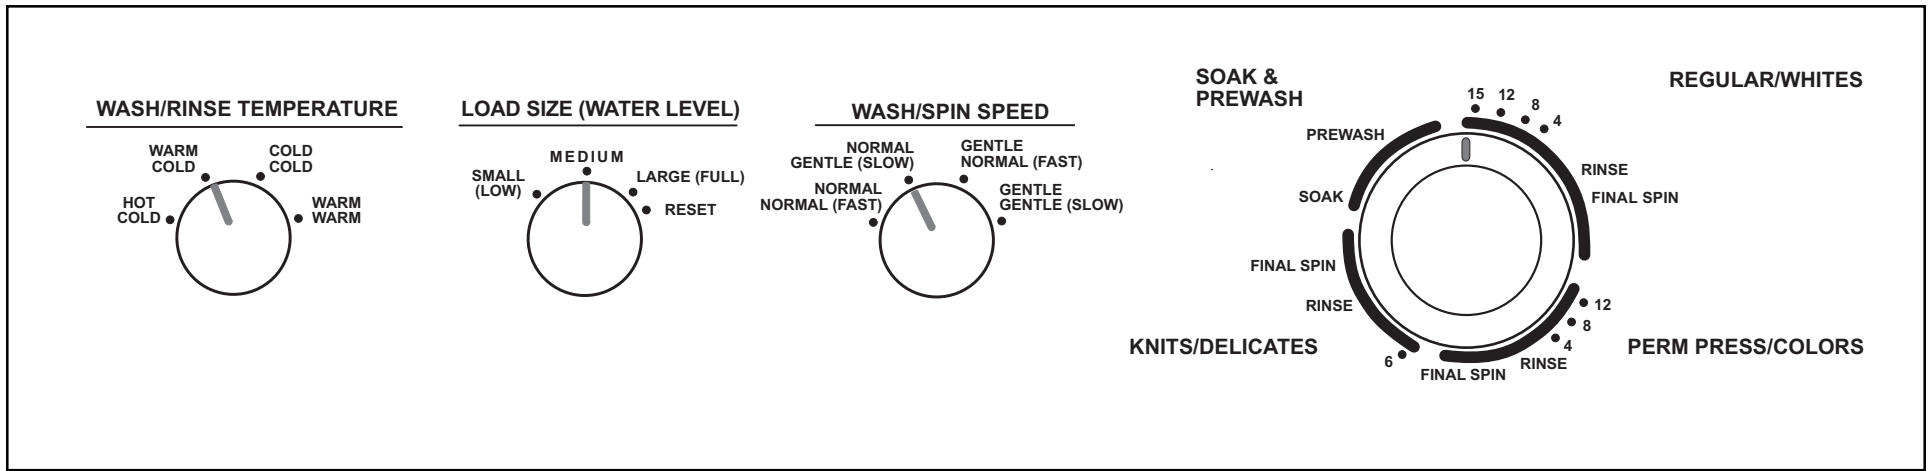

Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N 131920400.

Spanish Owner's Guides
Frigidaire Home Products
P. O. Box 212378
Augusta, GA 30917

Before Operating Your Washer

Read your washer Owner's Guide. It contains important safety and warranty information. It also contains many suggestions for obtaining the best results from your washer.

⚠ WARNING To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your washer Owner's Guide before operating this appliance.

Operating Steps

Read Washing Procedures in your Owner's Guide. It explains these operating steps in detail.

1. Sort laundry into loads that can be washed together.
2. Prepare items for washing.
3. Pretreat stains and heavy soil.
4. Add the measured amount of detergent to wash tub.
5. If desired, add diluted liquid bleach to Bleach Dispenser.
6. Add laundry load to wash tub.
7. If desired, add liquid fabric softener to the Fabric Softener Dispenser.

8. Set cycle selector and washer controls according to type, size, and soil level of each load. See Control Settings Chart.

9. Close lid and pull cycle selector knob to start washer.

10. Remove items at end of cycle. Wait about 1 minute for safety lid lock to release.

Cycle Selection

Always follow instructions on fabric care labels.

The Regular/Whites, Perm Press/Colors and Knits/Delicates cycles provide wash agitation as described below, followed by a deep rinse and a final spin at the selected water temperature and speeds.

Regular/Whites Cycle

The Regular/Whites cycle provides up to 15 minutes of wash agitation for most fabrics.

(continued, reverse side)

Cycle Selection (continued)

Perm Press/Colors Cycle

The Perm Press/Colors cycle provides up to 12 minutes of wash agitation for cottons and blends with a no-iron finish.

Knits/Delicates Cycle

The Knits/Delicates cycle provides up to 6 minutes of wash agitation for the gentle care of knit and delicate items.

Soak & Prewash Cycle

- **Soak** — The Soak setting can be used to treat heavily soiled or stained items. It provides 2 minutes of agitation and 12 minutes of soaking time, then advances to the Prewash portion of the cycle. Use the amount of detergent recommended for a normal wash cycle. For colorfast items, bleach or a soaking agent may also be used. Follow manufacturer's directions on the product label.

- **Prewash** — When soaking is not necessary, the Prewash setting can be used alone to help remove protein-based stains such as milk, grass and blood and to help loosen soils before washing. During Prewash, the washer will agitate the load for 2 minutes, then drain, spin and shut off. Use the amount of detergent and other laundry products recommended for a normal wash cycle.

Note:

- The Soak water temperature is the same as the rinse water temperature selected; the Prewash water temperature is the same as the wash water temperature selected. To avoid setting protein stains, select cold water.
- Select wash/spin speeds appropriate for the items being soaked or prewashed.
- Soak and Prewash should always be followed by a complete wash cycle using the recommended amount of detergent.

Controls

Always follow instructions on fabric care labels.

WASH/RINSE TEMPERATURE determines water temperatures for washing and rinsing.

WASH/SPIN SPEED determines speeds for the agitation and spin portions of each cycle.

LOAD SIZE/WATER LEVEL sets the amount of wash and rinse water for the wash load. Select a water level appropriate for the load size. There should be enough water for items to move freely.

- To increase water level after the wash cycle begins, turn the Load Size/Water Level control to Reset and hold. When water begins to enter the tub, turn the control to the desired setting.

Control Settings Chart

Locate fabric type and read across guide for suggested wash and rinse temperatures, wash cycle and time setting. **This is only a general guide. For best results, follow label directions on specific items to be washed.**

Fabric Type	Temperature (Wash/Rinse)		Wash Cycle and Setting	Wash/Spin Speed
REGULAR/WHITES Heavily Soiled Colorfast & White Cotton & Linen	Hot	Cold	Regular - 15	Normal/Normal - Fast
Normally Soiled Colorfast & White Cotton & Linen	Warm	Cold	Regular - 8 to 12	Normal/Normal - Fast
Lightly Soiled Noncolorfast Bright Colors	Cold	Cold	Regular - 4 to 8	Normal/Normal - Fast
PERM PRESS/COLORS White or Heavily Soiled	Hot or Warm	Cold	Perm Press - 8 to 12	Normal/Gentle - Slow
Colored or Lightly Soiled	Warm or Cold	Cold	Perm Press - 4 to 8	Normal/Gentle - Slow
KNITS/DELICATES Knitted Fabrics Delicates	Cold Cold	Cold Cold	Delicates - 6 Delicates - 6	Gentle/Normal - Fast Gentle/Gentle - Slow
Washable Woolens	Warm	Warm	Delicates - 6	Gentle/Normal - Fast