
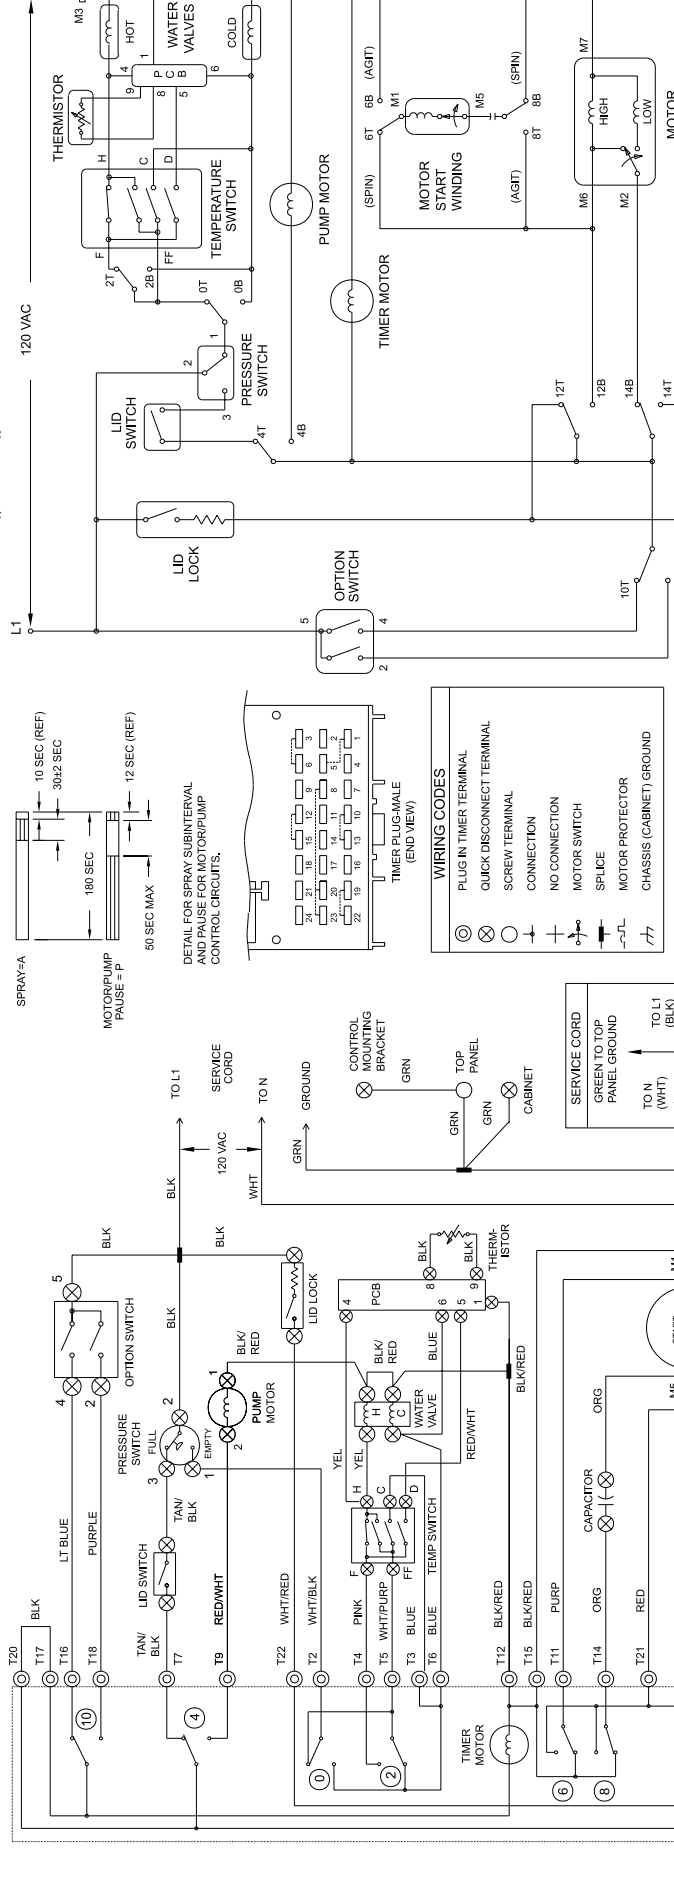


CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING

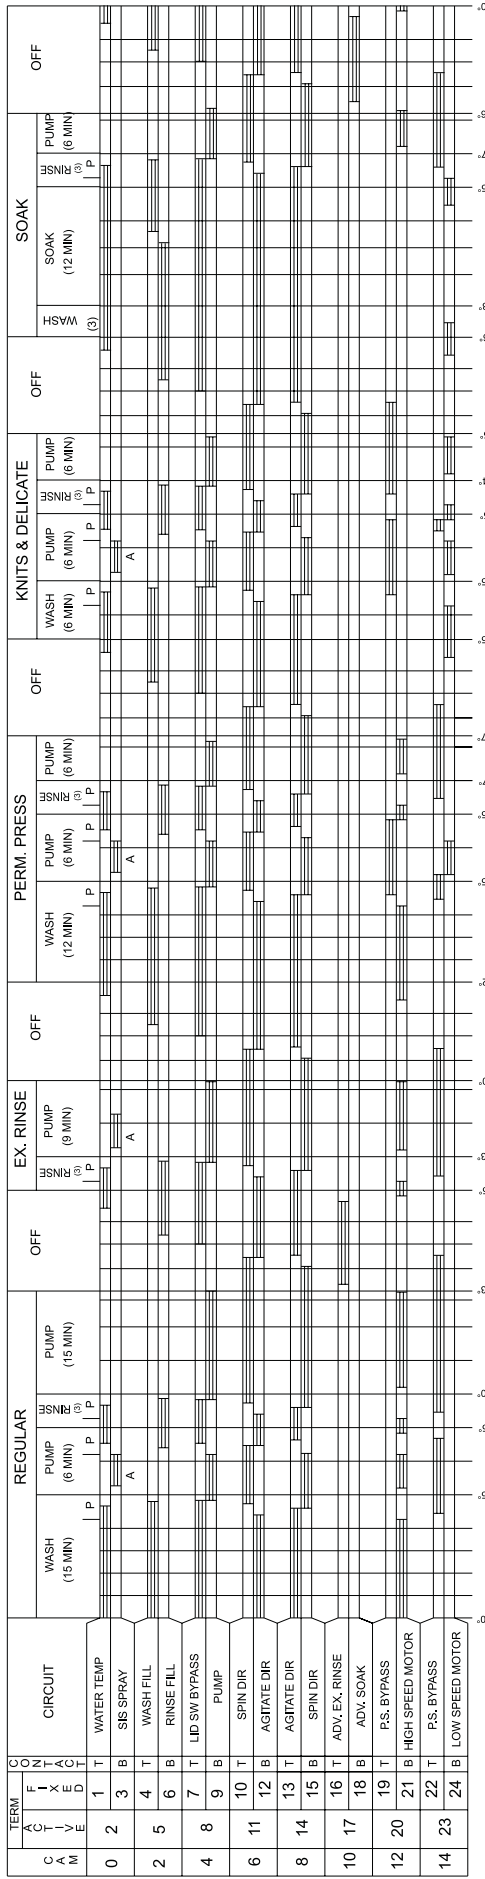

NOTE: PREFIX INDICATES TIMER SWITCH CONTACTS  
 T=TOP  
 B= BOTTOM

POS	OPTION	1-3	1-3	5-4	5-2
1	POWER SCRUB/EXTRA RINSE		X	X	X
2	EXTRA RINSE	X		X	X
3	POWER SCRUB	X	X	X	X
4	OFF	X	X	X	X

X=SWITCH CLOSED  
 \* TERMINALS 1, 3 & 9 NOT USED ON ALL MODELS.

WASH/RINSE	F-H	FF-H	FF-C	F-D
H/C	X	X	X	X
* W/C	X	X	X	X
* C/C	X	X	X	X
* W/W	X	X	X	X
R/C	X	X	X	X
R/W	X	X	X	X
R/W/W	X	X	X	X

H=HOT C=COLD W=WARM  
 R=REGULATED  
 \* NOT ON ALL MODELS.

WIRING DIAGRAM  
 134164500

WASHER TIMER