



## OVEN OPERATING TEMPERATURES

Feature	Default	Maximum	Minimum
Bake-upper	350°F/176°C	550°F/288°C	170°F/76°C
Bake-lower	350°F/176°C	450°F/232°C	170°F/76°C
Bread proof	HI 100°F/38°C	HI 100°F/38°C	LO 85°F/30°C
Broil	550°F/288°C	550°F/288°C	300°F/148°C
Conv bake	350°F/176°C	550°F/288°C	170°F/76°C
Conv roast	350°F/176°C	550°F/288°C	170°F/76°C
Defrost	80°F/26°C	NA	NA
Dehydrate	120°F/48°C	225°F/108°C	100°F/38°C
Keep warm	170°F/76°C	190°F/88°C	150°F/66°C
Probe	170°F/76°C	210°F/98°C	130°F/54°C
Perfect turkey	325°F/163°C	550°F/288°C	180°F/82°C

## CONTROL LOCK

Step	Press
1	Choose <b>CONTROL LOCK</b> and hold for 3 seconds

To unlock, press and hold CONTROL LOCK again for 3 seconds.

Control lock will lock oven controls and upper oven door.

**DOOR LOCK** will flash in the display until the door has finished locking. Once the door has been locked, the door lock indicator will turn on. LOC will then display in the upper cavity only. Do not attempt to open the oven door while DOOR LOCK is flashing.

## TIMERS

Step	Press
------	-------

The two timers serve as extra reminders in the kitchen.

To set the timer:

- Choose desired timer
- Enter desired time and press START

To cancel, press the timer key.

## OVEN LIGHT

Step	Press
1	Press <b>OVEN LIGHT</b> to turn on lights manually

The oven lights will automatically turn on when the upper oven door is opened.

## ABBREVIATIONS

Code	Explanation	Oven
Cln	Self clean	x
CLO	Setting the clock	x
dEF	Defrost	x
End	End of cycle	x
F10*	Fault code error	x
Hi	Hi setting	x
Hot	Hot oven	x
Lo	Lo setting	x
Loc	Control lock	x
Sab	Sabbath mode	x
Sd	Demo mode	x
Sf	Sabbath mode failure	
CF	Check food	

\* F10 is an example of a fault code that you may see. These codes will help your servicer repair your appliance.

This guide is not intended to replace your user's manual. Refer to the Use & Care Guide for complete instructions.

## COOKING FEATURES

### BAKE

Step	Press
1	Press <b>UPPER OVEN</b> or <b>LOWER OVEN</b>
2	Press <b>BAKE*</b>
3	Press <b>START</b>

### BROIL

Step	Press
1	Place the boiler insert on the broiler pan, then place food on the insert. Remember to follow all warnings and cautions.
2	Place prepared food directly under broiler burner. <b>Close the door.</b>
3	Press <b>UPPER OVEN</b>
4	Press <b>BROIL*</b>
5	Press <b>START</b>

### CONV BAKE

Step	Press
1	Press <b>UPPER OVEN</b>
2	Press <b>CONV BAKE*</b>
3	Press <b>START</b>

### CONV ROAST

Step	Press
1	Press <b>UPPER OVEN</b>
2	Press <b>CONV ROAST*</b>
3	Press <b>START</b>

### KEEP WARM

Step	Press
1	Press <b>UPPER OVEN</b> or <b>LOWER OVEN</b>
2	Press <b>KEEP WARM*</b>
3	Press <b>START</b>

### SLOW COOK

Step	Press
1	Press <b>UPPER OVEN</b> or <b>LOWER OVEN</b>
2	Press <b>SLOW COOK</b>
3	Press <b>-lo</b> to choose the low option. Press <b>+hi</b> to choose the high option.
4	Press <b>START</b>

### PERFECT TURKEY™

Step	Press
1	Insert the probe into the food and place food on rack in oven.
2	Plug the probe completely into the probe receptacle inside the oven.
3	Press <b>UPPER OVEN</b>
4	Press <b>PERFECT TURKEY*</b>
5	Press <b>START</b>

## COOKING FEATURES

### DEFROST

Step	Press
1	Press <b>UPPER OVEN</b>
2	Press <b>DEFROST</b>
3	Press <b>START</b>

### DEHYDRATE

Step	Press
1	Press <b>UPPER OVEN</b>
2	Press <b>DEHYDRATE*</b>
3	Press <b>START</b>

### BREAD PROOF

Step	Press
1	Press <b>UPPER OVEN</b>
2	Press <b>BREAD PROOF</b> <i>Use the + hi or - lo keys to change default temperature.</i>
3	Press <b>START</b>

### MY FAVORITE (to save)

Step	Press
1	Press <b>UPPER OVEN</b>
2	Choose cooking feature & any additional options.
3	Press <b>START</b>
4	Press & hold available <b>MY FAVORITE</b> for 3 seconds.
5	Press <b>CANCEL</b>

### MULTI STAGE

Step	Press
1	Press <b>UPPER OVEN</b>
2	Press <b>MULTI STAGE</b>
Stage 1 _____	
3	Choose 1st cooking feature
4	Enter temperature
5	Press <b>START</b>
6	Enter cooking time
7	Press <b>START</b>
Stage 2 _____	
8	Choose 2nd cooking feature
9	Enter temperature
10	Press <b>START</b>
11	Enter cooking time
12	Press <b>START</b>
Stage 3 _____	
13	Choose 3rd cooking feature
14	Enter temperature
15	Press <b>START</b>
16	Enter cooking time
17	Press <b>START</b> twice

### SELF CLEAN

Step	Press
1	Press <b>UPPER OVEN</b>
2	Press <b>CLEAN</b>
3	Choose <b>LITE, MED or HEAVY</b>
4	Press <b>START</b>

## COOKING OPTIONS

### PROBE

Step	Press
1	Insert the probe into food and place in the oven.
2	Plug the probe completely into the probe receptacle inside the oven.
3	Choose <b>UPPER OVEN</b>
4	Choose cooking feature
5	Press <b>COOK OPTIONS</b>
6	Press <b>PROBE</b>
7	Press <b>START</b>

### RAPID PREHEAT

Step	Press
1	Choose <b>UPPER OVEN</b>
2	Choose cooking feature
3	Press <b>COOK OPTIONS</b>
4	Press <b>RAPID PREHEAT</b>
5	Press <b>START</b>

Cook options may be added to cooking features to make your cooking experience easier. The following options are available:

- Cook time
- End time
- Probe
- Rapid preheat
- Convection convert

### COOK TIME

Step	Press
1	Choose <b>UPPER OVEN</b> or <b>LOWER OVEN</b>
2	Choose cooking feature
3	Press <b>START</b>
4	Press <b>COOK OPTIONS</b>
5	Press <b>COOK TIME</b>
6	Enter amount of cooking time
7	Press <b>START</b>

### COOK TIME WITH END TIME

Step	Press
1	Choose <b>UPPER OVEN</b> or <b>LOWER OVEN</b>
2	Choose cooking feature
3	Press <b>COOK OPTIONS</b>
4	Press <b>COOK TIME</b>
5	Enter amount of cooking time
6	Press <b>END TIME</b>
7	Enter time of day you wish to stop cooking (00:00 format)
8	Press <b>START</b>

### CONVECTION CONVERT

Step	Press
1	Choose <b>UPPER OVEN</b>
2	Choose cooking feature
3	Press <b>COOK OPTIONS</b>
4	Press <b>CONV CONVERT</b>
5	Press <b>START</b>

### USER PREFERENCES

The user preferences key will allow you to customize the way your appliance operates. User pref is only accessible when you are not cooking or using the timers. You will find options such as setting the clock, audio mode and other changes under the user preferences.

\*Enter your desired temperature at this point if you choose not to use the default temp.

\*Enter your desired temperature at this point if you choose not to use the default temp.