 


# DRYER OPERATING INSTRUCTIONS

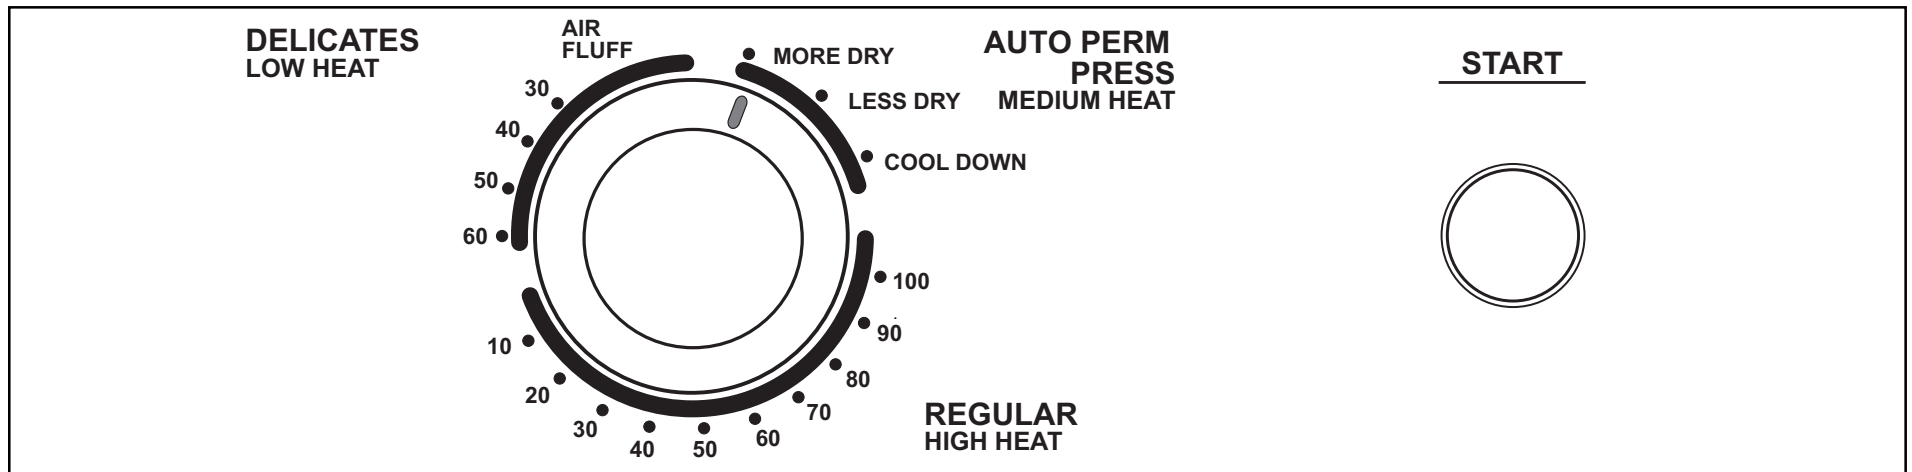

## Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir la dirección que se incluye a continuación. Solicite la P/N 134041000.

Spanish Owner's Guides  
Electrolux Home Products  
P. O. Box 212378  
Augusta, GA 30917

## Before Operating Your Dryer

**Read your Owner's Guide.** It has important safety and warranty information. It also has many suggestions for best drying results.

**⚠ WARNING** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your owner's guide before operating this appliance.

## Operating Steps

**Read Drying Procedures in your Owner's Guide.** It explains these operating steps in detail.

- 1. Prepare items for drying.**
- 2. Check that lint screen is clean and in place.**
- 3. Load the dryer.** If desired, add a dryer fabric softener sheet.
- 4. Close the dryer door.**
- 5. Turn cycle selector clockwise to desired setting.**
- 6. Start dryer.** Push Start button for 2 seconds.
- 7. A signal will sound when the cycle ends.**
- 8. At end of cycle, remove items immediately and hang or fold.**
- 9. Clean lint screen after every load.**

 
## Cycle Selection

**Always follow directions on fabric care labels.**

**⚠ WARNING** To avoid fire hazard, do not use heat to dry items containing feathers or down, foam rubber, plastics, or similarly textured, rubber-like materials. Use Air Fluff (no heat) setting only.

Turn cycle selector clockwise to desired cycle and setting. Each cycle ends with a cool down period. The heat automatically turns off and the load continues to tumble for 5-10 minutes. This reduces wrinkling and makes items easier to handle during unloading.

Drying time varies depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time.

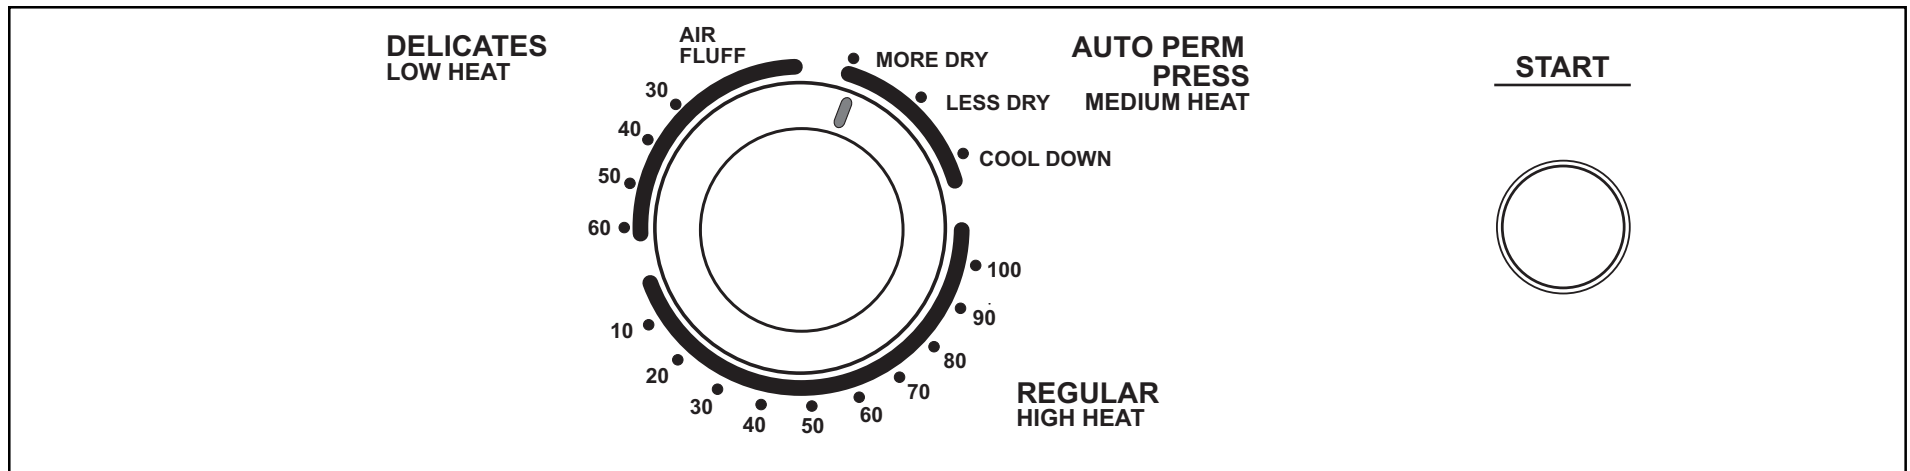

## Cycle Selection (continued)

### Auto Perm Press-Medium Heat

This cycle is best for permanent press items that can be tumble dried at medium heat. Drying time is determined automatically.

- For items requiring more drying time, set cycle selector on **MORE DRY**.
- For items requiring less drying time, set cycle selector on **LESS DRY**.

When the items are dry, the heat automatically turns off and the load is tumbled for approximately 10 minutes without heat.

### Regular-High Heat

This cycle provides up to 100 minutes of drying time at high heat for regular and permanent press items.

When drying permanent press items, turn the cycle selector to 40-50 minutes. This is the average time needed to dry most loads of permanent press items.

### Delicates-Low Heat

 
This cycle provides up to 60 minutes of drying time at low heat for knits and delicates, followed by a 20-minute Air Fluff (no heat) setting.

The **AIR FLUFF** setting within the Delicates-Low Heat cycle provides up to 20 minutes of tumbling without heat. Use Air Fluff to freshen clothing, pillows or blankets or to dust draperies. Heat-sensitive items such as plastics, foam rubber or similarly textured rubber-like materials or items containing feathers or down should be dried **only** with the Air Fluff setting.

## Energy Saving Tips

- Keep the lint screen clean and exhaust the dryer correctly.
- Sort laundry properly and select proper temperature and cycle settings. Choose an automatic dry cycle whenever possible for accurate drying time.
- Dry only full loads. Single items and small loads usually take longer to dry.
- Avoid overloading, adding wet items to a partially dry load, and overdrying.
- Dry one load after another to take advantage of a warm dryer.
- Opening the door needlessly causes warm air to escape, which prolongs drying time.
- If possible, use the dryer on low humidity days.
- Install the dryer in an area where the room temperature is at least 45°F (7°C).

# WASHER OPERATING INSTRUCTIONS

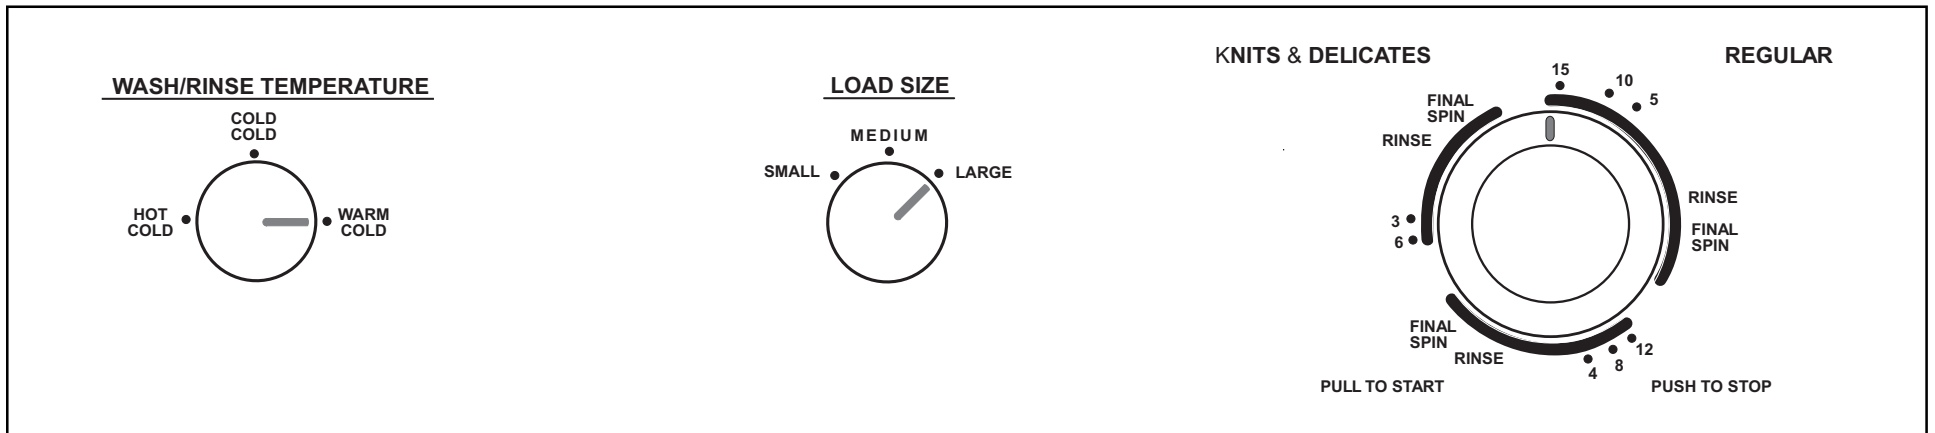

## Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir la dirección que se incluye a continuación. Solicite la P/N 134040900.

Spanish Owner's Guides  
Electrolux Home Products  
P. O. Box 212378  
Augusta, GA 30917

## Before Operating Your Washer

**Read your Owner's Guide.** It has important safety and warranty information. It also has many suggestions for best washing results.

**⚠ WARNING** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your Owner's Guide before operating this appliance.

## Operating Steps

**Read Washing Procedures in your Owner's Guide.** It explains these operating steps in detail.

1. Sort laundry into loads that can be washed together.
2. Prepare items for washing.
3. Pretreat stains and heavy soil.
4. Add the measured amount of detergent to wash tub.
5. If desired, add diluted liquid bleach to Bleach Dispenser.
6. Add laundry load to wash tub.
7. If desired, add liquid fabric softener to the Fabric Softener Dispenser.

8. Set cycle selector and washer controls according to type, size, and soil level of each load.

9. Close lid and pull cycle selector knob to start washer.

 
10. Remove items at end of cycle. Wait about 1 minute for safety lid lock to release.

---

## Cycle Selection

**Always follow instructions on fabric care labels.**

The Regular, Perm Press and Knits & Delicates cycles provide a spray rinse during the first spin, followed by a deep rinse and final spin.

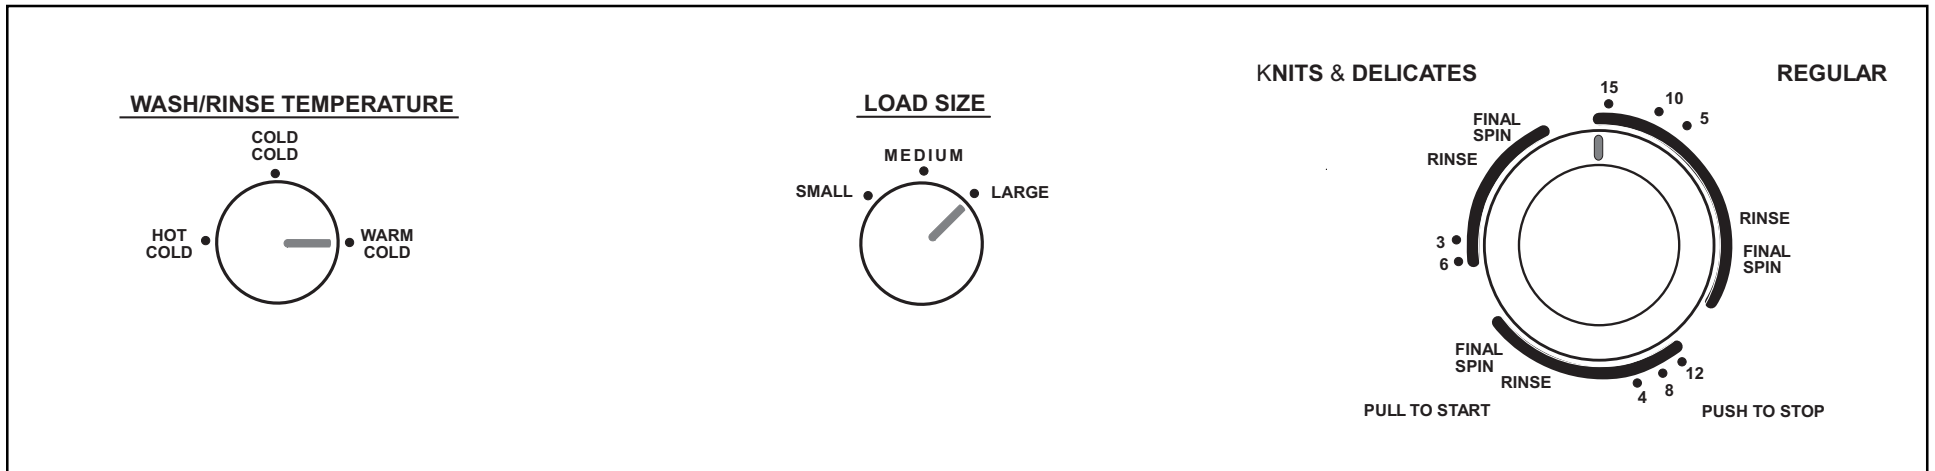

## Cycle Selection (continued)

### Regular Cycle

Provides up to 15 minutes of normal agitation followed by a fast spin for most fabrics.

### Perm Press Cycle

Provides up to 12 minutes of normal agitation followed by a fast spin for cottons and blends with a no-iron finish.

### Knits & Delicates Cycle

Provides up to 6 minutes of gentle agitation followed by a slow spin for knit and delicate items.

## Controls

**Always follow instructions on fabric care labels.**

**LOAD SIZE** sets the amount of wash and rinse water for the wash load. Select a water level appropriate for the load size. There should be enough water for items to move freely.

**WASH/RINSE TEMPERATURE** sets the water temperatures for washing and rinsing. Select wash water temperature according to fiber content and soil level of the load, and type of detergent used. A cold water rinse saves energy and reduces wrinkling.

The following chart suggests wash/rinse temperatures for basic fabric types.

<u>Fabric Type</u>	<u>Wash/Rinse Temperature</u>
Heavily soiled white/colorfast cotton, perm press	Hot/Cold
Lightly soiled white/colorfast cotton, perm press	Warm/Cold
Noncolorfast fabrics, knits, delicates	Cold/Cold
Washable woolens	Warm/Cold

## Energy Saving Tips

- Wash full loads. Oversize loads use extra energy. Undersize loads waste energy.
- When small wash loads cannot be avoided, use lower water levels.
- Select the appropriate cycle and time for each load. Shorten wash times for lightly soiled loads.
- To reduce drying time, select a fast spin speed to remove more water from heavy items such as towels and jeans.
- Use warm water to wash most loads. Limit hot water washes to heavily soiled and white loads. Use cold water for lightly soiled items and rinsing.
- Operate the washer in early morning and late evening when utility demands are low.
- Follow proper laundry procedures to avoid rewashing.