Electrolux

PERFORMANCE DATA NO LOAD & NO DOOR OPENINGS AT 37°/0° CONTROL SETTING				
Variable Speed Compressor	65°F (18°C) Ambient 90°F (32°C) Ambi			
Operating Time	32 to 40%	100%		
Freezer Temperature	-6° to 6° F -21° to -14° C	-6° to 6° F -21° to -14° C		
Refrigerator Temperature	33° to 46° F 0.5° to 8° C	33° to 46° F 0.5° to 8° C		
Low Side Pressure (cut-in)	5 to 12 psig 34 to 83 kPa	N/A		
Low Side Pressure (cut-out)	-2 to 2 psig -14 to 14 kPa	-2 to 2 psig -14 to 14 kPa		
High Side Pressure	85 to 95 psig 120 to 135 psi 586 to 655 kPa 827 to 931 kPa			
Wattage	40 to 55	60 to 70		
Amps (running)	.5 to 1.1 .7 to .9			
Base Voltage	115 vac (127 vac max)			
DEFROST SPECIFICATIONS				

DEFROST	SPECIFICATIONS
---------	----------------

Cabinet Size	Thermostat		Heater	
Cabinet Size	Cut-in Cut-out	Watts	Ohms	
23' SD, 28' SD, 23' CD	25° F (-4° C)	47° F (8° C)	500	26

Electronic Timer - (ADC) Defrost 24 minutes every 6-96 hours of compressor run time.

` '	,	•			
CONDENSER FAN MOTOR					
Watts	RPM	Amps			
3.1 (Energy Star, some models)	1100 CW Opposite Shaft 0.03 Running				
ICE MAKER SPECIFICATIONS					
Electrical	115 vac (127 vac max)				
Thermostat	Opens at 48° F (9° C), Closes at 15° F (-9° C)				
Heater Voltage	85 vac				
ICE MAKER CONNECTOR PLUG CONNECTIONS					
Wire Number	Wire Color	Connects to:			
1	Green/Yellow	Ground			
2	Yellow	Water Valve			

Black

Light Blue

3

SERVICE DATA SHEET - 242046700

FREEZER ICE MAKER - AUTOMATIC DEFROST BOTTOM FREEZER - R134a

\rightarrow

IMPORTANT SAFETY NOTE

The information provided herein is designed to assist qualified repair personnel only. Untrained persons should not attempt to make repairs due to the possibility of electrical shock. Disconnect power cord before servicing this appliance.

IMPORTANT

If any green grounding wires are removed during servicing, they must be returned to their original position and properly secured.



CAUTION

All electrical parts and wiring must be shielded from torch flame. DO NOT allow torch to touch insulation; it will char at 200°F and flash ignite (burn) at 500°F. Excessive heat will distort the plastic liner.



NOTE

This product comes equipped with an Adaptive Defrost Control (ADC). To activate manual defrost, simultaneously press and hold the Fresh Food up (+) and Fresh Food down (-) keys for 5 seconds. A "d" in the freezer temperature window and "F" in the refrigerator temperature window will display when the heater is activated. To deactivate manual defrost, simultaneously press and hold the Fresh Food up (+) and Fresh Food down (-) keys for 5 seconds. A "d" and "F" will be displayed until the defrost cycle is complete.

H

Line

Neutral

IMPORTANT

PLEASE RETURN THIS SHEET TO IT'S ORIGINAL LOCATION

Test Cycling

Remove cover by inserting screwdriver in notch at bottom and prying cover from housing. Use screwdriver to rotate motor gear counterclockwise until holding switch circuit is completed. All components of ice maker should function to complete the cycle.

Water Fill Volume

The water fill adjustment screw will change the fill time. One full turn is equal to 20cc (.68 oz.). The correct fill is 102 to 130cc (3.4 to 4.3 oz.). When a water valve is replaced, the fill volume must be checked.





