


PERFORMANCE DATA NO LOAD & NO DOOR OPENINGS AT 37°/0° CONTROL SETTING				
Type A with Run / Start Capacitor	65°F (18°C) Ambient		90°F (32°C) Ambient	
Operating Time	90 to 100%		100%	
Freezer Temperature	-5° to 2°F (-20° to -17°C)		-1° to 3°F (-18° to -16°C)	
Refrigerator Temperature	34° to 39°F (1° to 4°C)		34° to 39°F (1° to 4°C)	
Low Side Pressure	-2 to 6 psig (-14 to 41 kPa)		-2 to 6 psig (-14 to 41 kPa)	
High Side Pressure (last 1/3 cycle)	85 to 105 psig (586 to 724 kPa)		120 to 135 psig (827 to 931 kPa)	
Wattage (last 1/3 cycle)	30 to 50		50 to 70	
Amps (running)	.4 to .8		.7 to .9	
Base Voltage	115 vac (127 vac max)			
DEFROST SPECIFICATIONS				
Cabinet Size	Thermostat		Heater	
	Cut-in	Cut-out	Watts	Ohms
26' & 28' SD, 23' CD	25°F (-4°C)	47°F (8°C)	500	26.5
Electronic Timer - (ADC) Defrost 24 minutes every 6-96 hours of compressor run time.				
CONDENSER FAN MOTOR				
Watts	RPM		Amps	
3.1	1100 CW Opposite Shaft		0.03 Running	
FREEZER ICE MAKER SPECIFICATIONS				
Electrical	115 vac (127 vac max)			
Thermostat	Opens at 48°F ( 9°C), Closes at 15° F ( -9°C)			
Heater Voltage	115 vac			
FREEZER ICE MAKER CONNECTOR PLUG CONNECTIONS				
Wire Number	Wire Color		Connects to:	
1	Green / Yellow		Ground	
2	Yellow		Water Valve	
3	Black		Line	
4	Light Blue		Neutral	

FREEZER ICE MAKER INFORMATION

(Where Applicable)

**Test Cycling:** Remove cover by inserting screwdriver in notch at bottom and prying cover from housing. Use screwdriver to rotate motor gear counterclockwise until holding switch circuit is completed. All components of ice maker should function to complete the cycle.

**Water Fill Volume:** The water fill adjustment screw will change the fill time. One full turn is equal to 20cc (.68 oz.). The correct fill is 102 to 130cc (3.4 to 4.3 oz.). When a water valve is replaced, the fill volume must be checked.

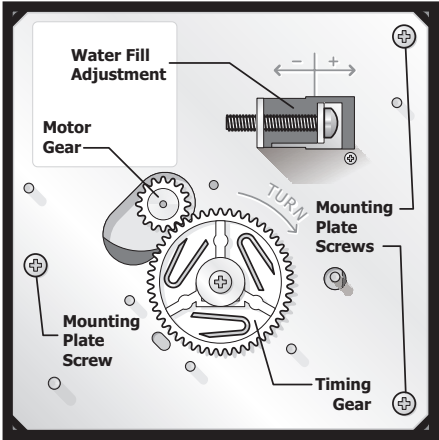

CAUTION

All electrical parts and wiring must be shielded from torch flame. DO NOT allow torch to touch insulation; it will char at 200°F and flash ignite (burn) at 500°F. Excessive heat will distort the plastic liner.

SERVICE DATA SHEET

A00606101

ICE & WATER - AUTOMATIC DEFROST

BOTTOM FREEZER - R134a

IMPORTANT: PLEASE RETURN THIS SHEET TO ITS ORIGINAL LOCATION.

Error Codes			Special Modes			
Display		Interpretation	Mode	Display		Activate/Deactivate (press for up to 10 sec. simultaneously)
FZ	FF			FZ	FF	
--	OP	Open FF Thermistor	Manual Defrost	d	F	+ and - / same to deactivate
OP	--	Open FZ Thermistor	Display / Showroom	77	77	Λ and - / Power-on-Reset (POR)
--	SH	Shorted FF Thermistor	Sabbath	Sb	Sb	V and + / same to deactivate
SH	--	Shorted FZ Thermistor	System Diagnostic	No FF or FZ display, all UI LEDs on.		Λ and V/ + to deactivate
SY	CF	UI to Main Control Board communication failure; on start up	FFIM Diagnostic	Numerical display of first test		Λ and + together to activate / press and hold + to deactivate
SY	CE	UI Main Control Board communication error; after a period in operation	<b>Notes:</b> • Always check for pin back-outs, pinched or damaged wires before replacing components. • Determine whether failure is caused by the component, main control board or wiring. <b>Contact TID before replacing main control board.</b> • Refer to Service Manual for additional information.			
SY	EF	Evaporator Fan Failure				

Fresh Food Ice Maker Diagnostic Mode			
Activate:	Press freezer + and fresh food + temperature pads for up to 10 sec. simultaneously. Press + or - to move forward or backward through tests.		
Deactivate:	Press fresh food + for up to 10 sec. FFIM Diagnostic Mode will automatically deactivate after 5 min. of inactivity. NOTE: Silence alarm.		
Test		To activate test	Passing Result
52C	Ice Maker Thermistor	Activates automatically	FZ display shows temperature sensed by Ice Maker Thermistor. "OP" if open; "SH" if short
55C	Water Valve	Set	Remove ice tray to collect water into a measuring container to measure water fill. If collecting water into ice tray, first perform test 63C to empty ice tray.
57C	Evaporator Fan (FFIM)	Set	"On" on FZ display when fan activated, "OFF" when deactivated.
58C	Ice Level Sensor	Activates automatically	Remove ice bucket. Allow bail arm to drop freely. Pass if no alarm when tray returns to "home" position. Hold bail arm up. Pass if alarm sounds when tray returns to "home" position. This test runs continuously until another test is selected.
63C	Twist Tray	Set	Remove ice bucket. FZ display shows "1" and "GOOD".

Variable Capacity Compressor (VCC) Diagnostics (select models)

If test 38 fails, diagnose as follows:

→ Check at the connector from the power cord harness into the inverter board, located in the machine compartment. (PUR and WHT wires)  
Is Inverter Board receiving 115 VAC from power supply?

no

- Check voltage supply.
- Check and repair power cord harness wiring and connections.

→ Check at Inverter Board on Compressor (BLK and RED wires)  
Is Inverter Board receiving 10-15 VAC and 1-5 VDC from Main Control Board?

yes

→ Remove inverter box from the compressor and check resistance across compressor winding pairs as shown.  
Is resistance across all winding pairs equal?

no

Replace Compressor and Inverter Board.

→ Check at Main Control Board (BLK/WHT and RED/BLK wires)  
Is Main Control Board sending 10-15 VAC and 1-5 VDC to Inverter Board?

no

Replace Main Control Board.

yes

Identify and repair damaged wires or poor connections between Main Control Board and Inverter Board.

→ Check connections from Inverter Board to Compressor  
Are connections from Inverter Board to Compressor intact?

no

Identify and repair damaged wires or poor connections between Inverter Board and Compressor.

yes

Replace Inverter Board

VCC Resistance Check

Check resistance between terminals 1 and 2, 2 and 3, 3 and 1.  
If all resistances are equal, compressor is operative.

Test 2 to 3

Test 1 to 2

Test 3 to 1

System Diagnostic Mode			
Activate:		Press freezer + and fresh food + for up to 10 sec. simultaneously.	
Deactivate:		Press fresh food + for up to 10 sec. Diagnostic Mode will automatically deactivate after 5 min. of inactivity. <b>Note: Silence alarm.</b>	
<ul style="list-style-type: none"><li>• Tests marked with "*" may not be applicable to this unit and will not be displayed in System Diagnostic Mode.</li><li>• Tests displayed in diagnostic mode but not described below are for internal purposes only; advance through.</li><li>• View UI display for "on," "off," "CL," "OP," "SH," "LO," "HI" or numerical results of tests.</li><li>• Listen for operating sounds; feel for heat or air flow as appropriate to determine results of tests.</li></ul>			
Test		To activate test:	Passing result
--	First Screen	--	All LED lights on UI illuminated
--	Second Screen	--	All segments on UI temperature displays illuminated
--	Third Screen	--	Blank UI display, no lights illuminated, no shadowing; "-" and "+" blinking on FF display side to show location.
28	Dispenser Paddle	Press disp. paddle	"on" on UI when depressed; "off" when released
1*	Standard Compressor	Press set	Compressor running when "on"; stopped when "off"
2	Defrost Heater	Press set	Defrost limit switch must be closed; verify "CL" in test 26. Feel for heat from defrost heater when "on". If "OP" in test 26, heater will not activate.
3	FF Light	Press set	With FF door open, FF lights on when "on"; off when "off"
8	Water Valve (Dispenser)	Press set	<b>Be prepared to collect water at dispenser.</b> Water dispenses when "on"; stops when "off"
9	FZ Light	Press set	With FZ door open, FZ lights on when "on", off when "off"
10	Auger Motor	Press set	FF door must be closed. Motor running when "on"; motor stopped when "off"
11	Cube/Crush Solenoid	Press set	FF door must be closed. <b>Do not leave solenoid in activated state.</b> Solenoid activated when "on"; deactivated when "off"
41*	Perfect Temp Drawer (PTD)	Press set	PTD UI illuminated when "on", off when "off"
12*	VCC Condenser Fan	Press set	Fan running when "on"; stopped when "off"
38*	VCC Compressor	Press set	Compressor running when "on"; stopped when "off"
15	Evaporator Fan	Press set	Fan running for <b>minimum of 10 sec.</b> when "LO" or "HI"; stopped when "off". Feedback failure if fan starts but runs less than 10 sec. Listen for speed change from "LO" to "HI".
36	Ice Chute Door	Depress ice chute door or press set	"OP" on UI when manually opened; "CL" when closed. Or, using "set," "OP" on UI when fully opened or "CL" when fully closed by the motor.
22	Damper	Press set	With inspection mirror, observe damper open when "OP"; closed when "CL"
23	FF Door	Open/close FF door	"CL" on UI when door closed; "OP" when open
24	FZ Door	Open/close FZ door	"CL" on UI when door closed; "OP" when open
26	Defrost Limit Switch	Activates automatically	"CL" on UI when closed; "OP" when open
29	FF Thermistor Mid-level	Activates automatically	UI shows temperature sensed by FF thermistor; pass if within 10°F of temperature measured with gauge at mid-level FF thermistor location. "OP-" if open; "SH-" if short
30	FZ Thermistor	Activates automatically	UI shows temperature sensed by FZ thermistor; pass if within 10°F of temperature measured with gage at FZ thermistor location. "OP" if open; "SH" if short
33	Ambient Thermistor @ Main Board	Activates automatically	UI shows temperature sensed at main board; pass if within +20°F/-10°F of temperature measured with gauge at main board location. "OP" if open; "SH" if short
35*	FF Thermistor Upper-Level	Activates automatically	UI shows temperature sensed by upper level FF thermistor; pass if within 10°F of temperature measured with gauge at upper-level FF thermistor location. "OP" if open; "SH" if short
34*	Ambient Thermistor @ UI	Activates automatically	UI shows temperature sensed at UI; pass if within +20°F/-10°F of temperature measured with gauge at UI location. "OP" if open; "SH" if short
46	Humidity Sensor	Activates automatically	"OP" if open, "SH" if short AC Heater System: Displays %RH DC Heater System: "HI" – heater should be on "Lo" – heater should be off %RH is displayed when humidity is between "Lo" and "HI" values; heater could be on or off.
47*	Dispenser Pocket Heater	Press set	AC Heater System: "--" ; test not available DC Heater System: heater on when "on", off when "off"
0-	Firmware Parameters	Press set	Displays digit sequence; record
2-	Main Board Firmware	Press set	Displays digit sequence; record
4-	UI Firmware	Press set	Displays digit sequence; record

IMPORTANT SAFETY NOTE

The information provided herein is designed to assist qualified repair personnel only. Untrained persons should not attempt to make repairs due to the possibility of electrical shock. Disconnect power cord before servicing this appliance.

IMPORTANT

If any green grounding wires are removed during servicing, they must be returned to their original position and properly secured.

