


Models LE6680XK;
LG6681XK



Whirlpool DRYER

Use & Care Guide

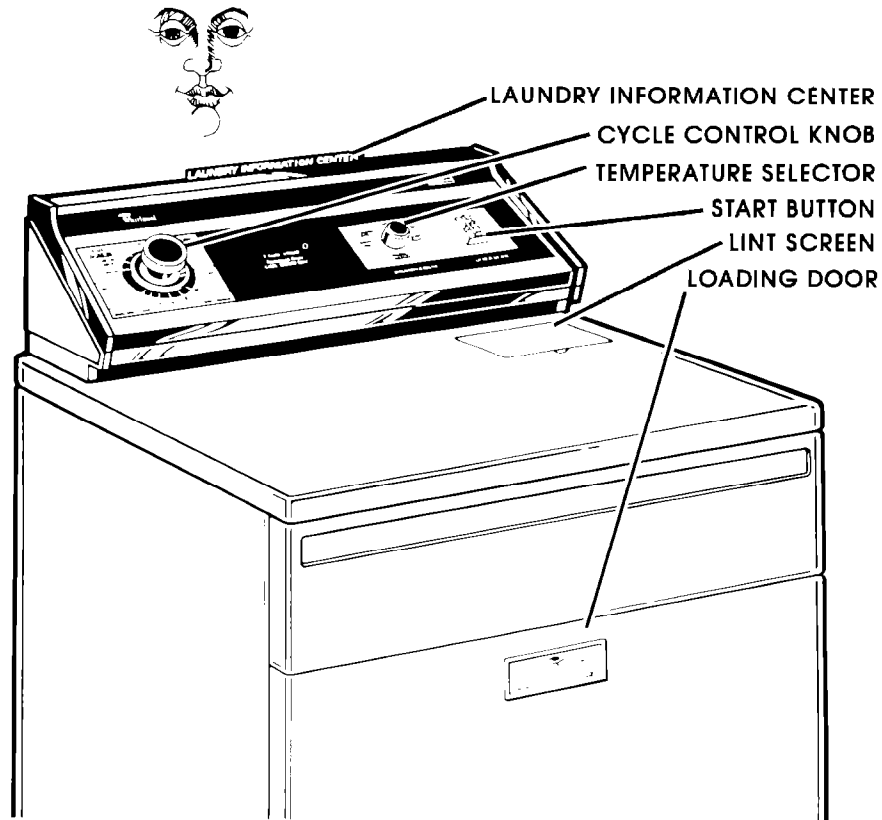

Copy your Model and Serial Numbers here

If you ever need to call for service, you will need to give the Model and Serial Numbers. Your dryer has these numbers on a plate behind the door.

Copy the numbers in these spaces. Keep this book in the Laundry Information Center with your *Dryer Guide*, sales slip and warranty.

Model No _____

Serial No _____

Purchase/Installation Date _____

Before using your Dryer

Please read this booklet to be sure your dryer is installed and used properly. It will help you get the best results and longest life your dryer was designed to give.

You are personally responsible for making sure that your dryer...

- Is installed by a qualified installer.
- Is properly installed and leveled in a well ventilated room on a floor that can support the weight.
- Is connected to the right kind of outlet, electric supply and grounding.
- Is properly connected to fuel and exhaust systems.
- Is used only for jobs normally expected of home clothes dryers.
- Is properly maintained.
- Is out of the weather.
- Is not run where there may be explosive fumes.
- Is not used by children or anyone unable to operate it properly.

Remove the Consumer Buy Guide label before using your dryer. It will be easier to remove.

Wipe out the drum with a damp cloth to remove any dust.

SPECIAL INSTRUCTIONS: See the **Dryer Guide for drying tips, information about permanent press and knits, instructions for drying special items and for things not to be dried in your dryer.**

See the installation instructions for complete information.

FOR YOUR SAFETY

If you smell gas:

1. Open windows
2. Don't touch electrical switches
3. Extinguish any open flame
4. Immediately call your gas supplier.

SAFETY FIRST:

To prevent serious injury, DO NOT allow children to operate, play with, or crawl inside the dryer.

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

SAFETY


Never operate your dryer without replacing all panels (lower front, access or service).

Please read this manual. Follow the instructions to help you get the best drying results. Save the manual for future use.

Contents

Before Using Your Dryer	2
Loading Your Dryer	3
Understanding Your Dryer	3
Lint Screen	3
Using Your Dryer	4
Setting Drying Times	5
Selecting Cycles and Temperature Settings	5
Using the Automatic Settings	5
FLUFF AIR	5
TUMBLE PRESS® Control	6
End-of-Cycle Signal	6
Using the Drying Rack	7
If You Need Service or Help	7
1. Before Calling for Service	7
2. If You Need Service	8
3. If You Have a Problem	8

Loading your Dryer

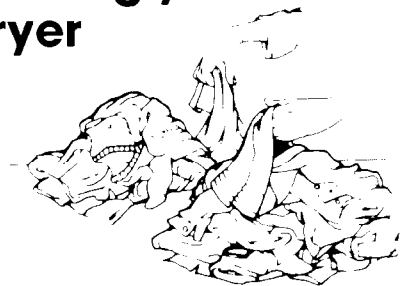

For best drying results and energy savings, sort dryer loads carefully.

Separate loads according to the type of fabric and weight. For example

- Dry heavy fabrics (denims, towels, cottons) separately from light fabrics (permanent press, synthetics)
- Separate lint givers (towels, sweat-shirts, etc.) from lint takers (synthetics, blends, permanent press)
- Keep dark colors and light colors separate.
- Keep colorfast items away from non-colorfast fabrics.

Allow room for items to tumble freely. The load will dry faster with fewer wrinkles.

When drying permanent press, **dry smaller-than-normal** loads for the best wrinkle removal.

Use a mesh bag to hold small items such as baby socks.

Read the Dryer Guide for more hints on sorting and loading.

Understanding your Dryer

This dryer has a setting for **TIMED DRYING**, like most other dryers. But... it also has two automatic cycles: **AUTOMATIC REGULAR** and **AUTOMATIC PERMANENT PRESS**.

These automatic settings allow you to choose *how dry* you want the load instead of *how long* you need to dry it.

For example, in the **AUTOMATIC REGULAR** Cycle, you can set the Cycle Control Knob anywhere between **VERY DRY** and **LESS DRY**. The Cycle Control Knob won't move until the load begins to get as dry as the setting you selected.

The **AUTOMATIC PERMANENT PRESS** Cycle operates very much the same, but it has a longer "cool-down" time at the end. The cool-down is important to help keep wrinkles from setting into permanent press items.

The **TIMED DRYING** Cycle can be used when you want to dry for a set number of minutes, or when you want to damp dry or fluff items without heat.


This *Use & Care Guide* contains suggestions on the way to use your dryer to get the best results and longest useful life from your dryer. Please read it carefully.

Lint Screen

The lint screen is under the lid on top of the dryer.

Clean the lint screen before each load. A screen that's blocked by lint can cause longer drying times.

CAUTION: Do not operate the dryer with the lint screen removed or not securely in place as it may cause overheating, possible damage to fabrics and dryer parts or create a fire hazard.

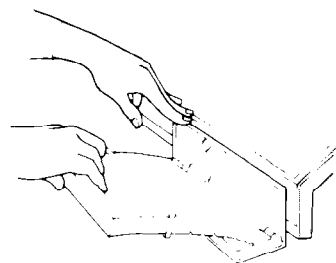

To remove the screen, open the lid and pull the screen straight out. Roll the lint off the screen with your fingers. **DO NOT rinse the screen or wash it.** Wet lint is hard to remove.

When replacing the screen, push it firmly into place. Close the lid.

Using Your Dryer

1. Put the sorted load in the dryer and close the door tightly.
2. Turn the Cycle Control Knob to the cycle you want.

- Use the Automatic Cycles for most loads. Start with the pointer at the middle of an Automatic Cycle. See page 6 for more information.

NOTE: In the Automatic Cycles, the Cycle Control Knob does not keep moving. It starts and stops, depending on the heat and the dryness of the load.

- Use TIMED DRYING for drying a certain number of minutes, or for damp drying, fluffing, or tumbling items without air.

BE CAREFUL NOT TO OVERDRY. Overdrying can cause shrinkage, static cling and damage to some fabrics.

3. Set TEMPERATURE SELECTOR.

- Turn the TEMPERATURE SELECTOR to the drying temperature needed for the load. See page 5 for suggested settings.

4. Push the Start Button.


- Make sure the door is closed and the Cycle Control is set. If the door is opened during the cycle, the dryer will stop. To restart the dryer, close the door and push the Start Button.

5. To stop the dryer:

- Open the door.
- Or, turn the Cycle Control Knob to one of the OFF positions.
- To change the setting while the dryer is running, turn the Cycle Control Knob, either way, so it points to the setting you want.

NOTE: The Cycle Control Knob should point to OFF when the dryer is not being used.

IMPORTANT: To help reduce wrinkling, take the load from the dryer as soon as tumbling stops. This is very important for permanent press, knits and other synthetic fabrics.

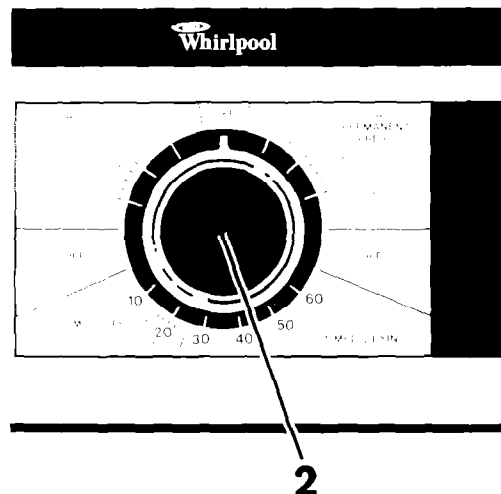


Setting Drying Times

Modern dryers are designed with drying temperatures needed to safely handle modern fabrics. Cool-down times have been added to heat settings. You might notice slightly longer drying times.

The time it takes to dry a load depends on:

- *The kind of fabric, its weight, and the size of the load.* A large load of jeans will take a lot longer to dry than a small load of light synthetics.
- *The amount of moisture in the load.* Towels hold a lot of moisture; synthetics don't. Synthetics dry faster.
- *Temperature of the rinse water.* Cold rinses help save on energy and wrinkles, but a cold load will take slightly longer to dry than a warm one.
- *Amount of lint on the screen.* A full lint screen slows the air flow and can make drying time longer.
- *Temperature around the dryer.* The dryer heats room air. If that air is cold, drying time will be longer.
- *Proper installation and exhaust systems.* For the fastest possible drying time, installing and exhausting your dryer properly is important. See installation instructions.

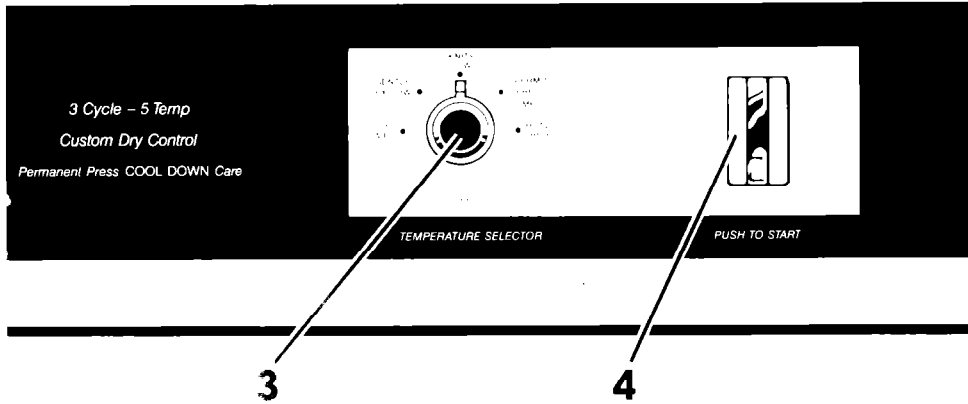

USING YOUR DRYER / SELECTING DRYING TIMES / SELECTING CYCLES AND TEMPS

SELECTING CYCLES AND TEMPERATURE SETTINGS

Choose the correct settings according to the chart below:

TYPE OF LOAD	DRYING CYCLE	TEMPERATURE SELECTOR
COTTONS		
<i>HEAVY</i> – Bedsprings, Mattress pads, quilts, etc.	AUTOMATIC REGULAR	HEAVY – HIGH
<i>MEDIUM AND LIGHTWEIGHT</i> – Shirts, dresses, sheets, diapers, towels, work clothes,	AUTOMATIC REGULAR	HEAVY – HIGH
PERMANENT PRESS		
<i>HEAVY</i> – Work clothes, jackets, raincoats, etc.	AUTOMATIC PERMANENT PRESS	PERMIT PRESS – MED.
<i>MEDIUM WEIGHT</i> – Shirts, uniforms, dresses, slacks, etc.	AUTOMATIC PERMANENT PRESS	PERMIT PRESS – MED.
KNITS		
<i>HEAVYWEIGHT</i> – COTTONS, RAYONS, BLENDS – T-shirts, slacks, polo shirts, etc.	AUTOMATIC PERMANENT PRESS	PERMIT PRESS – MED.
<i>LIGHTWEIGHT</i> – SYNTHETIC FIBERS (polyester, acrylic, etc.) AND BLENDS – Lingerie, blouses, dresses, etc.	AUTOMATIC PERMANENT PRESS	KNITS – LOW
DELICATELY CONSTRUCTED FABRICS – Sheer Curtains (2 or 3 panels)	AUTOMATIC PERMANENT PRESS	GENTLE – EX-LOW
FOAM RUBBER ARTICLES – Pillows, bras, etc.	TIMED DRYING	FLUFF – AIR

To damp dry clothes for ironing, set control in the TIMED DRYING Cycle for 15 to 25 minutes

MIXED LOAD

If you dry a load of various weights of fabrics, select the cycle for the lighter weight fabric. When dryer stops, remove the dry articles and reset the control.


Using the Automatic Settings

With **AUTOMATIC REGULAR** and **AUTOMATIC PERMANENT PRESS**, you select how dry you want the load to be. The dryer is designed to shut off automatically when the load is as dry as the setting.

Use the **AUTOMATIC REGULAR** Cycle to dry most family loads. During the last five minutes of the drying cycle, the load is tumbled without heat. This helps make the load easier to handle.

Use the **AUTOMATIC PERMANENT PRESS** Cycle to dry permanent press knits and other synthetic fabrics. The last 10 minutes of the drying cycle are without heat. This cool-down time helps keep wrinkles from setting in.

For the first few loads, set the Cycle Control Knob to point in the middle between **VERY DRY** and **LESS DRY**.

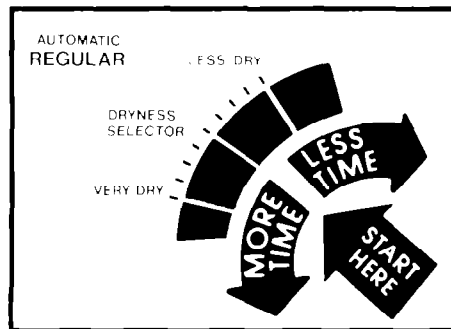

When the dryer stops, feel the items in the load. If they are about how you like them, keep using this setting.

If the items are drier than you like, use a setting nearer **LESS DRY** or **COOL DOWN** the next time you dry a load like that.

If the items are not as dry as you want, use a setting nearer **VERY DRY** the next time you dry a load like that.

After drying a few loads, you will find a favorite setting to use.

FLUFF AIR

This temperature setting is useful for fluffing bedding, pillows and clothing, or dusting drapes. It is also best to use when damp-drying heat-sensitive items.

Drying plastic or rubber items with heat may damage the items or be a fire hazard.

FLUFF AIR should be used for such items as plastic shower curtains or tablecloths, rubber-backed rugs, some pillows, stuffed toys, etc.

- Turn the **TEMPERATURE SELECTOR** to **FLUFF AIR**.
- Turn the Cycle Control Knob to the number of minutes you want in the **TIMED DRYING** Cycle.

TUMBLE PRESS Control

This setting is useful for removing wrinkles from packing in suitcases or closets. **TUMBLE PRESS** will help put them back into their pre-set shape.

- Set Cycle Control Knob to **TUMBLE PRESS**.
- Set **TEMPERATURE SELECTOR** to **PERM T PRESS MED** or **HEAVY HIGH**.



- Push the Start Button.

For best results, **TUMBLE PRESS** only a few items at a time; put them on hangers or fold them as soon as the dryer stops.


End-of-Cycle Signal

A signal will let you know that the dryer has stopped.

The signal is helpful when you are drying permanent press, synthetics and other items that really should be taken out as soon as the dryer stops.

The signal can't be turned off and it is not adjustable.

Using the Drying Rack

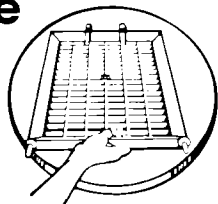

The drying rack lets you dry items that you may not want to tumble, like sneakers, stuffed toys, etc.

1. Fit the rear legs of the rack into the grooves on the back wall of the dryer. Push them in and let the front legs of the rack down on the front of the dryer as shown.
2. Put items to be dried on top of the rack. Allow space between them for air to move around.
3. The rack does not move, but the drum turns. Be sure nothing hangs over the edges of the rack. **Do not hang items** from the rack.
4. Close the door and turn the Cycle Control Knob to a time setting in the TIMED DRYING Cycle.
5. Drying time will depend on how much moisture the items hold. Suggested drying temperatures are given in the following chart.
6. Push the Start Button.
7. To remove the rack, push it back, lift up and pull out.

Items for Rack Drying	Drying Temp. Setting
1. Wool Socks (Block to shape and lay flat on rack.)	KNITS – LOW or PERMIT PRESS – MED
2. Stuffed Toys (Cotton or polyester fiber filled.)	HEAVY HIGH
3. Stuffed Toys (Foam rubber filled.)	FLUFF AIR
4. Sneakers	FLUFF AIR
5. Foam Rubber Pillows	FLUFF AIR

***Drying with heat may damage the foam rubber and will be a fire hazard.**

IMPORTANT: Take the rack out for normal tumble drying.

If You Need Service or Help, We Suggest You Follow These Three Steps:

1. Before calling for service ...

Problems are sometimes caused by simple things you can correct without tools. Check this list before you call for service.

DRYER DOES NOT RUN:

- Is electric power cord plugged in?



- Is the dryer door closed tightly? Your dryer has a switch by the door that shuts off the dryer if the door is opened.

- Did you push the Start Button?



- Check circuit breakers or fuses in the fuse box.

DRYER RUNS BUT DOES NOT HEAT:

- Is the Cycle Control Knob set correctly? (The last 5 minutes are cool-down time in AUTOMATIC REGULAR; the last 10 minutes in AUTOMATIC PERMANENT PRESS are without heat.)
- Is it a gas dryer? See if the gas is turned on. If not, turn the Cycle Control Knob to OFF. Turn on the gas and wait five minutes for the automatic switch to reset. Then try starting it again.
- Is it an electric dryer? Check the circuit breakers or fuses in the fuse box. An electric dryer will have two fuses. If one is blown, the dryer may run, but not heat.

DRYING TIME IS LONGER THAN USUAL:

- Check the lint screen. Remove lint. Keep the screen clean.
- Modern dryers are designed with drying temperatures needed to safely handle modern fabrics. Cool-down times have been added to heat settings. You might notice slightly longer drying times.

2. If you need service :



If your WHIRLPOOL® appliance ever needs service anywhere in the United States, help is just a phone call away ...to your nearest Whirlpool franchised TECH-CARE® service representative.

Whirlpool maintains a nationwide network of franchised TECH-CARE service companies to fulfill your warranty and provide after-warranty service and maintenance to keep your WHIRLPOOL appliance in peak condition.

You'll find your nearest TECH-CARE service company listed in your local telephone book Yellow Pages under Washers - Dryers - Repairing or Servicing. **Should you not find a listing, dial free, the Whirlpool COOL-LINE® service assistance telephone number (800) 253-1301.**

When calling from:

Michigan (800) 632-2243

Alaska &

Hawaii (800) 253-1121

If you move... To make sure that your appliance is correctly installed and to insure its continued satisfactory operation, please telephone your

nearest TECH-CARE® service company for installation or to get the name of a qualified installer. (Installation cost will, of course, be paid by you.)

Helpful hints... You can help your TECH-CARE service representative give you faster service if you include the model and serial number of your appliance when requesting service. Also, retain your sales slip and warranty to verify your warranty status.

Remember... Your TECH-CARE service representative is specially trained in the expert repairing and servicing of your WHIRLPOOL appliances. He can help you maintain the quality originally built into your WHIRLPOOL appliance. So why not take the time, now, to look up his telephone number and jot it down in the space provided on the cover.

3. If you have a problem :

Call Whirlpool Corporation in Benton Harbor at the COOL-LINE service assistance telephone number (see Step 2) or write:

Mr. Stephen E. Upton, Vice President
Whirlpool Corporation
Administrative Center
2000 U.S. 33 North
Benton Harbor, Michigan 49022

If you must call or write, please provide: your name, address, telephone number, type of appliance, brand, model, serial number, date of purchase, the dealer's name, and a complete description of the problem. This information is needed in order to better respond to your request for assistance.



FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance.

FSP replacement parts will fit right and work right because they are made to the same exacting specifications used to build every new Whirlpool appliance.



Benton Harbor, Michigan. Automatic Washers, Clothes Dryers, Freezers, Refrigerator-Freezers, Ice Makers, Dishwashers, Built-in Ovens and Surface Units, Ranges, Microwave Ovens, Compactors, Room Air Conditioners, Dehumidifiers, Central Heating and Air Conditioning Systems.