


# WASHER OPERATING INSTRUCTIONS

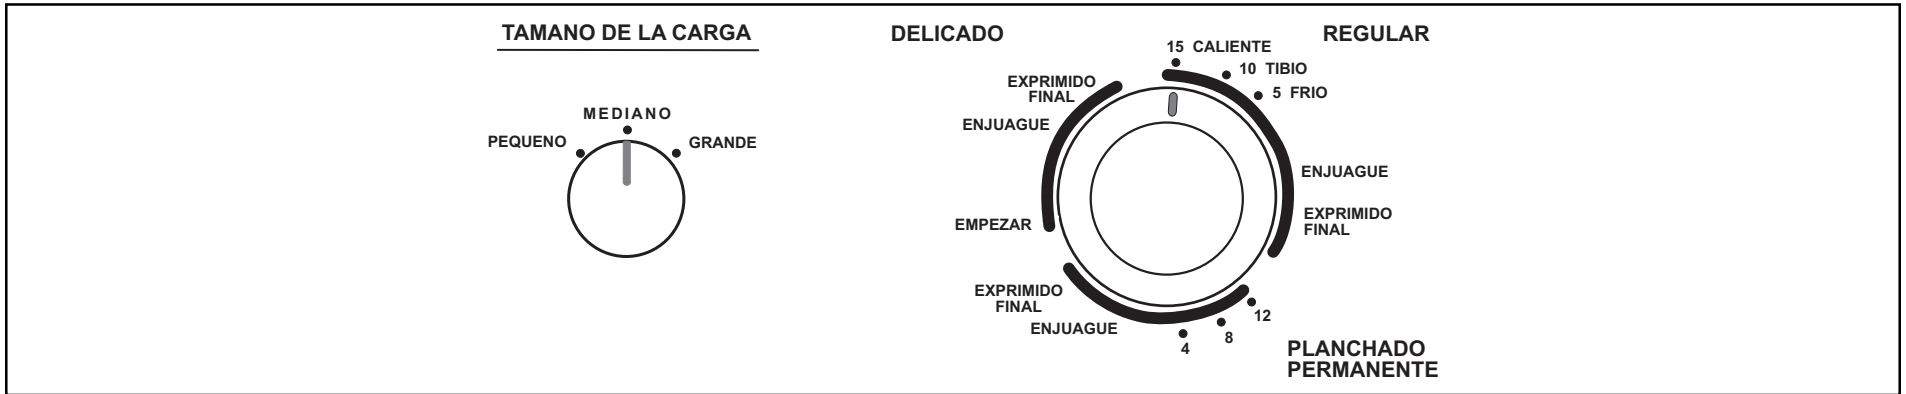

## Before Operating Your Laundry Center

Read your laundry center Owner's Guide. It has important safety and warranty information. It also has many suggestions for obtaining the best washing results.

**⚠ WARNING** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your laundry center Owner's Guide before operating this appliance.

## Operating Steps

- Sort laundry into loads that can be washed together.
- Prepare items for washing.
- Pretreat stains and heavy soil.
- Add the measured amount of detergent to the washer before adding the laundry load.

- If desired, add liquid bleach to the Bleach Dispenser.
  - Add the laundry load to the wash tub.
  - Set the Tamano de la Carga (Load Size) control according to type, size, and soil level of the load. Select Grande (Large), Mediano (Medium), or Pequeño (Small).
  - Push in the cycle selector knob and turn it clockwise to the desired wash cycle. See Cycle Selection for cycle descriptions and Control Settings Chart for suggested cycle settings.
  - Start the washer by closing the lid and pulling out the cycle selector knob. The washer will operate with the lid open; however, the tub will not spin unless the lid is closed.
- To stop the washer, push in the cycle selector knob. To change a cycle, push in the cycle selector knob and turn it clockwise to the desired setting. Pull out the knob to restart the washer.

- If desired, add diluted liquid fabric softener during the final rinse.
- Remove items when the cycle is completed. As a safety measure, the lid will AUTOMATICALLY LOCK during the spin portion of each cycle. The lid will automatically unlock approximately 1 minute after the end of the spin cycle.

## Cycle Selection

For best results, follow the fabric care label directions on items to be washed. Check the Control Settings Chart if the care label is not available.

The Regular, Planchado Permanente(Perm Press), and Delicado (Delicate) cycles provide a spray rinse during the first spin, followed by a deep rinse (enjuague) and a final spin (exprimido final).

## Cycle Selection (continued)

### Regular Cycle

Up to 15 minutes of wash agitation for most fabrics.

- **15 Caliente (Hot)**

15 minutes of wash agitation. A hot water wash and cold water rinse are provided for heavily soiled items.

- **10 Tibio (Warm)**

10 minutes of wash agitation. A warm water wash and cold water rinse are provided for normally soiled items.

- **5 Frio (Cold)**

5 minutes of wash agitation. A cold water wash and cold water rinse are provided for lightly soiled items.

### Planchado Permanente (Perm Press) Cycle

Up to 12 minutes of wash agitation for cottons and blends with a no-iron finish.

- **12** 12 minutes of wash agitation. A hot water wash and cold water rinse are provided for heavily soiled permanent press items.

- **8** 8 minutes of wash agitation. A warm water wash and cold water rinse are provided for normally soiled permanent press items.

- **4** 4 minutes of wash agitation. A cold water wash and cold water rinse are provided for lightly soiled permanent press items.

### Delicado (Delicate) Cycle

Eight minutes of wash/pause action. A warm water wash and cold water rinse are provided for knit and delicate items.


## Control Settings Chart

Locate fabric type and read across guide for suggested wash and rinse temperatures, wash cycle and cycle settings.

**This is only a general guide. For best results, follow fabric care label directions on specific items to be washed.**

Fabric Type	Temperature (Wash / Rinse)		Wash Cycle	Cycle Setting
<b>REGULAR</b> Heavily Soiled Colorfast & White Cotton & Linen	Hot	Cold	Regular	15 hot
Lightly Soiled Colorfast & White Cotton & Linen	Warm	Cold	Regular	10 warm
Noncolorfast Bright Colors All Fabrics	Cold	Cold	Regular	5 cold
<b>PLANCHADO PERMANENTE</b> White or Heavily Soiled	Warm or Hot	Cold	Planchado Permanente	8 warm or 12 hot
Colored or Lightly Soiled	Cold or Warm	Cold	Planchado Permanente	4 cold or 8 warm
<b>DELICADO</b> Knitted Fabrics Delicates	Warm Warm	Cold Cold	Delicado Delicado	Empezar(Start) (8) Empezar(Start) (8)
Washable Woolens	Warm	Cold	Delicado	Empezar(Start) (8)

# DRYER OPERATING INSTRUCTIONS

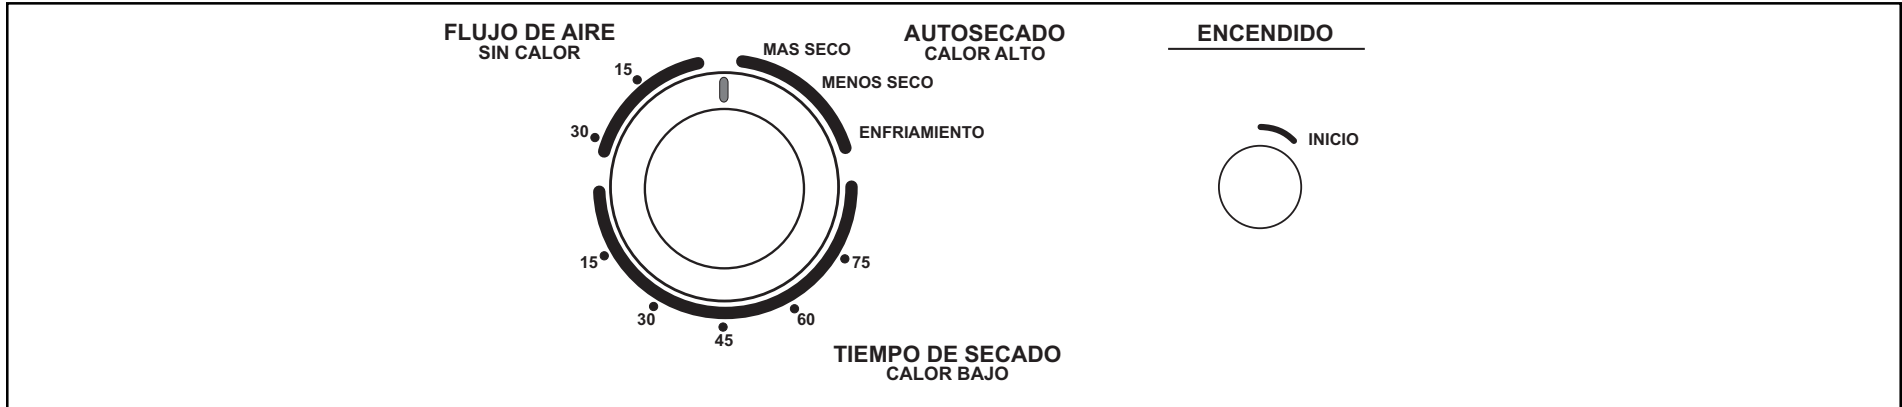

## Before Operating Your Laundry Center

Read your laundry center Owner's Guide. It has important safety and warranty information. It also has many suggestions for obtaining the best drying results.

**⚠ WARNING** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your laundry center Owner's Guide before operating this appliance.

## Operating Steps

1. **Prepare items for drying.**
2. **Check that lint screen is clean and properly in place.**
3. **Load the dryer.** If desired, add a dryer fabric softener sheet.
4. **Close the dryer door.**
5. **Turn cycle selector clockwise to desired setting.**
6. **Start dryer.** Turn the Encendido knob to Inicio, hold for 2 seconds, and release.

7. **At end of cycle, remove items immediately and hang or fold.**
8. **Clean lint screen after every load.**

## Cycle Settings

Turn the cycle selector clockwise to the desired cycle and setting.

Each cycle ends with a cool down period. The heat automatically turns off and the load continues to tumble for 5-10 minutes. This reduces wrinkling and makes items easier to handle during unloading.

Drying time varies depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time.

### AUTOSECADO-CALOR ALTO (AUTO DRY-HIGH HEAT)

is recommended for regular and permanent press items that can be tumble dried at high heat. The Auto Dry-High Heat cycle determines drying time automatically.

For items requiring more drying time, set the cycle selector on MAS SECO (More Dry). For items requiring less drying time, set the cycle selector on MENOS SECO (Less Dry).

This cycle works best with items of similar fabric, weight and construction.

**TIEMPO DE SECADO-CALOR BAJO (TIME DRY-LOW HEAT)** provides up to 90 minutes of drying time at low heat for permanent press, knit and delicate items.

**FLUJO DE AIRE-SIN CALOR (AIR FLUFF-NO HEAT)** provides up to 30 minutes of tumbling without heat. Use Flujo de Aire-Sin Calor (Air Fluff-No Heat) to freshen clothing, pillows or blankets or to dust draperies. Heat-sensitive items such as plastics, foam rubber or similarly textured rubber-like materials or items containing feathers or down should be dried **only** with the Flujo De Aire-Sin Calor (Air Fluff-No Heat) cycle.

**⚠ WARNING** To avoid fire hazard, do not use heat to dry items containing feathers or down, foam rubber, plastics, or similarly textured, rubber-like materials. Use Flujo De Aire-Sin Calor (Air Fluff-No Heat) cycle only.

# Control Settings Chart

Always consult fabric care labels before drying. For items without labels, follow suggested settings below. The suggested drying times are approximate. Actual time needed will vary depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time. Items dried in a dryer operating on a 208 volt circuit instead of a 240 volt circuit require 20% more drying time than listed. **⚠️ WARNING To avoid fire hazard, do not use heat to dry items containing feathers or down, foam rubber, plastics, or similarly textured, rubber-like materials. Use Flujo De Aire-Sin Calor (Air Fluff-No Heat) setting only.**

TYPE OF LOAD	CYCLE SETTING	TIME
Bedspreads, chenille	Autosecado-Calor Alto (Auto Dry-High Heat)	
Blankets Cotton Electric	Autosecado-Calor Alto (Auto Dry-High Heat) <i>Electric blankets can be partially dried in dryer if recommended by manufacturer. Tumble with dry towels to cushion electrical parts. Remove blanket while still damp. Finish drying by hanging across two parallel lines or rods. Block to original dimensions.</i>	
Wool Synthetics or blends	Follow label instructions. Place on flat surface and gently stretch to block to original dimensions. Tiempo De Secado (Time Dry-Low Heat)	30-45 minutes; check frequently
Cottons, linens Full dry Damp dry, for ironing	Autosecado-Calor Alto (Auto Dry-High Heat) Tiempo De Secado (Time Dry-Low Heat)	30 minutes; check frequently
Curtains Cottons or cotton blends Sheer synthetics Heavy synthetics To freshen all types	<i>Dry in small loads. Remove as soon as dryer stops.</i> Autosecado-Calor Alto (Auto Dry-High Heat) Tiempo De Secado (Time Dry-Low Heat) Tiempo De Secado (Time Dry-Low Heat) Flujo De Aire -Sin Calor (Air Fluff-No Heat)	30 minutes 30-45 minutes 15 minutes
Delicates - sheer lingerie and blouses, nylon items, washable silk and washable rayon	Tiempo De Secado (Time Dry-Low Heat)	15-30 minutes; check frequently
Glass fiber	<i>Do not dry glass fiber items in dryer unless recommended by manufacturer. Small glass particles left in the drum can be picked up by the next load and may cause skin irritation.</i>	
Items containing elastic	Tiempo De Secado (Time Dry-Low Heat) <i>Remove while elastic is still damp.</i>	30-45 minutes
Items to be fluffed, freshened or dusted	Flujo De Aire -Sin Calor (Air Fluff-No Heat)	15 minutes
Knits Cotton or cotton blends Synthetics Wool	Tiempo De Secado (Time Dry-Low Heat) Tiempo De Secado (Time Dry-Low Heat) <i>See manufacturer's care label.</i>	30-45 minutes 30 minutes; check frequently
Permanent Press 100% cotton 100% synthetics and blends	<i>Remove immediately. Hang or fold.</i> Tiempo De Secado (Time Dry-Low Heat) Tiempo De Secado (Time Dry-Low Heat)	30-45 minutes 30-45 minutes
Pillows	See <b>⚠️ WARNING</b> above. <i>Add several dry bath towels to absorb excess moisture.</i> Flujo De Aire -Sin Calor (Air Fluff-No Heat)	30 minutes
Plastics	See <b>⚠️ WARNING</b> above. <i>Add several dry bath towels to absorb excess moisture.</i> Flujo De Aire -Sin Calor (Air Fluff-No Heat)	15 minutes
Rugs (4'x6')	See <b>⚠️ WARNING</b> above. <i>See manufacturer's care label.</i>	
Slipcovers	<i>Select temperature and cycle setting according to fabric. Remove when slightly damp.</i>	
Table linens, damp dry for ironing	Tiempo De Secado (Time Dry-Low Heat)	15-30 minutes
Tennis shoes	<i>Always consult care labels when drying tennis shoes. Improper care can permanently damage some shoes. Air dry or dry on drying rack (available on some models).</i>	
Wrinkled, but not soiled, permanent press or knit items	Tiempo De Secado (Time Dry-Low Heat) <i>Remove immediately. Hang or fold.</i>	15 minutes