

# Instruction Sheet


## for Alpha Center User Interface & Knob Kit

**Kit Contains:**


- 1 Center User Interface (UI)
- 1 Knob
- 1 Instruction Sheet

**Tools Needed:**

- 1/4" socket
- ESD static strap


<b>⚠ WARNING</b>	
	<p><b>Electrical Shock Hazard</b></p> <p>Disconnect power before servicing. Replace all parts and panels before operating.</p> <p>Failure to do so can result in death or electrical shock.</p>

1. Unplug washer/dryer or disconnect power.
2. While handling the PCB, always wear ESD static strap with alligator clip grounded.
3. Remove top panel and console from machine.
4. Remove connections from Center UI. See *Figure 1*.

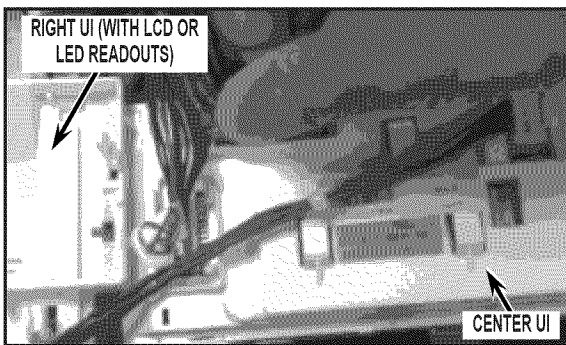

**FIGURE 1**

5. Remove the Right UI (with LED or LCD readouts). See *Figure 2*.

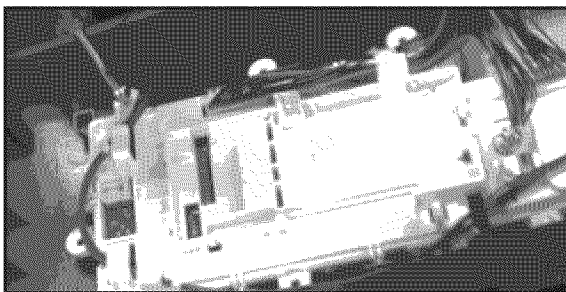

**FIGURE 2**

6. Replace Center UI by removing and reusing 1/4" screws. See *Figure 3*.



**FIGURE 3**

7. Reinstall the Right UI (with LED or LCD readouts).


**NOTE:** Ensure that there is no dust or lint on the screen on the console or UI before reassembly.

8. Reattach connections to Center UI.
9. Replace console and top panel on washer/dryer.
10. Fold one page of this sheet in half 4 times and use as a spacer to maintain gap between knob and console when assembling knob to Center UI shaft. See *Figure 4*.



**FIGURE 4**

11. Replace all parts and panels.

<b>⚠ WARNING</b>	
	<p><b>Electrical Shock Hazard</b></p> <p>Plug into a grounded 3 prong outlet.</p> <p>Do not remove ground prong.</p> <p>Do not use an adapter.</p> <p>Do not use an extension cord.</p> <p>Failure to follow these instructions can result in death, fire, or electrical shock.</p>

12. Plug in washer/dryer or reconnect power.