

Installation Instructions



ELECTRIC BUILT-IN

SELF CLEANING SINGLE
AND DOUBLE OVEN MODELS

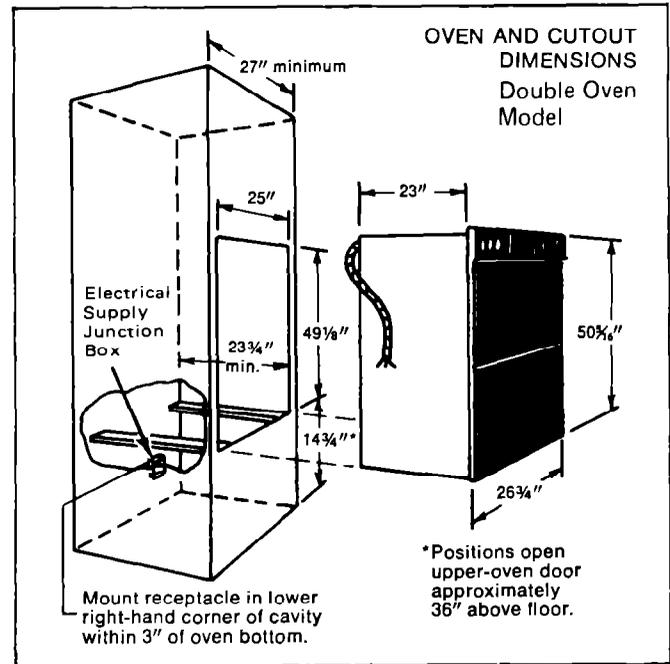
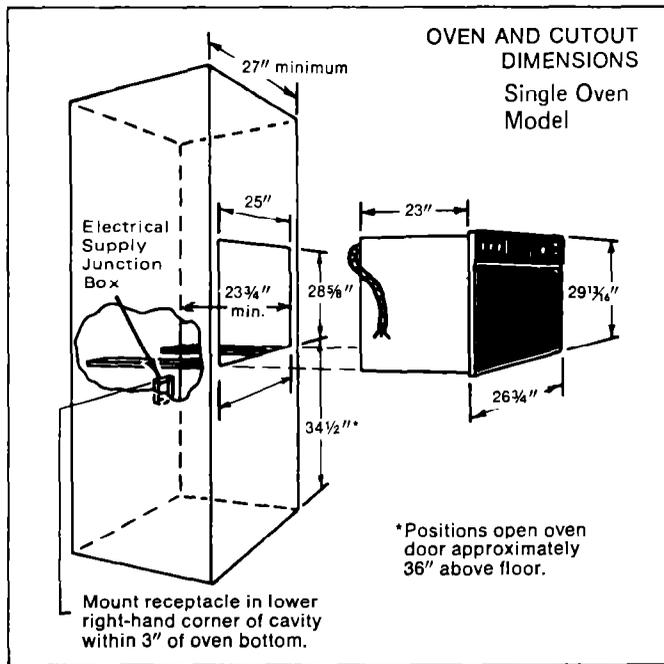


FIGURE 1

1. CARPENTRY

Refer to Figure 1 for the dimensions of the oven and the space necessary to receive the oven. The oven support surface may be solid plywood or similar material but the contact surface must be level from side to side and from front to rear.

2. ELECTRICAL REQUIREMENTS

OBSERVE ALL GOVERNING CODES AND ORDINANCES

SAVE THESE INSTRUCTIONS FOR THE LOCAL ELECTRICAL INSPECTOR'S USE.

A. A three-wire or four-wire single phase 120/240 Volt, 60 Hz AC only electrical supply (or three-wire or four-wire 120/208 Volt if specified on nameplate) is required on a separate circuit fused on both sides of the line (time-delay fuse or circuit breaker is recommended). DO NOT fuse neutral. The fuse size must not exceed the circuit rating of the appliance specified on the nameplate.

NOTE: Wire sizes and connections must conform with the fuse size and rating of the appliance in accordance with the National Electrical Code and local codes and ordinances. Do not use an extension cord.

B. The appliance should be connected to the fused disconnect (or circuit breaker) box through flexible armored or non-metallic sheathed cable. The flexible armored cable extending from the appliance should be connected directly to the junction box. The junction box should be located as shown in Figure 1 so as much slack as possible remains in the cable between the box and the appliance so it can be moved if servicing is ever necessary.

C. A suitable strain relief must be provided to attach the power supply cord to the junction box.

3. ELECTRICAL CONNECTION

It is the personal responsibility and obligation of the customer to contact a qualified installer to assure that the electrical installation is adequate and is in conformance with the National Electrical Code and local code ordinances.

ELECTRICAL GROUND IS REQUIRED ON THIS APPLIANCE.

This appliance is equipped with copper lead wires. If connection is made to aluminum house wiring, use only special connectors which are approved for joining copper and aluminum wires in accordance with the National Electrical Code and local codes and ordinances.

This appliance is manufactured with a white neutral power supply wire and a frame connected green ground wire.

6. CHECKING THERMOSTAT

A. Single Oven Model

Preheat—Turn the Oven Selector Knob to "Preheat" and set the Oven Temperature Knob to 350°F. Both the Upper and Lower Oven Elements should become red and the Signal Light should glow. When the oven reaches the desired temperature, the light will go out.

Bake—After the oven is "Preheated" set the Oven Selector Knob to "Bake". The Oven Selector Light is designed to turn on and off during baking as the Bake Element cycles on and off.

Broil—Turn the Oven Selector Knob to "Broil" and set the Oven Temperature Knob to "Broil". The Top Element should become red and the signal light should glow.

B. Double Oven Model

Upper Oven: Use the instructions for checking the Preheat, Bake, and Broil covered under Single Oven Model.

Lower Oven:

Bake—Turn the Lower Oven Selector Knob to "Bake". Turn the Lower Oven Temperature Knob to 350°F. The Lower Oven Element should become red and the Signal Light should glow. When the oven reaches the desired temperature, the light will go out. The Oven Signal Light is designed to turn on and off during baking as the Bake Element cycles on and off.

Broil—Turn the Lower Oven Selector Knob to "Broil" and set the Lower Oven Temperature Knob to "Broil". The Top Element should become red and the Signal Light should glow.

CLOCK-ALL MODELS


Refer to the Use and Care Guide for proper operation of the Clock.

SERIAL PLATE LOCATION

The Serial Plate is located on the front frame at the bottom center of the Oven Door (Upper Oven on Double Oven model).


BEFORE YOU CALL FOR SERVICE

Check to make sure the house fuses or circuit breaker for your oven are not blown or open.

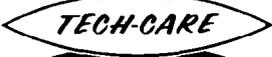
In the event your WHIRLPOOL appliance should need service, call the dealer from whom you purchased the appliance or a WHIRLPOOL franchised TECH-CARE® service company. He is in the Yellow Pages of your telephone directory listed under Washers, Dryers - Repairing or Servicing. You can also obtain his name and number by dialing, free, within the continental United States the Whirlpool COOL-LINE® Service (800) 253-1301 [when calling from Michigan, call (800) 632-2243]. Dial just as you normally dial long distance. A special operator will tell you the name and number of your nearest Whirlpool TECH-CARE service outlet. During normal working hours, Whirlpool consultants at this same number will also answer any questions about operating or maintaining your appliance not covered in your Operating Instructions.

Learn the benefits of using TECH-CARE service for maintaining the quality originally built into your WHIRLPOOL appliance.

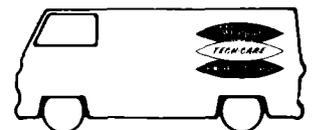

WHIRLPOOL CORPORATION, BENTON HARBOR, MICHIGAN 49022