


# OPERATING INSTRUCTIONS

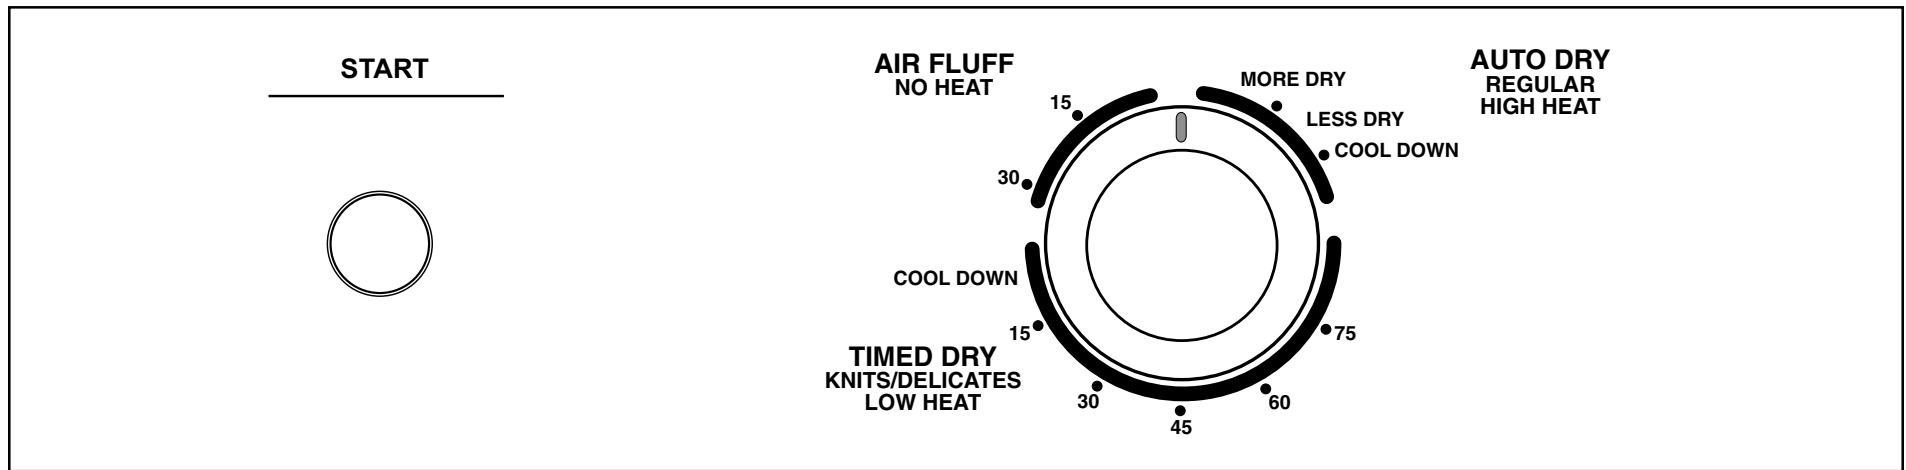

## Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir la dirección que se incluye a continuación.  
Solicite la P/N 131920800.

Spanish Owner's Guides  
Frigidaire Company  
P. O. Box 212378  
Augusta, Georgia 30917

## Before Operating Your Dryer

**Read your dryer Owner's Guide.** It has important safety and warranty information. It also has many suggestions for best drying results.

**⚠ WARNING** To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** in your dryer owner's guide before operating this appliance.

## Operating Steps

**Read Drying Procedures in your Owner's Guide.** It explains these operating steps in detail.

1. **Prepare items for drying.**
2. **Check that lint screen is clean and in place.**
3. **Load the dryer.** If desired, add a dryer fabric softener sheet.
4. **Close the dryer door.**
5. **Turn cycle selector clockwise to desired setting.**
6. **Start dryer.** Push Start button for 2 seconds or turn the START knob clockwise to ON and hold for 1-2 seconds and release.
7. **At end of cycle, remove items immediately and hang or fold.**
8. **Clean lint screen after every load.**


## Cycle Selection

**Always follow directions on fabric care labels.**

**⚠ WARNING** To avoid fire hazard, do not use heat to dry items containing feathers or down, foam rubber, plastics, or similarly textured, rubber-like materials. Use Air Fluff-No Heat setting only.

Turn cycle selector clockwise to desired cycle and setting. Each cycle ends with a cool down period. The heat automatically turns off and the load continues to tumble for 5-10 minutes. This reduces wrinkling and makes items easier to handle during unloading.

Drying time varies depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage can also affect drying time.  
*(continued, reverse side)*

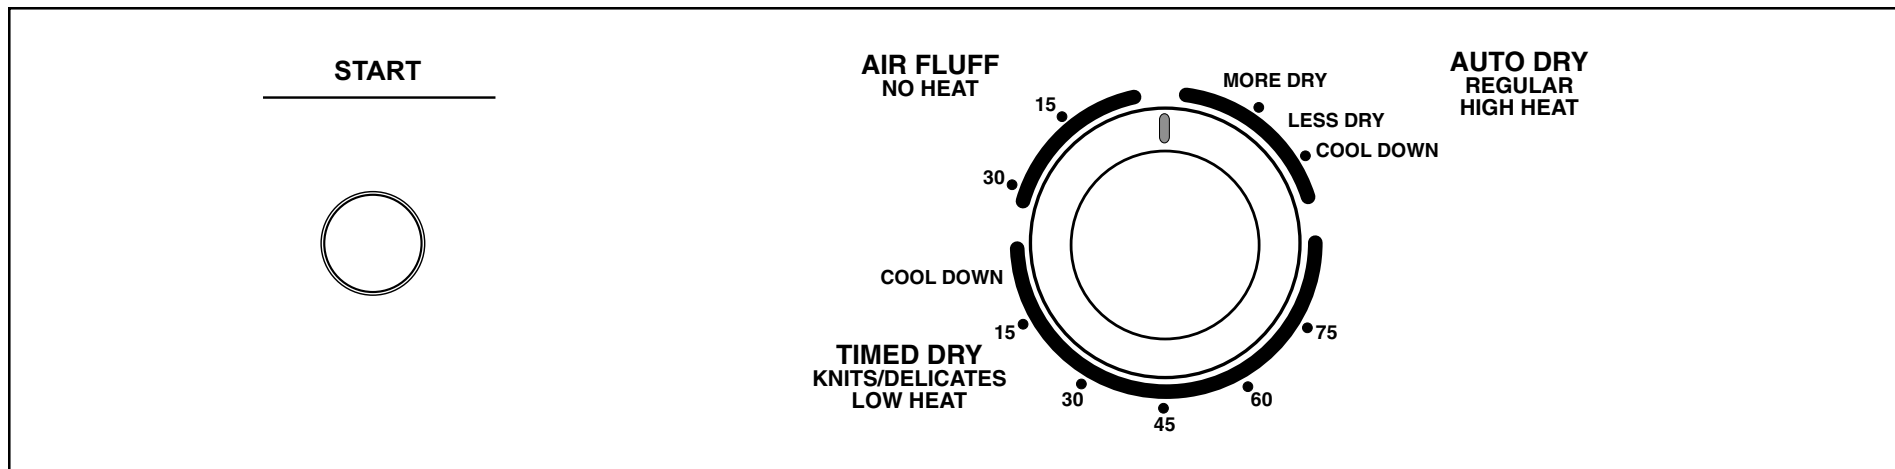

## Cycle Selection (continued)

### Auto Dry Regular-High Heat

This cycle is recommended for regular and permanent press items that can be tumble dried at high heat. Drying time is determined automatically.

- For items requiring more drying time, set cycle selector on **MORE DRY**.
- For items requiring less drying time, set cycle selector on **LESS DRY**.

When the items are dry, the heat automatically turns off and the load is tumbled for approximately 10 minutes without heat.

### Timed Dry Knits/Delicates-Low Heat

This cycle provides up to 75 minutes of drying time at low heat for permanent press, knit and delicate items.

### Air-Fluff No Heat

This cycle provides up to 30 minutes of tumbling without heat. Use Air Fluff to freshen clothing, pillows or blankets or to dust draperies. Heat-sensitive items such as plastics, foam rubber or similarly textured rubber-like materials or items containing feathers or down should be dried **only** with the Air Fluff cycle.

## Energy Saving Tips

- Keep the lint screen clean and exhaust the dryer correctly.
- Sort laundry properly and select proper temperature and cycle settings. Choose an automatic dry cycle whenever possible for accurate drying time.
- Dry only full loads. Single items and small loads usually take longer to dry.
- Avoid overloading, adding wet items to a partially dry load, and overdrying.
- Dry one load after another to take advantage of a warm dryer.
- Opening the door needlessly causes warm air to escape, which prolongs drying time.
- If possible, use the dryer on low humidity days.
- Install the dryer in an area where the room temperature is at least 45°F (7°C).