
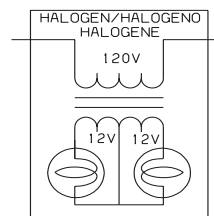


COLORS / COLOR / COULEURS

- BK - BLACK/NEGRO/NOIR
- W - WHITE/BLANCO/BLANC
- O - ORANGE/NARANJA/ORANGE
- BR - BROWN/MORENO/BRUN
- PK - PINK/ROSA/ROSE
- V - VIOLET/VIOLETA/VIOLET
- G - GREEN/VERDE/VERT
- R - RED/ROJO/ROUGE
- Y - YELLOW/AMARILLO/JAUNE
- BL - BLUE/AZUL/BLEU
- BR/W - BROWN/WHITE // MORENO/BLANCO // BRUN/BLANC
- BL/W - BLUE/WHITE // AZUL/BLANCO // BLEU/BLANC

CODE/CODIGO/CODE	GAUGE/MED. CALIBRE	TEMP. °C	STYLE	CSA	UL
1	18	125	CL1251	3173	
2	16	125	CL1251	3173	
3	14	125	CL1251	3173	
4	12	125	CL1251	3173	
5	18	150	EXL-150	3321	
6	16	150	EXL-150	3321	
7	14	150	EXL-150	3321	
8	12	150	EXL-150	3321	
9	10	150	EXL-150	3321	
10	18	200	SEW-1	3122	
11	16	200	SEW-1	3122	
12	12	250		3252	
13	16	250		3252	
14	20	150	EXL-150	3321	
15	8	150	EXL-150	3321	
16	8	60			
17	10	60			

EXAMPLE/EJEMPLO/EXAMPLE: (R-8)*
 * WHEN USING 4000 W. BROIL ELEMENT
 * CUANDO SE USA 4000 W. ELEMENTO DE ASADO
 * QUAND UTILISE AVEC 4000 W. ELEMENT GRILLAGE

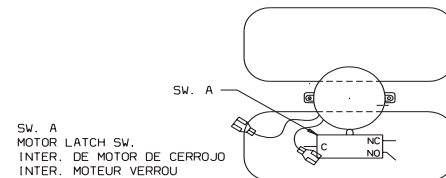

CAUTION: DISCONNECT POWER BEFORE SERVICING UNIT.
 ATENCION: CORTAR EL CORRIENTE ANTES DE REALIZAR EL MANTENIMIENTO DEL ELECTRODOMESTICO.
 ATTENTION: COUPEZ L'ALIMENTATION AVANT D'EFFECTUER LA REPARATION.