


NOTES:

1. CIRCUIT SHOWN WITH ALL CONTROLS SET TO OFF OVEN DOOR CLOSED AND UNLOCKED.
2. LC X DENOTES LOWER CHASSIS 9-CIRCUIT CONNECTOR PIN NUMBER.
3. CP X DENOTES CONTROL PANEL 9-CIRCUIT CONNECTOR PIN NUMBER.
4. UP X DENOTES CONTROL PANEL 9-CIRCUIT CONNECTOR PIN NUMBER.
5. COMPONENTS WITH † DO NOT APPEAR ON ALL MODELS.

DIAL POSITION	SELECTOR SWITCH CONTACTS				
	B-BR	B-F	CL-F	S-T1	S-BA
OFF					
BAKE		X			X
TIME BAKE		X		X	
CLEAN			X		
BROIL	X				X

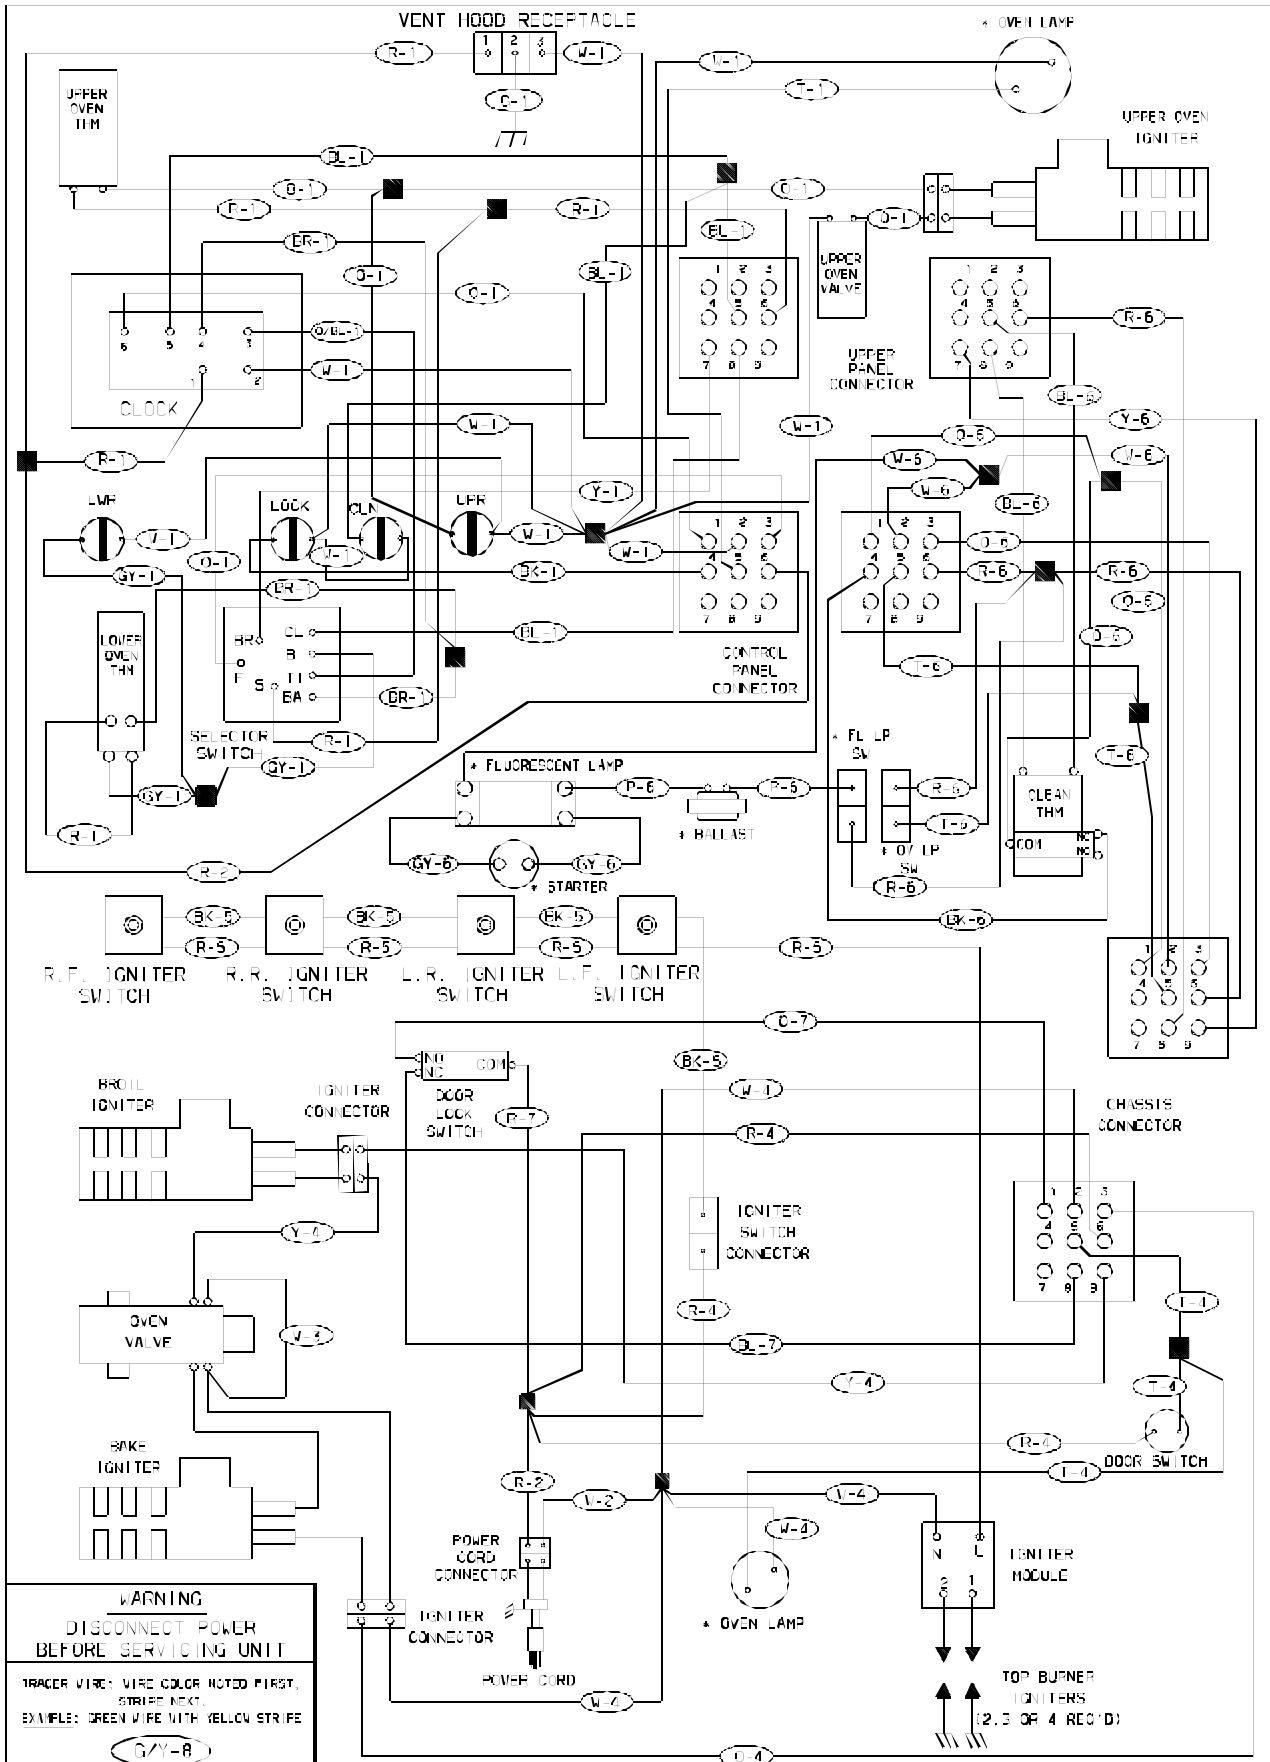

WARNING
 DISCONNECT POWER
 BEFORE SERVICING UNIT

TRACER WIRE: WIRE COLOR NOTED FIRST,
 STRIPE NEXT.
 EXAMPLE: GREEN WIRE WITH YELLOW STRIPE
 (G/Y-B)

COLOR CODE

- BK. - BLACK
- BL. - BLUE
- BR. - BROWN
- C. - COPPER
- G. - GREEN
- GY. - GREY
- O. - ORANGE
- P. - PINK
- PR. - PURPLE
- R. - RED
- T. - TAN
- V. - VIOLET
- W. - WHITE
- Y. - YELLOW

WIRE	GAGE	TEMP °C	UL STYLE	WIRE	GAGE	TEMP °C	UL STYLE
4	18	125	3173	7	16	200	3071
3	20	125	3173	6	16	150	3321
2	16	105	1015	5	20	150	3321
1	18	105	1015				