
# Electrolux Installation Instructions for Side-By-Side Refrigerator

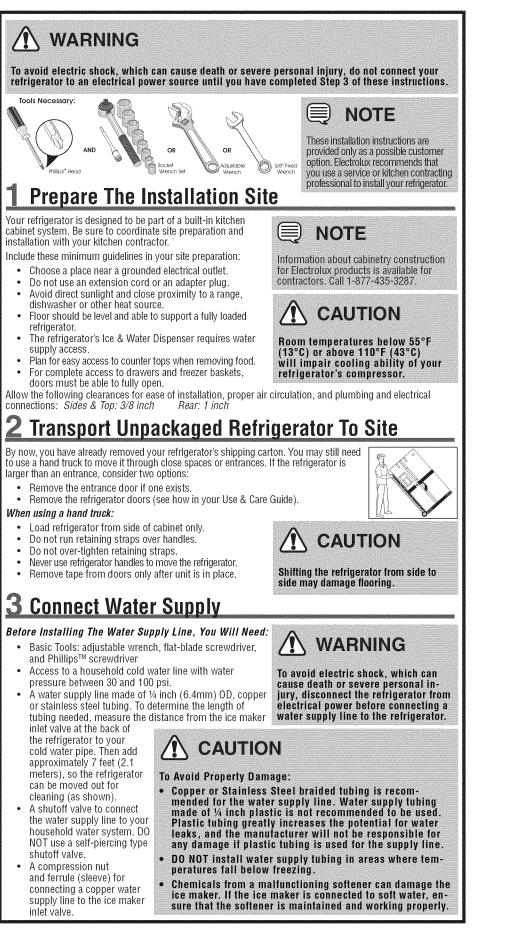

### To Connect Water Supply Line To Ice Maker Inlet Valve 1. Disconnect refrigerator from electric power

- source. 2. Place end of water supply line into sink or bucket. Turn ON water supply and flush supply line until water is clear. Turn OFF water
- supply at shutoff valve. 3. Remove plastic cap from water valve inlet and discard cap.
- 4. If you use copper tubing Slide brass compression nut, then ferrule (sleeve) onto water supply line. Push water supply line

into water valve inlet as far as it will do (1/4 inch/6.4 mm). Slide ferrule (sleeve) into valve inlet and finger tighten compression nut onto valve. Tighten another half turn with a wrench; DO NOT over tighten. See Figure 1.

If you use stainless steel tubing - The nut and ferrule are already assembled on the tubing. Slide compression nut onto valve inlet and finger tighten compression nut onto valve. Tighten another half turn with a wrench; DO NOT over tighten. See Figure 2.

- 5. With steel clamp and screw, secure water supply line (copper tubing only) to rear panel of refrigerator as shown
- Coil excess water supply line (copper tubing only), about 2½ turns, behind refrigerator as shown and arrange coils so they do not vibrate or wear against any other surface.
- Turn ON water supply at shutoff valve and tighten any connections that leak.
- 8. Reconnect refrigerator to electrical power source.
- 9. To turn ice maker on, lower wire signal arm (side mounted) or set the ice maker's On/Off power switch to the "I" position (rear mounted)

### NOTE

 The ice maker's fill valve may operate noisily if the household water supply is shut off. After ensuring no water leaks exist at any connection, be sure to check for leaks again in 24 hours. • See your Use & Care Guide for detailed information about setting up and operating the Ice &

# 4 Place In Permanent Position

If possible, use a hand truck to position the refrigerator directly in front of its cabinet enclosure.

Be careful not to move the refrigerator beyond its water supply (copper tubing) connections.

Plug in the power cord, and push the refrigerator straight back into place.

IMPORTANT

If you are installing your refrigerator without connecting it to a water supply. make sure the ice maker's power switch is turned Off (see the Use & Care Guide for more details)

# **5** Level Refrigerator & Adjust Doors (if necessary)

## To install toe grille

- Open both doors. Slide left and right sides of toe grille over lower hinges of refrigerator. While pushing toe grille firmly against cabinet, fasten bottom
- 2
- clips of toe gřille to cabinet. 3 Fasten top clips to cabinet.
- Close the doors. Fasten right and left side clips into groove of bottom hinge
- To remove toe arille

3


- 3

- With both doors closed, unfasten right and left side clips of toe
- open both doors. Press firmly on top of toe grille until top of toe 2
- le pops off Pull toe grille outward towards your body and off of lower hinges.

NOTE: Level the unit with the adjustable rollers before leveling the doors.

### To level the doors using the adjustable lower hinge (some models): Before leveling either door, remove set screw that locks door height into posi-

- tion. (The door cannot be adjusted without set screw removed.) If the refrigerator door is lower than the freezer door, raise the refrigerator 2 RAISE DOOR door by turning the adjustment screw counterclockwise using a wrench. (See illustration.)
  - If the freezer door is lower than the refrigerator door, raise the freezer door by turning the adjustment screw counterclockwise using a 7/16 inch wrench. (See illustration.) Flange After leveling, verify door stop contacts lower hinge and top of door does not contact upper hinge through full movement of door (from
- fully closed to fully open). Replace the toe grille by fitting it into place.

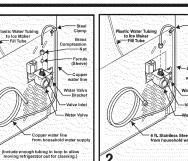

/!\ CAUTION

Shifting the refrigerator from side to side may damage flooring.

Do not block the toe arille on

the lower front of your refriger-

essential for proper operation.

ator. Sufficient air circulation is

t 1

---Hinge Flance

check for:

- doors.)

Other possibilities to check:

• Is the water filter above the fresh food compartment fully seated (see Use & Care Guide for details)? f you still have operation problems after checking these suggestions, please see the "Solutions To Common Problems" section in your Use & Care Guide

# 8 What's Next?

And thank you for choosing Electrolux.



□Handles are secure and tight Door seals completely to cabinet on all sides Freezer door is level across the top

Leveling

<sup>1</sup>/<sub>4</sub>" (6mm) front to back

**Electrical Power** 

□House power turned on □Refrigerator plugged in


*Not satisfied with the installation of your refrigerator?* > Please contact the store you purchased it from.





## **6** Remove Internal Shipping Materials

Electrolux uses packing foam and tape to secure the internal parts of your refrigerator for shipping. Once the refrigerator is in position, you can remove this material

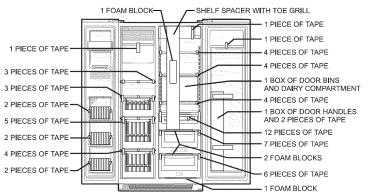

Location of these materials may vary depending on your model

## ' Problems? Try These Suggestions

Operation problems are possible if any of the installation tasks are not completed. Here is a list of things to

• Is the refrigerator's power cord plugged in?

Is the refrigerator connected to the household water supply?

 If you had to remove the refrigerator and freezer doors, did you reattach water and power connectors at the door hinges? (See the Use & Care Guide for detailed instructions on removing and replacing

Is the ice maker power switch turned On?

• Is the power to the receptacle turned on?

Congratulations. You are ready to begin enjoying your new Electrolux refrigerator.

 To become aware of important safety instructions and learn how to operate your refrigerator, please read the entire Use & Care Guide.

 You may want to start with the "Normal Operating Sights & Sounds" section of the Guide to learn more about what to expect during typical operation.

 Please register your product. You can register online at www.electroluxusa.com. or you can simply send in the Registration Card.

## 9 🗹 Installation Checkoff List

□Refrigerator is level, side to side and tilted □Toe grille is properly attached to refrigerator □Cabinet is setting solid on all corners

## Ice Maker

□House water supply connected to refrigerator □No water leaks present at all connections recheck in 24 hours □lce Maker is turned ON □Ice & Water Dispenser operates correctly □Front filter must be flush with filter housing (some models)

## **Final Checks**

□Shipping material removed □Fresh Food and Freezer temperatures set Crisper Humidity controls set □Registration Card sent in