



Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N 131838400.

Spanish Owner's Guides
Frigidaire Home Products
P. O. Box 212378
Augusta, GA 30917

Before Operating Your Washer

Read your washer Owner's Guide. It contains important safety and warranty information. It also contains many suggestions for obtaining the best results from your washer.

⚠ WARNING To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your washer Owner's Guide before operating this appliance.

Operating Steps

- Sort laundry into loads that can be washed together.
- Prepare items for washing.
- Pretreat stains and heavy soil.
- Add the measured amount of detergent to the washer before adding the laundry load.
- If desired, add liquid bleach to the Bleach Dispenser.
- Add the laundry load to the wash tub.
- Set washer controls according to type, size, and soil level of each load:

Wash/Rinse Temperature • Load Size

See **Controls** and the **Control Settings Chart** (reverse side) for more information on suggested water temperatures and water level.

- Push in the cycle selector knob and turn it clockwise to the desired wash cycle. See **Cycle Selection** for cycle descriptions and the **Control Settings Chart** for suggested cycle settings.
- Start the washer by closing the lid and pulling out the cycle selector knob.** The washer will operate with the lid open; however, the tub will not spin unless the lid is closed. To stop the washer, push in the cycle selector knob. To change a cycle, push in the cycle selector knob and turn it clockwise to the desired setting. Pull out the knob to restart washer.
- If desired, add diluted liquid fabric softener during the final rinse.**
- Remove items when the cycle is completed.** As a safety measure, the lid will AUTOMATICALLY LOCK during the spin portion of each cycle. The lid will automatically unlock approximately 1 minute after the tub stops spinning.

Cycle Selection

For best results, follow the fabric care label directions on items to be washed. Check the **Control Settings Chart** if the care label is not available.

The Regular, Perm Press and Delicates cycles provide wash agitation as described below, followed by a deep rinse and a final spin at the selected water temperature.

Regular Cycle

The Regular cycle provides up to 15 minutes of normal wash agitation followed by a fast spin for most fabrics.

Perm Press Cycle

The Perm Press cycle provides up to 12 minutes of normal wash agitation followed by a fast spin for cottons and blends with a no-iron finish.

Delicates Cycle

The Delicates cycle provides up to 6 minutes of gentle wash agitation followed by a slow spin for knit and delicate items.

Controls

Select the desired control settings according to load size, fabric type and degree of soiling. See **Control Settings Chart** below for detailed information on choosing control settings.

WASH/RINSE TEMPERATURE determines water temperatures for washing and rinsing.

LOAD SIZE determines the amount of wash and rinse water used for the wash load.

Control Settings Chart

Locate fabric type and read across guide for suggested wash and rinse temperatures, wash cycle and time setting. **This is only a general guide. For best results, follow label directions on specific items to be washed.**

Fabric Type	Temperature (Wash/Rinse)		Wash Cycle and Setting
REGULAR Heavily Soiled Colorfast & White Cotton & Linen	Hot	Cold	Regular - 15
Lightly Soiled Colorfast & White Cotton & Linen	Warm	Cold	Regular - 8 to 12
Noncolorfast Bright Colors All Fabrics	Cold	Cold	Regular - 4 to 8
PERMANENT PRESS White or Heavily Soiled	Hot or Warm	Cold	Perm Press - 8 to 12
Colored or Lightly Soiled	Warm or Cold	Cold	Perm Press - 4 to 8
KNITS/DELICATES Knitted Fabrics Delicates	Cold Cold	Cold Cold	Delicates - 3 to 6 Delicates - 3 to 6
Washable Woolens	Warm	Cold	Delicates - 3 to 6