

## ELECTRONIC OVEN CONTROL GUIDE

### Setting the Clock and Minute Timer

**NOTE:** The basic timer is externally arranged in different configurations in various appliance models, this does not change the way it operates.



#### To Set the Clock

When the range is first plugged in, or when the power supply to the appliance has been interrupted, "12:00" will flash in the display window.

1. Push **CLOCK** button to select clock entry mode. A beep will be heard.
2. Push **UP** or **DOWN ARROW** to set appropriate time. Adjust in one minute increments by tapping **UP** or **DOWN ARROW** or 10 minute increments by pressing and holding **UP** or **DOWN ARROW**. Set mode is exited 5 seconds after last **UP** or **DOWN ARROW** entry or 25 seconds after no entry.

#### To Set the Minute Timer

1. Press **TIMER** button. A beep will be heard.
2. The minute timer can be set for any amount of time from 1 minute to 12 hours.
3. Push **UP** or **DOWN ARROW** to set appropriate time. Adjusts in one minute increments by tapping **UP** or **DOWN ARROW** or 10 minute increments by pressing and holding **UP** or **DOWN ARROW**. Set mode is exited and timer begins counting down 5 seconds after last entry. Flashing colon indicates timer is active. Timer set mode is canceled if no button is pushed for 5 seconds.
4. A single beep will be heard 1 minute before the end of the selected time. When the time runs out, three quick beeps will be heard and a single reminder beep follows every 10 seconds for the 10 minutes or until the **CLOCK** button is pressed.
5. An active timer can be cancelled by pressing **TIMER** button with the timer in the display.

**NOTE:** Clock can be displayed during timer function by pressing **CLOCK** button. Flashing colon indicates timer is active in the background. To return to the timer display, press **TIMER** button.

 
 
#### Versión en español

Si desea obtener una copia en español de este Manual, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N 318201139.

Spanish Owner's Guides  
Frigidaire Company  
P.O. Box 9061  
Dublin, Ohio 43017-0961

## ELECTRONIC OVEN CONTROL GUIDE (continued)

### Setting Oven Controls

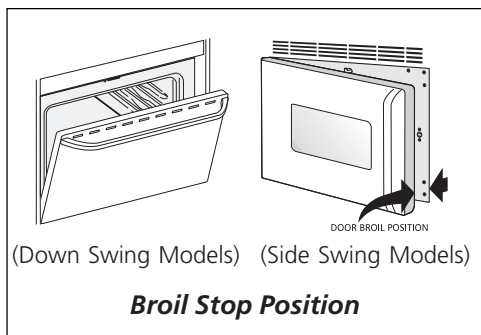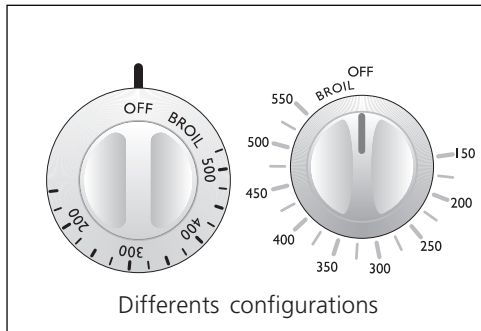

**CAUTION** Should an oven fire occur, leave the oven door closed and turn off the control knobs. If the fire continues, throw baking soda on the fire or use a fire extinguisher. DO NOT put water or flour on the fire. Flour may be explosive.

### Bake

 
1. Arrange oven racks while the oven is still cool.
2. Turn the Temperature Control knob to the desired oven temperature. When the oven is first turned on, the oven indicator light at the right of the control panel will glow.
3. Preheat the oven for 10 to 12 minutes before baking. Preheating is not necessary when roasting, cooking casseroles or broiling most foods. When the desired temperature is reached, the oven indicator light will go out. The light will then go on and off as the element cycles on and off to maintain the desired temperature.
4. When cooking is finished, turn the Temperature Control knob to OFF.

### Broiling

1. Arrange oven rack while oven is still cool. For rare meats, position the broiler pan closer to the element (upper position). For well-done foods such as chicken, lobster tails or thick cuts of meat, position the pan further from the element (to a lower position).
2. Turn the Temperature Control knob to BROIL. To sear rare steaks, allow the element to become red-hot—about 2 minutes—before placing food in oven.
3. Place the grid on the broiler pan, and then place the meat on the grid. **DO NOT** use the broiler pan without the grid or cover the grid with aluminum foil. The exposed fat could ignite.
4. Place the pan on the oven rack. Leave the door open at the **broil stop position** while broiling (down swing door models). The door will stay in this position without closing. Or **leave the door open about 3"** while broiling (side swing door models).
5. Broil on one side until food is browned; turn and cook on the second side. Season and serve. **Note:** Always pull the rack out to the stop position before turning or removing food.
6. When broiling is finished, turn the Temperature Control knob to OFF.

### Adjusting Oven Temperature (Some Models)

The temperature in the oven has been set at the factory. When first using the oven, be sure to follow recipe times and temperatures. If you think the oven is too hot or too cool, the temperature in the oven can be adjusted. Before adjusting, test a recipe by using a higher or lower temperature than the recommended temperature. The baking results should help you to decide how much of an adjustment is needed.

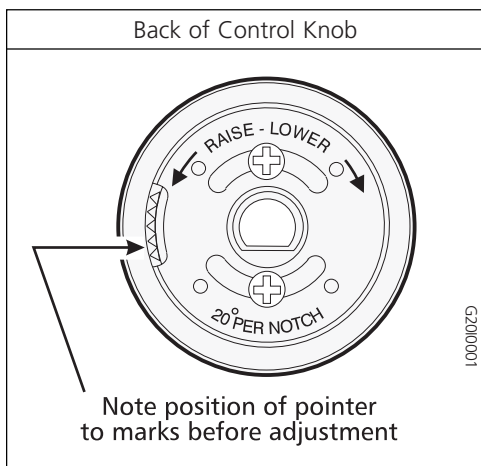

### To Adjust Oven Temperature:

1. Check to be sure the Temperature control knob is in the OFF position.
2. Pull Temperature control knob straight off the shaft.
3. On the back of the knob, there is a series of 5 small grooves. One of these grooves is positioned next to a tiny pointer. Note the position of the pointer. Loosen the two screws on the back of the knob (Figure 1). **Note:** If knob does not have 2 screws, it is not adjustable.
4. To increase or decrease the temperature, move the pointer in the direction of "Raise" or "Lower" to change the temperature accordingly. The temperature can be adjusted in increments as indicated on the back of the knob.
5. When the desired adjustment is reached, tighten both screws.
6. To replace the knob, line up the flat sides of both the knob and the shaft. Push the knob into place. **DO NOT** force the Temperature control knob onto the shaft or you may damage the back of the knob.

**Note:** Once an adjustment is made, the OFF position will vary from the reference mark on the backguard depending on the amount of adjustment.