



Whirlpool® Side by Side Refrigerator


PRODUCT MODEL NUMBERS

ED0GTKXM	ED5RHEXM
ED0GTQXM	ED5RHGXM
ED2GHGXM	ED5SHAXM
ED2LHAXM	ED5SHEXM
ED2NHGXM	ED5SHGXM
ED2NTGXM	ED5THAXM
ED2SHAXM	GD2SHAXM
ED2SHEXM	GD5PHAXM
ED2SHGXM	GD5RHAXM
ED5GHGXM	GD5RHAXM
ED5GTNXM	GD5SHAXM
ED5JHAXM	GS2SHAXM
ED5LHAXM	GS2SHEXM
ED5NHGXM	GS6SHAXM
ED5PHAXM	GS6SHEXM
ED5PHEXM	

Electrical: A 115 Volt, 60 Hz., AC only 15 or 20 amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your refrigerator be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.

Water: A cold water line with water pressure between 30 and 120 psi is required for the water dispenser and ice maker.

OVERALL DIMENSIONS

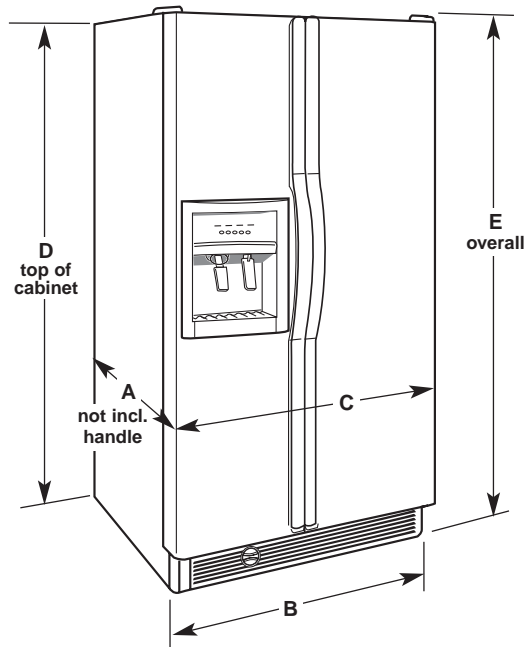


Handle and door style will vary with model.

Dimensions "D" and "E" include rollers extended 3/4".

Model size	Depth "A"	Cab. Width "B"	Door Width "C"	Cab. Height "D"	Overall Height "E"
STANDARD MODELS					
20 cu.ft.	29 3/8"	32 3/4"	33 1/8"	65 7/8"	66 3/4"
22 cu.ft.	31 3/8"	32 3/4"	33 1/8"	65 7/8"	66 3/4"
25 cu.ft.	31 3/8"	35 1/2"	35 7/8"	68 7/8"	69 3/4"
CURVED DOOR MODELS					
22 cu.ft.	33 1/4"	32 3/4"	33 1/4"	65 7/8"	67 1/4"
26 cu.ft.	33 1/4"	35 1/2"	36"	68 7/8"	70 1/4"

LOCATION REQUIREMENTS

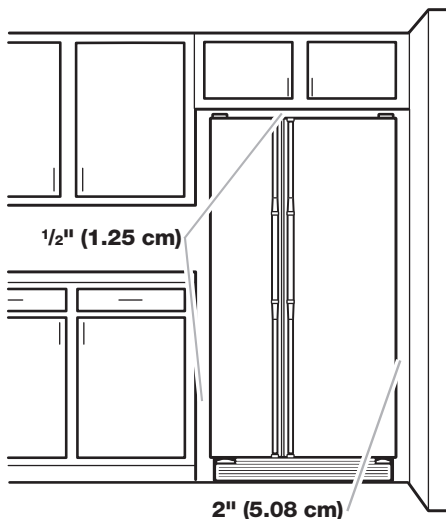

To ensure proper ventilation for your refrigerator, allow for 1/2 in. (1.25 cm) space on each side and at the top. (At the top, when using half depth cabinet, use top of cabinet height "D" dimension. When using full depth cabinet, use overall "E" dimension.) When installing your refrigerator next to a fixed wall, leave 2 in. (5.08 cm) minimum on each side (depending on your model) to allow for the door to swing open. If your refrigerator has a water dispenser and ice maker, allow extra space at the back for the water line connections.

NOTE: Do not install the refrigerator near an oven, radiator, or other heat source, nor in a location where the temperature will fall below 55°F (13°C).