

**KitchenAid®**

**30" ELECTRIC FREESTANDING  
COMBINATION MICROWAVE/RANGE**

**FOR COOKTOP WITH  
CAST-IRON ELEMENTS  
AND LOWER OVEN**

**SELF-CLEAN  
MODEL KEES705**

---

---

# CONTENTS

	Page
<b>BEFORE YOU USE YOUR RANGE</b> .....	2
<b>IMPORTANT SAFETY INSTRUCTIONS</b> ..	3
<b>PARTS AND FEATURES</b> .....	4
<b>TWO-LEVEL EXHAUST VENT SYSTEM</b> ..	5
<b>USING THE SURFACE ELEMENTS</b> .....	6
<b>USING THE LOWER OVEN CONTROLS</b> ..	8
Baking or Roasting .....	8
Using the Automatic AUTO TIME Control	9
Broiling .....	11
<b>OVEN VENT</b> .....	12
<b>STORAGE DRAWER</b> .....	12
<b>OPTIONAL ROTISSERIE</b> .....	13
<b>CARING FOR YOUR COOKTOP AND</b>	
<b>LOWER OVEN</b> .....	14
Control Panel and Knobs .....	14
Solid Surface Elements .....	15
Using the Self-Clean Cycle .....	16
Cleaning Chart .....	20
Cleaning the Grease Filters .....	22
The Cooktop Light .....	23
The Lower Oven Light .....	24
<b>IF YOU NEED SERVICE OR</b>	
<b>ASSISTANCE</b> .....	25
<b>KITCHENAID® MICROWAVE OVEN/ RANGE WARRANTY</b> .....	28

---

## BEFORE YOU USE YOUR RANGE

Read this Use & Care Guide and the Cooking Guide for important safety information.

**You are personally responsible for:**

- Reading and following all safety precautions in this Use & Care Guide and the Cooking Guide.
- Installing the range where it is protected from the elements, and on a floor strong enough to support its weight.
- Properly connecting the range to electrical supply and grounding.
- Making sure the range is not used by anyone unable to operate it properly.
- Properly maintaining the range.
- Using the range only for jobs expected of a home range.

**See “Cooking Guide” for important safety and use information.**

# SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

***WARNING: When using your cooktop or lower oven, follow basic precautions, including the following.***

**DO NOT** allow children to use or play with any part of the range, or leave them unattended near it. They could be burned or injured.

**DO NOT** store things children might want above the range. Children could be burned or injured while climbing on it.

**DO NOT** allow anyone to touch hot surface elements or heating elements. Dark colored elements can still be hot enough to burn severely.

**KEEP** children away from the range when it is on. The cooktop and oven walls, racks and door can get hot enough to cause burns.

**DO NOT** use the range to heat a room. Persons in the room could be burned or injured, or a fire could start.

**KEEP** pan handles turned in but not over another surface element to avoid burns, injury and to help prevent the utensil from being pushed off the surface elements.

**DO NOT** use water on grease fires. The fire will spread. Cover fire with large lid or smother with baking soda or salt.

**DO NOT** wear loose or hanging garments when using the range. They could ignite if they touch a hot surface element or heating element and you could be burned.

**DO NOT** heat unopened containers. They could explode. The hot contents could burn and container particles could cause injury.

When adding or removing food, **MAKE SURE** to open the oven door all the way to prevent burns.


Because of the automatic exhaust fan system, the following cautions must be observed:

- a. Do not leave area when using your cooktop at a high setting. Accidental fires from boilovers or spattering on the surface elements could spread, especially if the exhaust fan is operating.
- b. Do not operate the exhaust vent system without the filters in place. Grease could accumulate in the venting system and cause a fire hazard.
- c. Do not allow grease and soil to build up in the grease filters. Exhaust fan efficiency will decrease and fire may result. Clean often following the filter cleaning instructions on page 22.
- d. Do not “flame” foods when operating the exhaust fan. The fan, if operating, may spread the flame and cause personal injury or property damage.

**FOR YOUR SAFETY – DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE. THEY COULD IGNITE CAUSING EXPLOSION AND/OR FIRE.**

# PARTS AND FEATURES

Model KEES705  
COOKTOP AND LOWER OVEN

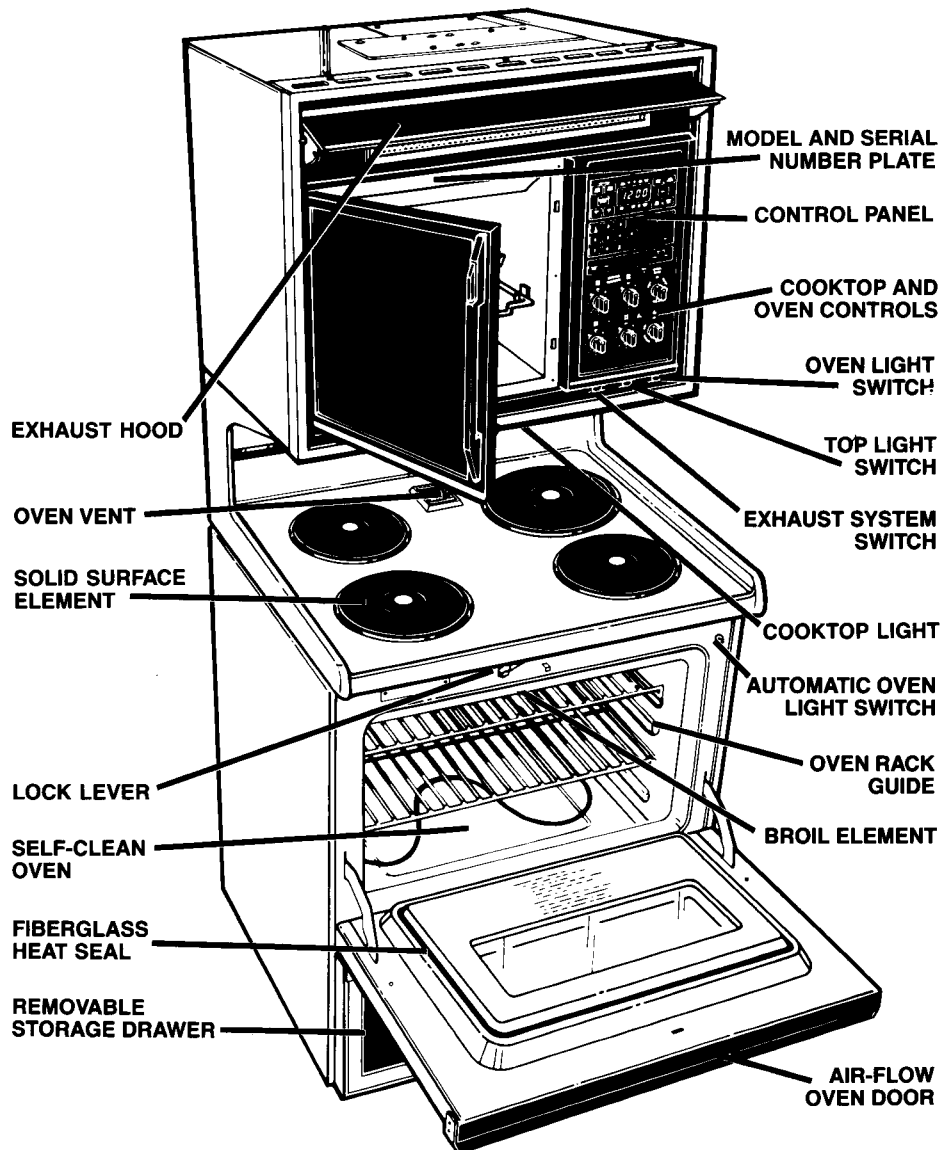

## Copy Your Model and Serial Numbers Here

If you need service, or call with a question, have this information ready:

**1. Complete** Model and Serial Numbers (from plate located behind the microwave oven door).

**2.** Purchase date from sales slip.

Copy this information in these spaces. Keep this book and the sales slip together in the Literature Pack.

**Please fill out and mail the ownership registration card furnished with this product.**

Model Number

Serial Number


Purchase Date

Service Company Phone Number

# TWO-LEVEL EXHAUST VENT SYSTEM


Your Range/Microwave Combination has a two-level exhaust vent system for removal of steam, grease and cooking odors. You may use the lower vent alone or add the top vent for maximum venting.

The lower vents are located above the cooktop (underneath the microwave oven). The top vent is located above the microwave oven (behind the vent cover).

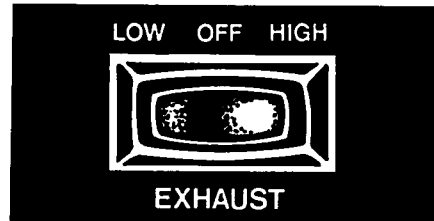


### To use only the lower vent:

- Push the Exhaust switch down to the right for HIGH fan speed.
- Push the switch down to the left for LOW fan speed.
- Center the switch to turn the vent system OFF.

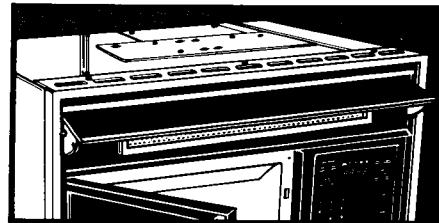

### To use both vents:

- Raise the vent cover above the microwave oven.
- Turn on desired fan speed by following the directions above.

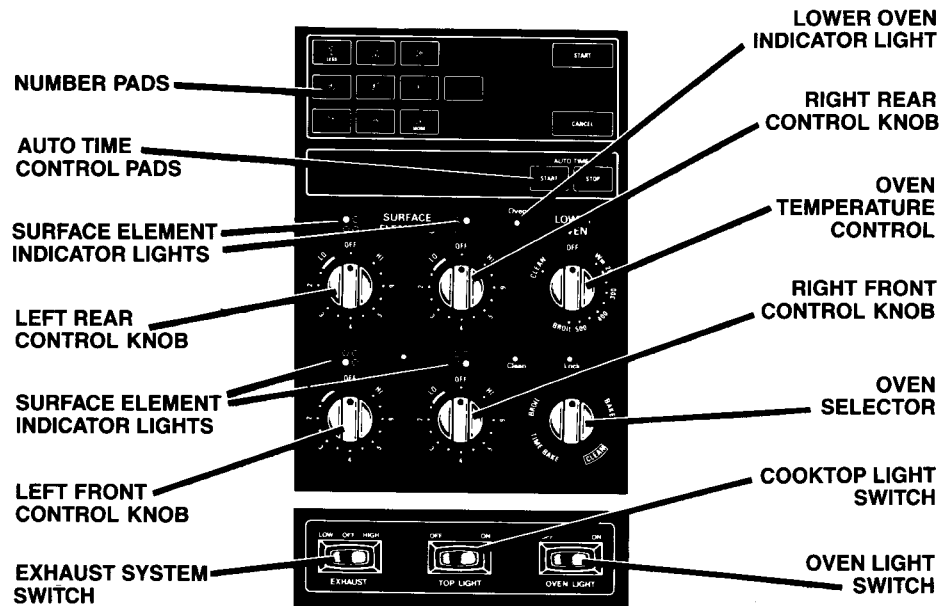


## USING THE SURFACE ELEMENTS

### Surface Element Indicators

The solid dot in the surface element indicator shows which surface element is turned on by that knob.

### Signal Light

One of the signal lights will glow when a surface element is on.

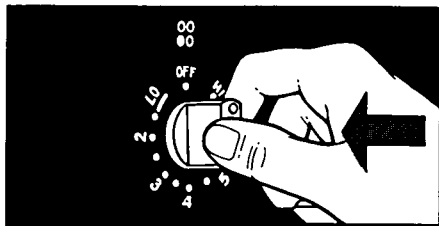

**Control knobs must be pushed in before turning them to a setting.** They can be set anywhere between HI and OFF.

**WARNING:** Be sure all lights are **OFF** when you are not cooking. Someone could be burned or a fire could start if a surface element is accidentally left ON.


### Surface Elements

Solid surface elements are made of heavy cast-iron to provide even cooking. Each surface element has a built-in protective limiter. The limiter senses uneven cooking temperatures and automatically reduces the heat setting. The limiter will sense uneven heat when a pan boils dry, when a pan does not have a flat bottom, or when a pan is removed and the element is left ON.


Solid elements hold heat longer than conventional surface units. For best cooking results, use a high setting for only a very short period of time. Then use a low setting to complete the cooking. You may want to turn the element OFF a few minutes before you are finished cooking.

**CAUTION: Solid surface elements stay hot for a long time. Do not use the HI setting for long periods of time or leave pans on hot elements when cooking is done. Burned food and damage to the cookware could result.**


Until you get used to the settings, use the following as a guide:

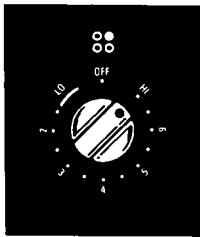


**Use HI** to start cooking or to bring liquids to a boil. When cooking foods, **turn to a setting on or between 3 and LO** when sizzle starts.

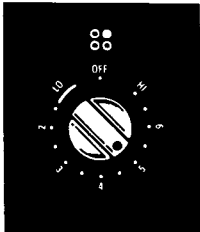


**Use 5** to hold a rapid boil or to start frying chicken or pancakes. **Turn to a setting on or between 3 and LO** when sizzle starts.

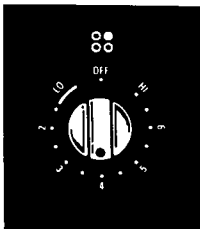

**Use 4** for gravy, puddings and icings or to cook large amounts of vegetables. **Turn to a setting on or between 2 and LO** to finish cooking.

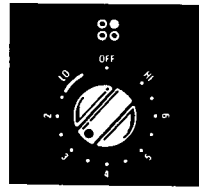


**Use 3** to continue cooking after starting at a higher setting.

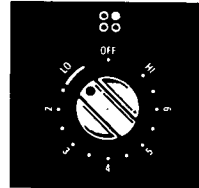

**Use LO** to continue cooking after starting at a higher setting, to keep food warm or to melt chocolate or shortening.


**CAUTION: The use of the HI setting for long periods of time can damage surface elements and discolor chrome trim rings. Start cooking on HI and turn control down to continue cooking.**

## Cookware

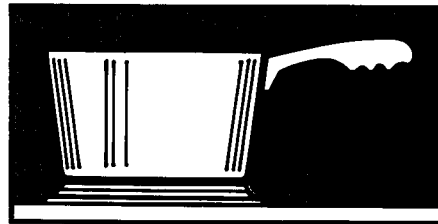


Pans should be the same size or larger than the elements to prevent boilovers and hot handles.

**continued on next page**

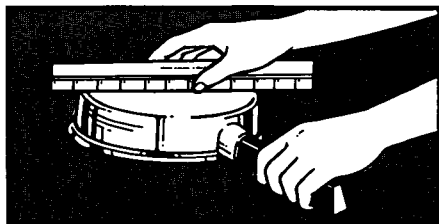

**Only use pans with flat bottoms.** Flat bottoms allow maximum contact between the pans and the elements for fast, even cooking. Pans with uneven bottoms or with a raised pattern on the bottom are not suitable. Flatness of a pan can be checked by placing the edge of a ruler across it. There should not be space between the ruler and the bottom of the pan.

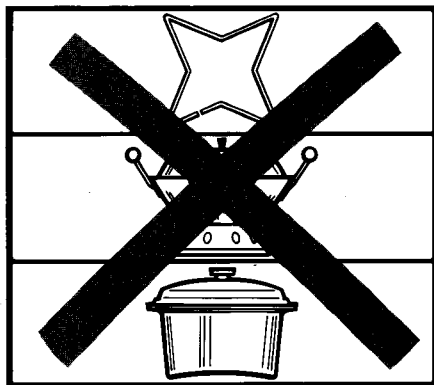

**DO NOT USE trivets, woks with skirts, or canners with concave or ridged bottoms.**

**NOTE:** If pan bottoms are not flat, the protective limiter will sense uneven cooking temperatures and reduce the heat setting. This will result in longer cooking times.

**See "Cooking Guide" for important utensil information.**


## USING THE LOWER OVEN CONTROLS

The lower oven is always set with two knobs:

- The Selector control
- The Temperature control

**Both must be on a setting for the oven to heat.**

### Baking or Roasting

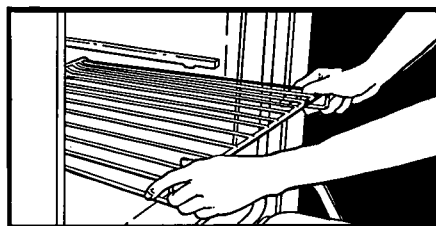


1. Position the rack(s) properly **before** turning on the oven. **To change rack position**, lift rack at front and pull out.

Racks should be placed so the top of the food will be centered in the oven. Always leave at least 1½ to 2 inches (4-5 cm) between the sides of the pan and the oven walls and other pans. For more information, see the "Cooking Guide."




2. Set the Selector control to **BAKE**.




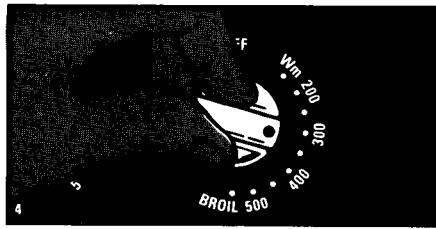


3. Set the Temperature control to the baking temperature you want. The oven signal light will come on. The oven is preheated when the oven signal light first goes off.

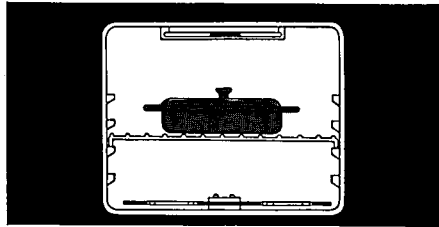

4. Put food in the oven. **NOTE:** Oven racks, walls and door will be hot. During baking, the elements will turn on and off to keep the oven temperature at the setting. The Oven signal light will turn on and off with the elements.

**The top element heats during baking, but does not turn red.**

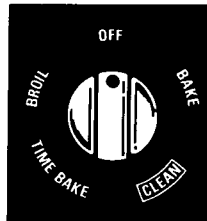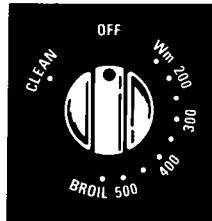


5. When baking is done, turn both the Temperature control and the Selector control to OFF.

## Using the Automatic AUTO TIME Control

The automatic AUTO TIME Control will turn the **lower oven** on and off at times you set...even when you are not around.

Automatic baking is ideal for foods which do not require a preheated oven (meats, casseroles, etc.). **Do not use the automatic cycle for cakes, cookies, or other recipes that require preheating the oven before baking...undercooking will result.**

**To start and stop baking automatically:**

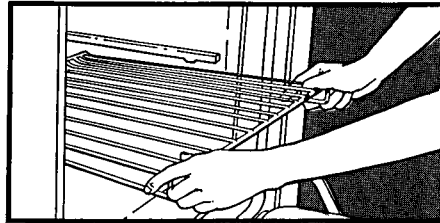


1. Position the oven rack(s) properly, and place the food in the oven.




2. Make sure the clock on the microwave control display is set to the correct time of day.




3. Set the Selector control to TIME BAKE.

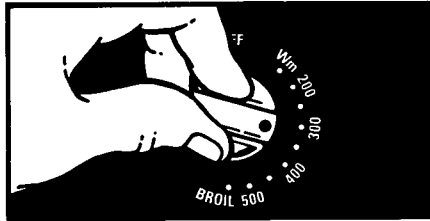


4. Set the Temperature control to the baking temperature you want.

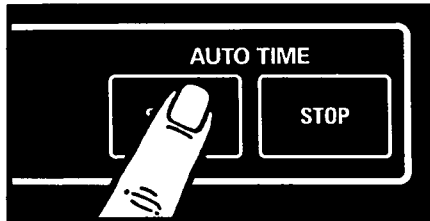



5. Touch Auto Time START Pad. Touch number pads for the time you want cooking to start.

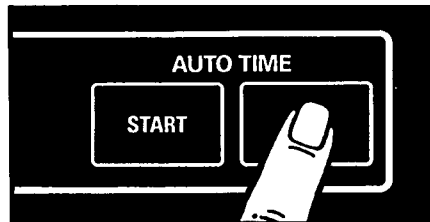

6. Touch Auto Time STOP Pad. Touch number pads for the time you want cooking to stop.

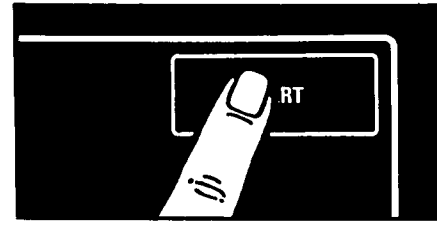

7. Touch START. The oven will now start and stop automatically.

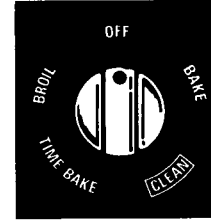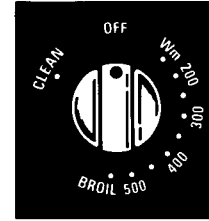

8. **After baking is done be sure to turn both the Selector control and the Temperature control to OFF.**

**To cancel AUTO TIME:** Touch Auto Time START. Touch CANCEL. Turn the Selector control and the Temperature control to OFF.

**To start baking now and stop automatically:**


1. Position the oven rack(s) properly, and place the food in the oven.
2. Make sure the clock on the microwave oven display is set to the correct time of day.
3. Set the Selector control to TIME BAKE.
4. Set the Temperature control to the baking temperature you want.
5. Touch Auto Time STOP Pad. Touch number pads for the time of day you want cooking to stop.
6. Touch START. The oven will start baking immediately and shut off at the time you have set.

7. After baking is done be sure to turn both the Selector control and the Temperature control to OFF.


**WARNING: To avoid sickness and food waste.**

- Use foods that will not go bad or spoil while waiting for cooking to start.
- Avoid using dishes with milk or eggs, cream soups, cooked meats or fish, or any item with baking powder or yeast.
- Any food that has to wait for cooking to start should be very cold or frozen before it is put in the oven. **MOST UNFROZEN FOODS SHOULD NEVER STAND MORE THAN TWO HOURS BEFORE COOKING STARTS.**


## Broiling

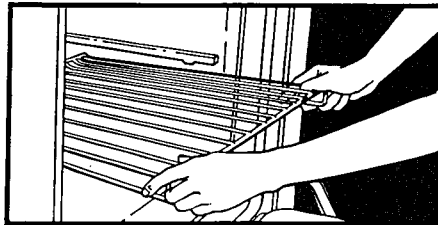



1. Position the rack before turning the oven on. See broil chart in the "Cooking Guide" or a reliable cookbook for recommended rack positions.

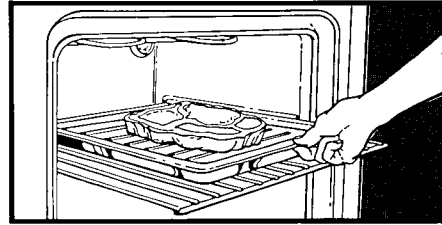

2. Put the broiler pan and food on the rack.

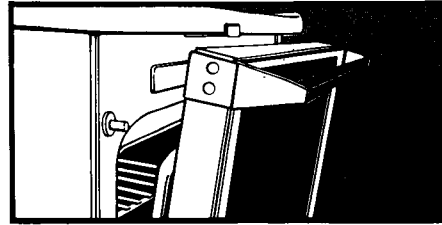

3. Close the door to the Broil Stop position, (open about 4 in., 10.2 cm). The door will stay open by itself.

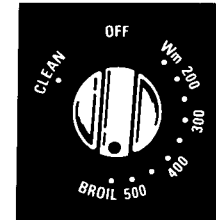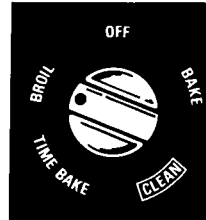

4. Set the Selector control and the Temperature control to BROIL. When broiling is done, turn **both** the Selector control and the Temperature control to OFF.

**continued on next page**

### Variable Broil


- If food is cooking too fast, turn the Temperature control towards the lower settings until the Oven signal light goes off.
- If you want the food to broil slower from the start, set the Temperature control between Wm (150°F) and 350°F (65.5° and 142°C). The lower the temperature, the slower the cooking.

**The Selector control must be on BROIL for all broiling temperatures.**

**The door should be partly open whenever the oven is set to BROIL. Leaving the door open allows the oven to maintain proper temperatures.**

---

## THE OVEN VENT

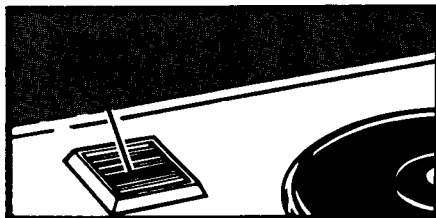

The oven vent is located on the center rear of the cooktop. When the oven is on, hot air and moisture escape from the oven through this vent. Poor baking can result if this vent is blocked. When using the oven, **do not** cover or place items over the oven vent.

**WARNING: When the oven is ON, pans and pan handles left on or near the oven vent can become hot enough to burn the user and to melt plastics. Never store plastic, paper or other items that could melt or burn on or near the oven vent, or on any of the surface elements.**


---

## THE STORAGE DRAWER


The storage drawer is for storing pots and pans.

**Use care when handling the drawer.**

### Removing the Storage Drawer

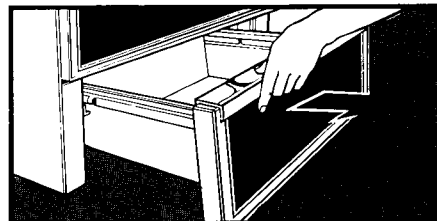


1. Pull drawer straight out to the first stop. Lift front and pull out to the second stop.

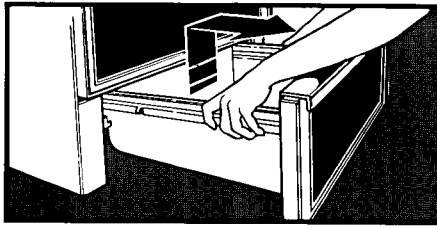


2. Lift back slightly and slide drawer all the way out.

### Replacing the Storage Drawer

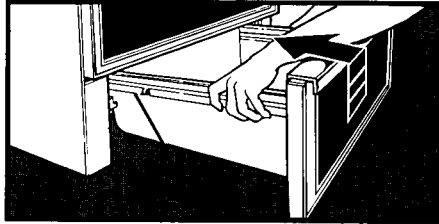


1. Fit ends of drawer slide rails into the drawer guides on both sides of opening.

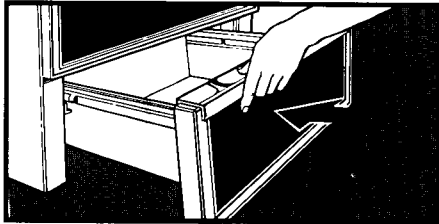

2. Lift drawer front. Then push in until the stops on the drawer slide rails have cleared the stops on the drawer guides. Lift drawer front again to clear the second stop. Slide drawer closed.

### Use & Care Guide Storage

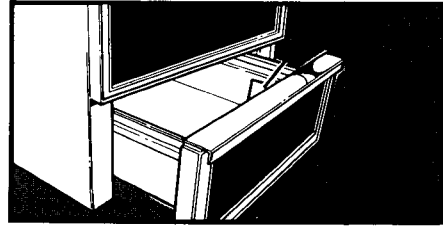

Store this booklet, along with your "Cooking Guide" and sales slip in the Literature Pack, inside the storage drawer.


---

## OPTIONAL ROTISSERIE


If you would like a rotisserie for your oven, you can order a kit (Part No. 261881) from your KitchenAid dealer. The kit includes easy installation instructions.

# CARING FOR YOUR COOKTOP AND LOWER OVEN


## Control Panel and Knobs

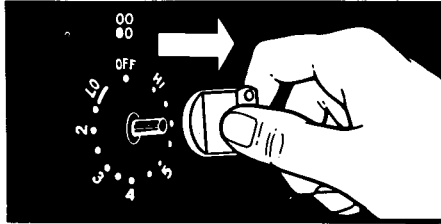


1. First make sure the control knobs are set to **OFF**. To remove, pull knobs straight off.

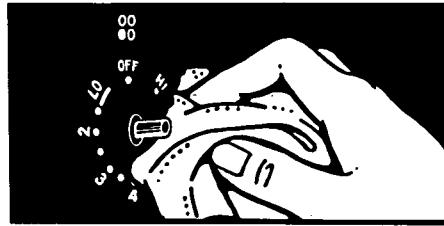

2. Use warm soapy water or spray glass cleaner and a soft cloth to wipe the control panel. Rinse and wipe dry.

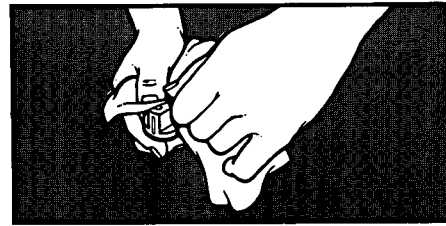


3. Wash control knob in warm soapy water. **Do not soak**. Rinse well and dry.

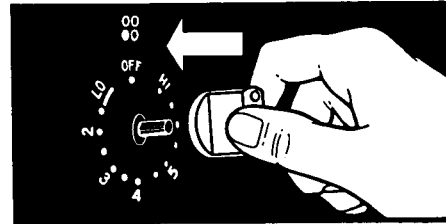

4. To replace, turn knob so **OFF** is at the top. Push control knobs straight back on.


## Solid Surface Elements

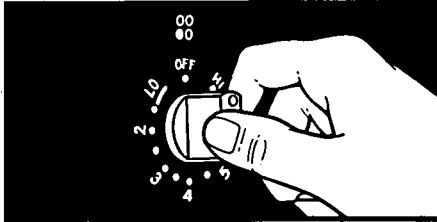


**WARNING: Elements may not glow red when hot. To avoid burns and possible electric shocks, make sure all controls are OFF and the elements are COOL before cleaning.**



**1.** After each use, wipe off the elements with a damp soft cloth and soapy water. Burned-on food may be removed with a soapy scouring pad. The red spot in the center of the elements will gradually wash off. This is normal and will not affect the operation of the elements.

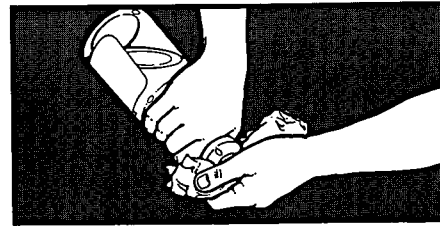

**2. IMPORTANT: After each cleaning,** apply a thin coat of salt-free oil to the COOL elements, then heat 3-5 minutes. Oil may smoke slightly when heated. If elements have dark spots caused by grease and food, the oil treatment will improve their appearance but not eliminate the spots.

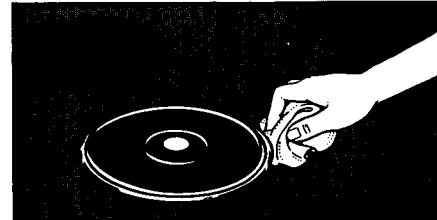


**3.** The spillrings will gradually yellow from the heat of the elements and pans. This is normal. The yellowing can be removed by using stainless steel cleaner on the spillrings.

## Using the Self-Clean Cycle

The Self-Clean cycle uses **very high heat** to burn away soil. Before you start, make sure you understand exactly how to use the cycle safely.

### Before You Start

1. Clean the shaded areas by hand.  
They do not get hot enough during the Self-Clean cycle for soil to burn away. Use hot water and detergent or soapy steel wool pad on...
  - The frame around the oven.
  - The inside of the door, especially the part outside the oven seal.

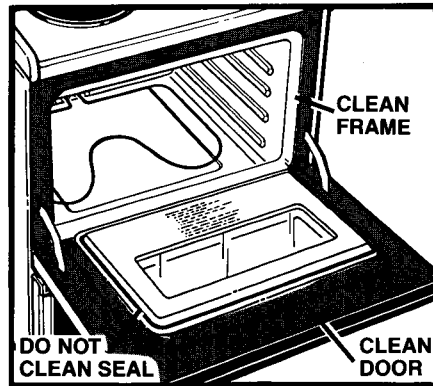

**DO NOT clean the fiberglass seal.**

**DO NOT move it or bend it. Poor cleaning and poor baking will result.**

2. Remove the broiler pan and any pots or pans you may have stored in the oven. They can't stand the high heat.
3. Wipe out any loose soil or grease. This will help reduce smoke during the cleaning cycle.
4. If your oven has a rotisserie, make sure the motor socket cover is closed.

5. Turn on the vent hood or other kitchen vent during the cleaning cycle. This will help remove smoke, odor and heat that are normal during the cycle.

**SPECIAL CAUTIONS: DO NOT use commercial oven cleaners in your oven. Damage to the porcelain finish may occur.**

**DO NOT force the Lock Lever, you could bend or break it. The lever is designed to stay locked until the oven is cool enough to safely open. Wait until it moves freely.**

**DO NOT use foil or other liners in the oven. During the cleaning cycle foil can burn or melt and damage the oven surface.**

**WARNINGS: DO NOT block the vent during the clean cycle. Air must move freely for best cleaning results.**


**DO NOT leave a utensil over the oven vent during the cleaning cycle. It will become hot enough to burn you and the utensil could be damaged.**

**DO NOT TOUCH THE OVEN DURING THE CLEANING CYCLE. IT COULD BURN YOU.**




## Setting the Controls for Self-Cleaning

Be sure the kitchen is ventilated during the Self-Clean cycle. This will help normal smoke and heat odors to disappear from the room as quickly as possible.

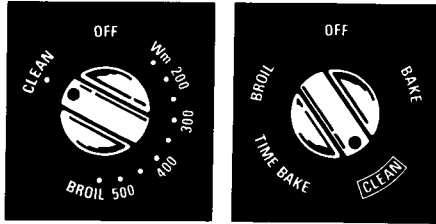


1. Set the Selector control and Temperature control to CLEAN.

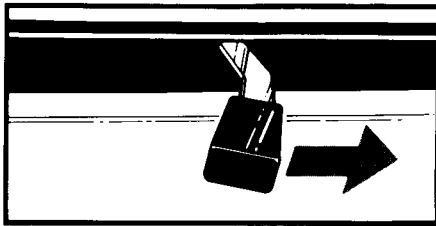


2. Move the Lock Lever all the way to the right. The Clean light will come on only when the lever is all the way to the right.




3. Make sure the clock on the upper control panel is set to the correct time of day.

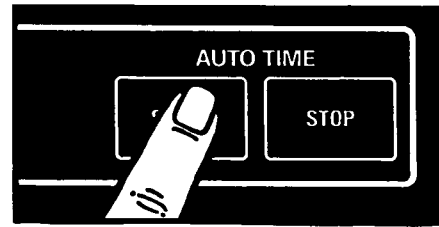

4. Touch the Auto Time START Pad. Touch number pads for the time you want cleaning to start.

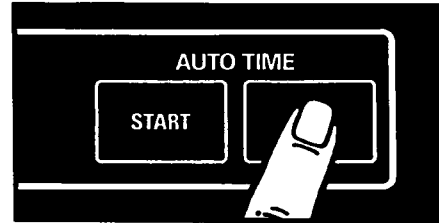


5. Touch the Auto Time STOP Pad. Touch number pads for the time you want cleaning to stop (2-3 hours after set Start time).

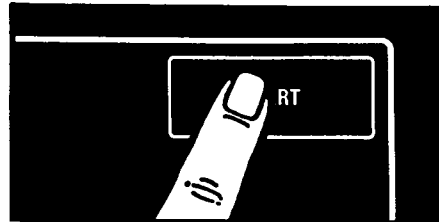


6. Touch START. The oven will start the Clean cycle automatically at the time you have set. The Lock light will come on and the door will lock when the oven temperature exceeds normal baking temperatures. The Lock Lever must not be moved and the door can't be opened when the light is ON.


continued on next page

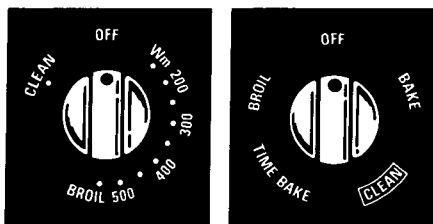

7. When the Lock Light goes off turn the Selector control and Temperature control to OFF.

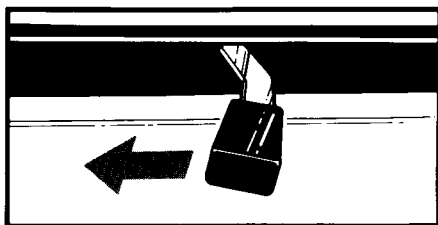


8. When the oven is cool, move the Lock Lever back to the left. **Do not force it.** Wait until it will move easily. This will turn off the Clean light.

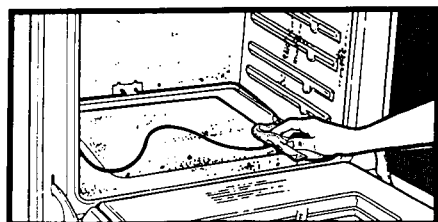


9. After the oven is cool, wipe off any residue or ash with a damp cloth. If needed, touch up spots with a soapy steel wool pad.

**NOTE: If you would like the Clean Cycle to start immediately, do not use Auto Time START. Set only Auto Time STOP for the time you would like cleaning to stop (2-3 hours after current time).**

**To stop the cleaning cycle at any time:**

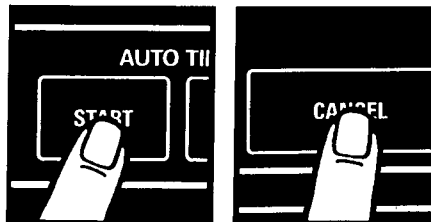


1. Touch the Auto Time START Pad. Touch CANCEL.

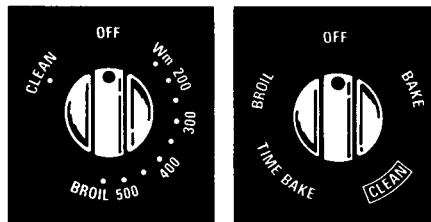


2. Turn the Selector and Temperature controls to OFF. When the Lock light goes OFF, move the Lock Lever back to the left. **DO NOT FORCE IT.** Wait until it moves easily.

**WARNING: DO NOT TOUCH THE OVEN DURING THE CLEANING CYCLE. IT CAN BURN YOU.**


## Special Tips

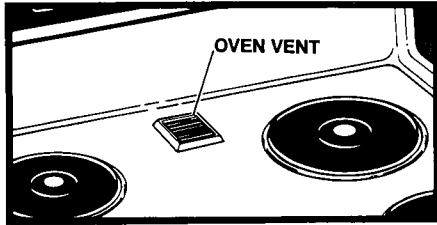

Keep the kitchen well ventilated during the self-clean cycle. This will help normal smoke and heat odors to disappear from the room as quickly as possible.

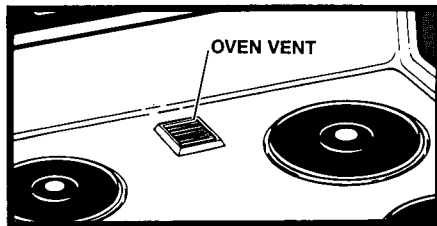

Clean the oven before it gets heavily soiled. Cleaning a very soiled oven takes longer and results in more smoke than usual.

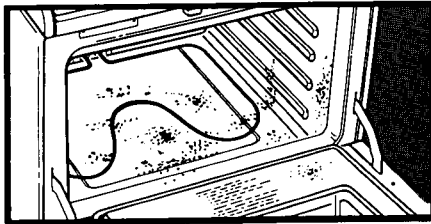


If the self-clean cycle doesn't get the oven as clean as you expected, the cycle may not have been set long enough or you may not have prepared the oven properly. Set the cleaning time longer the next time and hand clean areas noted on page 16.

## How It Works

During the self-clean cycle, the oven gets much hotter than it does for baking or broiling (approximately 875°F, 468°C). This heat breaks up grease and soil and burns it off.

The graph shows approximate temperatures and times during a self-clean cycle for 3 hours.

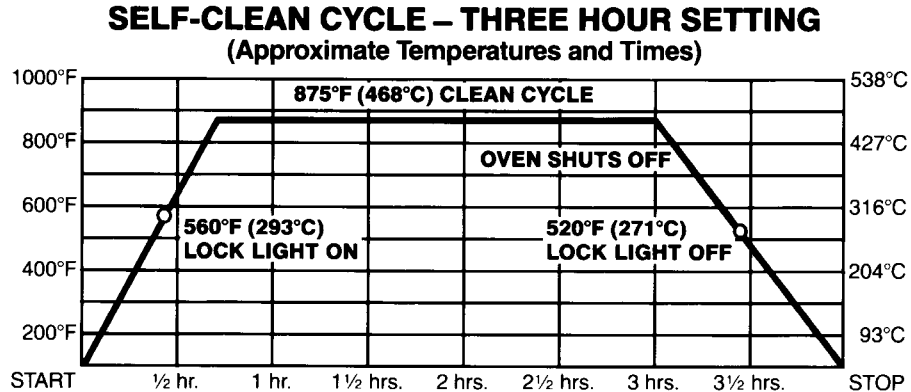

Notice that heating stops when the 3-hour setting is up, but that it takes longer for the oven to cool down enough to unlock.

## Cleaning Chart

PART	WHAT TO USE	HOW TO CLEAN
<b>EXTERIOR SURFACES</b>	Soft cloth and warm soapy water. Nylon or plastic scouring pad for stubborn spots.	<ul style="list-style-type: none"> <li>Wipe off regularly when cooktop and oven are cool.</li> <li><b>Do not allow food containing acids (such as vinegar, tomato, lemon juice or milk) to remain on surface. Acids will remove the glossy finish.</b></li> <li><b>Do not use abrasive or harsh cleansers.</b></li> </ul>
<b>SURFACE ELEMENTS</b>	Soft cloth and warm soapy water. Soapy scouring pad or scouring powder for burned-on foods.	<ul style="list-style-type: none"> <li><b>Make sure the cooktop and the solid elements are cool.</b></li> <li>Wipe off the elements after each use.</li> <li><b>After each cleaning, heat elements until dry.</b></li> </ul>


<b>PART</b>	<b>WHAT TO USE</b>	<b>HOW TO CLEAN</b>
<b>SURFACE ELEMENTS (Continued)</b>	<b>To darken elements or to remove rust spots:</b> Soft cloth and salt-free oil.	<ul style="list-style-type: none"> <li>• <b>Make sure elements are cool.</b></li> <li>• Apply thin coat of oil to elements, then heat 3-5 minutes.</li> </ul> <p><b>NOTE:</b> This will improve element appearance but not eliminate dark spots. Slight smoking of oil will occur.</p>
	<b>Spillings</b> Stainless steel cleaner.	<ul style="list-style-type: none"> <li>• <b>Make sure elements are cool.</b></li> <li>• Follow directions provided with cleaner.</li> </ul> <p><b>NOTE:</b> Yellowing of spillings is normal from heat of the elements and pans.</p>
<b>BROILER PAN AND GRID</b>	Warm, soapy water or steel wool pad.	<ul style="list-style-type: none"> <li>• Wash with other cooking utensils.</li> </ul>
<b>CONTROL KNOBS</b>	Warm, soapy water and soft cloth.	<ul style="list-style-type: none"> <li>• Wash, rinse and dry well.</li> <li>• <b>Do not soak.</b></li> </ul>
<b>CONTROL PANEL</b>	Warm, soapy water or spray glass cleaner.	<ul style="list-style-type: none"> <li>• Wash, rinse and dry well.</li> <li>• Follow directions provided with cleaner.</li> </ul>
<b>OVEN RACKS</b>	Warm, soapy water or soapy steel wool pads.	<ul style="list-style-type: none"> <li>• Wash, rinse and dry. Use soapy steel wool pads for stubborn areas.</li> </ul>
<b>LOWER OVEN DOOR GLASS</b>	Spray glass cleaner; warm, soapy water or plastic scrubbing pad.	<ul style="list-style-type: none"> <li>• <b>Make sure oven is cool.</b></li> <li>• Follow directions provided with cleaner.</li> <li>• Wash, rinse and dry well with a soft cloth.</li> </ul>
<b>SELF-CLEAN OVEN</b>	For areas outside Self-Clean area use warm, soapy water or soapy steel wool pads.	<ul style="list-style-type: none"> <li>• Follow directions starting on page 16, "Using the Self-Clean Cycle."</li> <li>• <b>Do not use commercial oven cleaners.</b></li> <li>• <b>Do not use foil to line the bottom of your Self-Clean oven.</b></li> </ul>

## Cleaning the Grease Filters


The grease filters should be removed and cleaned at least once a month. **NOTE:** Charcoal filters should be replaced every 12 months. **Do not attempt to clean.**

### Lower filters

(beneath the microwave oven)

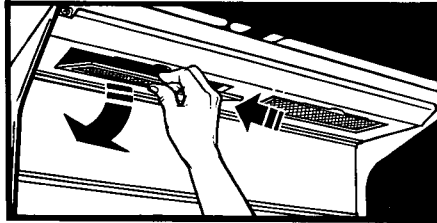


1. To remove each filter, place thumb in the indentation at the center front of the filter. Push back and pull down.

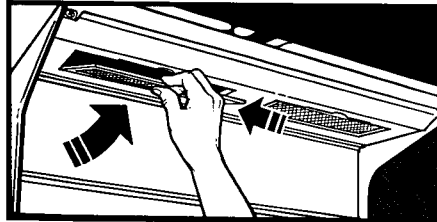


2. To replace, place the long edge of the filter against the clips at the back of the opening. Push filter back and up until it snaps into place.

### Top filter

(above the microwave oven, under the vent cover)

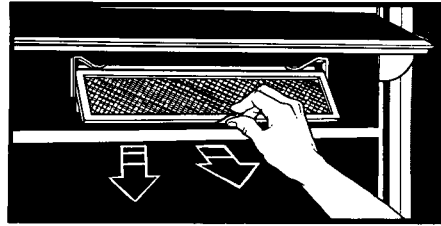

1. To remove filter, lift vent cover. Use plastic tab at center of the filter to push up and lift out the filter.

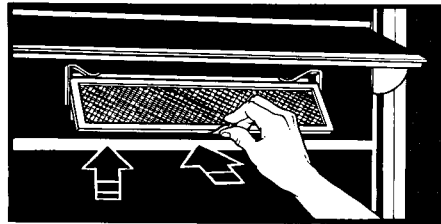


2. To replace, place top edge of the filter against the clips at the top of the opening. Push up and in until filter snaps in place. Make sure the plastic tab at the bottom of the filter is facing out.

### To clean the filters:

Soak filters in hot water and a mild detergent. Scrub and swish to remove embedded dirt and grease. Rinse well and shake to dry. (Filters may be washed in the dishwasher. However the aluminum will darken. Using ammonia for cleaning will also cause the aluminum to darken.)


**CAUTION: Do not operate the exhaust vent system without the filters in place. Grease could accumulate in the venting system and cause a fire hazard.**

## The Cooktop Light

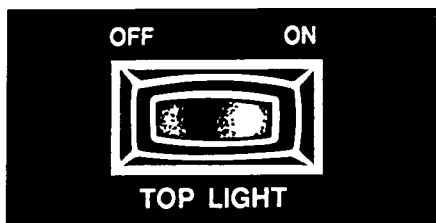


The **TOP LIGHT** switch is located below the control panel. Push the right side of the switch to turn the light ON. Push the left side to turn it OFF.


**WARNING: To avoid possible shock hazard, turn off the electric power at the main power supply.**

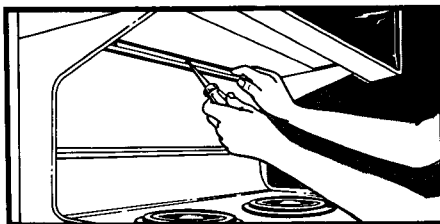

1. Remove the 3 screws and metal trim that supports the top of the light cover. **The glass is heavy. Hold it securely.**

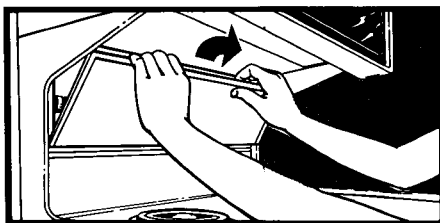

2. **With both hands**, pull top of light cover towards you and lift it out of bottom support trim.

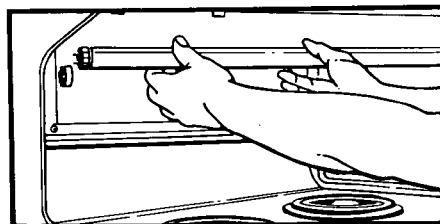

3. Grasp the fluorescent tube at both ends. Turn the tube away from you until both ends come out of the receptacles. Replace with a 20-watt cool-white fluorescent tube.



4. **With both hands**, carefully fit the glass light cover into the bottom metal support trim. Replace the top support trim and screws. Turn electric power back on at the main power supply.


## The Lower Oven Light

The lower oven light will turn on and off automatically when you open and close the door.


To turn the light ON when the oven door is closed, push the right side of the OVEN LIGHT Switch located below the control panel. Push the left side of the switch to turn it OFF.

### To replace the light bulb:

**WARNING: To avoid possible shock hazard, turn off the electric power at the main power supply.**

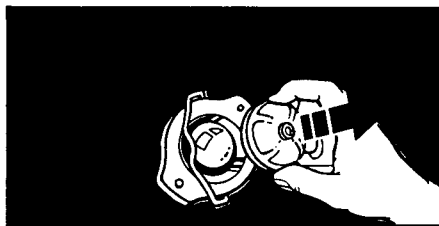

1. Remove the bulb cover in the back of the oven by pulling out and pushing the wire holder to the side.

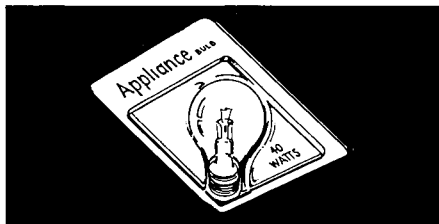

2. Remove and replace the light bulb with a 40-watt appliance bulb.
3. Replace the bulb cover and snap the wire holder in place.
4. Turn the power back on at the main power supply.

**CAUTION: The bulb cover must be in place when using the oven. The cover protects the bulb from breaking.**

**NOTE:** The Oven Light will not work during the self-clean cycle.



# IF YOU NEED SERVICE OR ASSISTANCE

## Follow These Steps

1. If your range/microwave should fail to operate, review the following list before calling your dealer. You could save the cost of a service call.

### If nothing operates:

- Is the power supply cord plugged into a live circuit with the proper voltage? (See "Installation Instructions.")
- Have you checked the main fuse or circuit breaker box?

### If the oven will not operate:

- Is the Selector turned to TIME BAKE instead of BAKE or BROIL?
- Is the Temperature control turned to a temperature setting?

### If the surface units will not operate or seem to cook too slow:

- Have you checked the main fuse or circuit breaker box?
- Is the Surface Unit control knob turned to a setting, other than OFF?
- Are you using the proper cookware? (See page 7.)
- Do the control knobs turn?

### If the surface element control knob(s) will not turn:

- Did you push in before trying to turn?

### If the Self-Clean Cycle will not operate:

- Are the Selector and Temperature controls set on CLEAN?
- Does the Clock show the correct time of day?

- Is the Auto Time STOP set ahead to the time you want the cleaning cycle to stop?
- Is the Lock Lever all the way to the right? (The Clean light will come on.)

### If the Cooktop or Oven Light burns out:

- See changing instructions on pages 23 and 24.

### If cooking results aren't what you expected:

- Is the range level?
- Are you using pans recommended in the **Cooking Guide**?
- If baking, have you allowed 1½ to 2 inches (4-5 cm) on all sides of the pans for air circulation?
- Have you preheated the oven as the recipe calls for?
- Are the pans the size called for in the recipe?
- Are you following a tested recipe from a reliable source?
- Do the cooking utensils have smooth, flat bottoms and fit the surface element being used?

See the **Cooking Guide** for more information on cooking problems and how to solve them.

**continued on next page**

**2.** If the problem is not due to one of the above items, first call your dealer or repair service he recommends.

- All service should be handled locally by the dealer from whom you purchased the unit or an authorized KitchenAid servicer.

**3.** In the event you are unable to obtain the name of a local authorized KitchenAid servicer, call KitchenAid Consumer Affairs, TOLL FREE: 800-422-1230.

- A Consumer Affairs representative can recommend a qualified service company in your area.

If you must call or write, please provide: Model Number, Serial Number, Date of Purchase and complete description of the problem.

Write to:

KitchenAid Consumer Affairs  
KitchenAid, Inc.  
3800 Space Drive  
Dayton, Ohio 45414

**4.** If you are not satisfied with the action taken, contact the Major Appliance Consumer Action Panel (MACAP). MACAP is a group of independent consumer experts that voices consumer views at the highest levels of the major appliance industry. Contact them only when the dealer authorized servicer or KitchenAid, Inc., have failed to resolve your problem.

Major Appliance Consumer  
Action Panel  
20 North Wacker Drive  
Chicago, Illinois 60606

MACAP will in turn inform us of your action.

# KitchenAid®

## ELECTRIC COMBINATION MICROWAVE OVEN/RANGE WARRANTY

LENGTH OF WARRANTY:	KITCHENAID WILL PAY FOR:	KITCHENAID WILL NOT PAY FOR:
<b>ONE YEAR FULL WARRANTY FROM DATE OF PURCHASE.</b>	Replacement parts and repair labor to correct defects in materials or workmanship. Service must be provided by an authorized KitchenAid servicing outlet.	A. Service calls to: <ol style="list-style-type: none"> <li>1. Correct the installation of the range.</li> <li>2. Instruct you how to use the range.</li> <li>3. Replace house fuses or correct house wiring.</li> </ol>
<b>FIVE YEAR LIMITED WARRANTY ONE YEAR FULL PLUS SECOND THROUGH FIFTH YEAR LIMITED FROM DATE OF PURCHASE.</b>	Replacement of the electric element if found to be defective in materials or workmanship.	B. Repairs when range is used in other than normal home use. C. Damage resulting from accident, alteration, misuse, abuse, improper installation or installation not in accordance with local electrical codes.
<b>TEN YEAR LIMITED WARRANTY ONE YEAR FULL PLUS SECOND THROUGH TENTH YEAR LIMITED FROM DATE OF PURCHASE.</b>	Replacement of the porcelain oven cavity/inner door if the part rusts through due to defective materials or workmanship.	D. Any labor costs during the limited warranty. E. Replacement parts or repair costs for units operated outside the United States. F. Pick up and delivery. This product is designed to be repaired in the home.

**KITCHENAID, INC. DOES NOT ASSUME ANY RESPONSIBILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**KitchenAid, Inc.**  
St. Joseph, Michigan, USA 49085