


**YOUR GAS RANGE
IS SUPPLIED WITH
THE FOLLOWING
SURFACE BURNER HEAD
AND BURNER CAP
CONFIGURATION:**

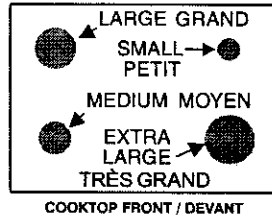


**VOTRE CUISINIÈRE
EST LIVRÉE AVEC
LA CONFIGURATION
EXTÉRIEURE
SUIVANTE DE TÊTE
DE BRÛLEUR ET
DE CHAPEAU DE BRÛLEUR:**

**IMPORTANT:
BEFORE USING YOUR RANGE!**

1. Remove the Burner Caps and Burner Heads at all four surface burner locations. REMEMBER THE ORIGINAL LOCATIONS.
2. REMOVE THE SHIPPING PAD packed under each Burner Head at all four locations and discard (See Illustration below).
3. Be sure to replace the correct Burner Head and the matching Burner Cap at all four surface burner locations BEFORE attempting to use the gas range!

Be sure to replace the correct Burner Cap with the matching Burner Head. Note: Your gas range comes shipped with these in the correct locations.


Be sure to remember where each size burner is located on your gas range before assembly and disassembly! Use the illustrations above and below for reference.

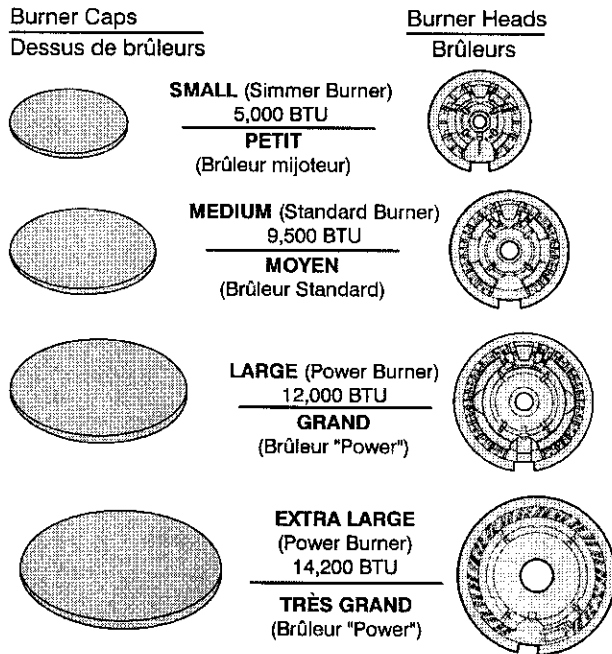

**IMPORTANT
AVANT D'UTILISER VOTRE CUISINIÈRE:**


1. NOTEZ LES LOCALISATIONS ORIGINALES des quatre brûleurs et leurs dessus et enlevez les.
2. ENLEVEZ LE COUSSIN DE TRANSPORT inséré sous chaque brûleur et jetez-les (voir l'illustration cidessous).
3. Soyez certains d'avoir remis les brûleurs et leurs dessus aux bons endroits avant d'utiliser la cuisinière.

Assurez vous de replacer le bon dessus de brûleur sur le bon brûleur. Nota : Votre cuisinière est livrée ayant ces éléments aux bons endroits. À l'aide des illustrations ci dessus et avant d'enlever ces éléments, prenez note de leurs positions pour les replacer aux bons endroits.

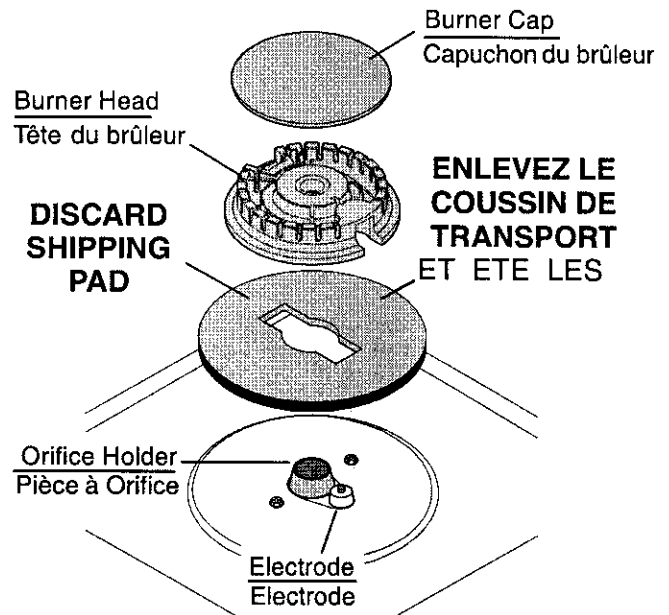

CAUTION

Be sure to remove foot protectors before installing top burner grates.

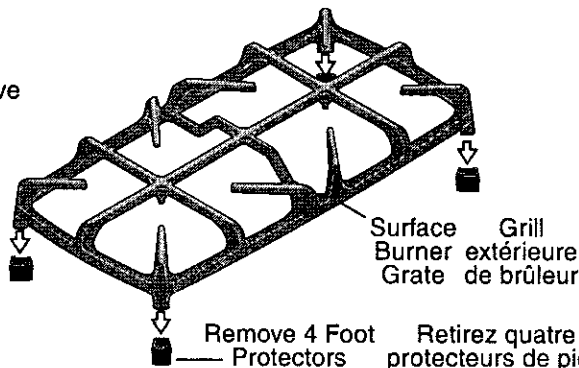

ATTENTION

Soyez sûr de retirer des protecteurs de pied avant d'installer les grilles supérieures de brûleur.