


FRONT / DEVANT

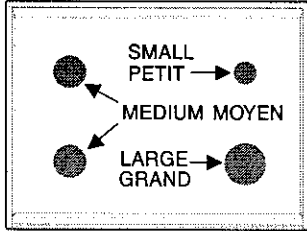


FRONT / DEVANT


**YOUR GAS RANGE IS SHIPPED WITH ONE OF THE FOLLOWING POSSIBLE SURFACE BURNER HEAD AND BURNER CAP CONFIGURATIONS:**

**VOTRE CUISINIÈRE EST LIVRÉE AVEC UN DES BRÛLEURS ET DESSUS DE BRÛLEUR POSSIBLE**

**SUIVANTS CONFIGURATIONS:**

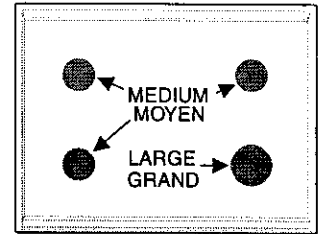

FRONT / DEVANT

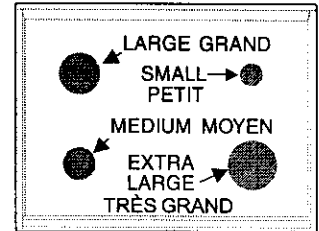

FRONT / DEVANT

**IMPORTANT: BEFORE USING YOUR RANGE!**

1. Remove the Burner Caps and Burner Heads at all four surface burner locations. REMEMBER THE ORIGINAL LOCATIONS.
2. REMOVE THE SHIPPING PAD packed under each Burner Head at all four locations and discard (See Illustration below).
3. Be sure to replace the correct Burner Head and the matching Burner Cap at all four surface burner locations BEFORE attempting to use the gas range!

Be sure to replace the correct Burner Cap with the matching Burner Head. Note: Your gas range comes shipped with these in the correct locations.

Be sure to remember where each size burner is located on your gas range before assembly and disassembly! Use the illustrations above and below for reference.

**IMPORTANT AVANT D'UTILISER VOTRE CUISINIÈRE :**

1. NOTEZ LES LOCALISATIONS ORIGINALES des quatre brûleurs et leurs dessus et enlevez les.
2. ENLEVEZ LE COUSSIN DE TRANSPORT inséré sous chaque brûleur et jetez-les (voir l'illustration cidessous).
3. Soyez certains d'avoir remis les brûleurs et leurs dessus aux bons endroits avant d'utiliser la cuisinière.

Assurez vous de replacer le bon dessus de brûleur sur le bon brûleur. Nota : Votre cuisinière est livrée ayant ces éléments aux bons endroits. À l'aide des illustrations ci dessus et avant d'enlever ces éléments, prenez note de leurs positions pour les replacer aux bons endroits.

