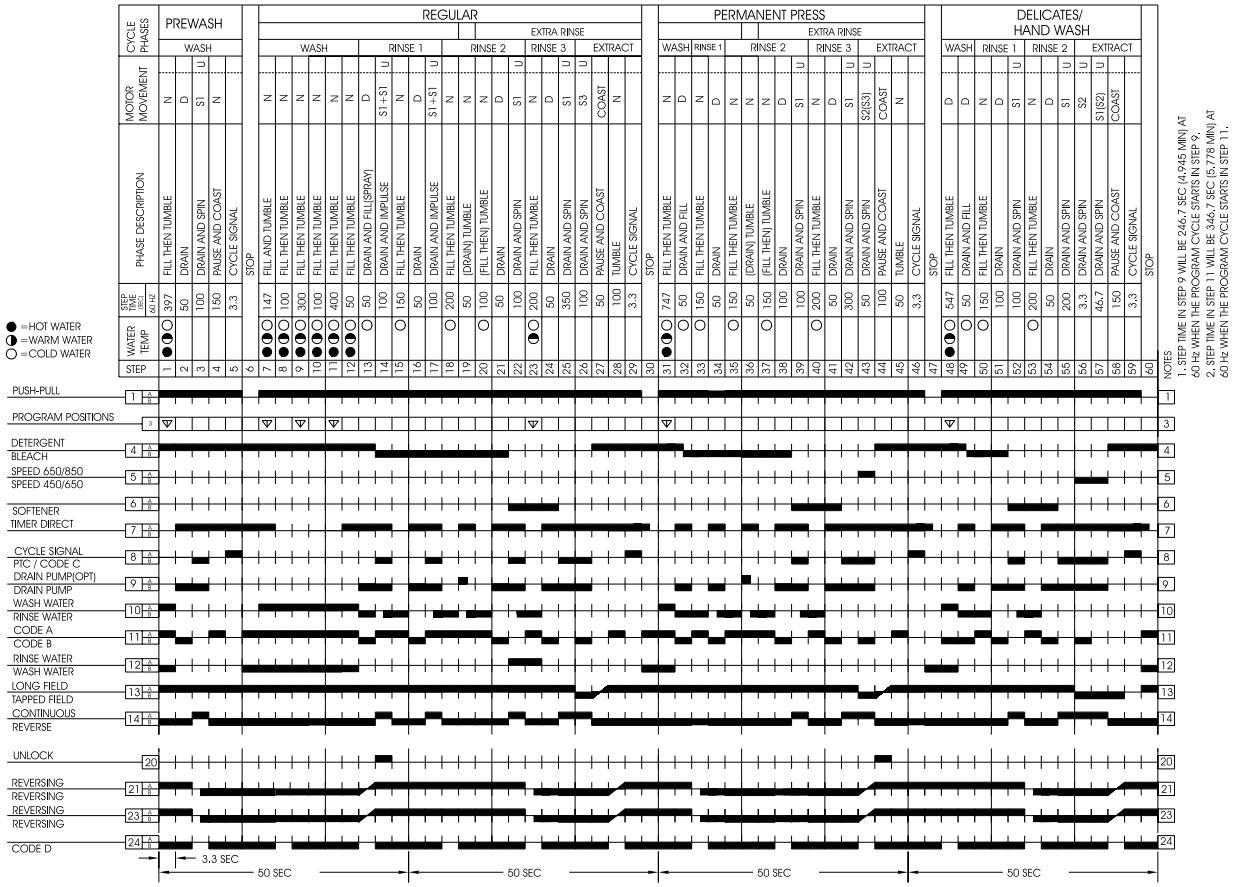

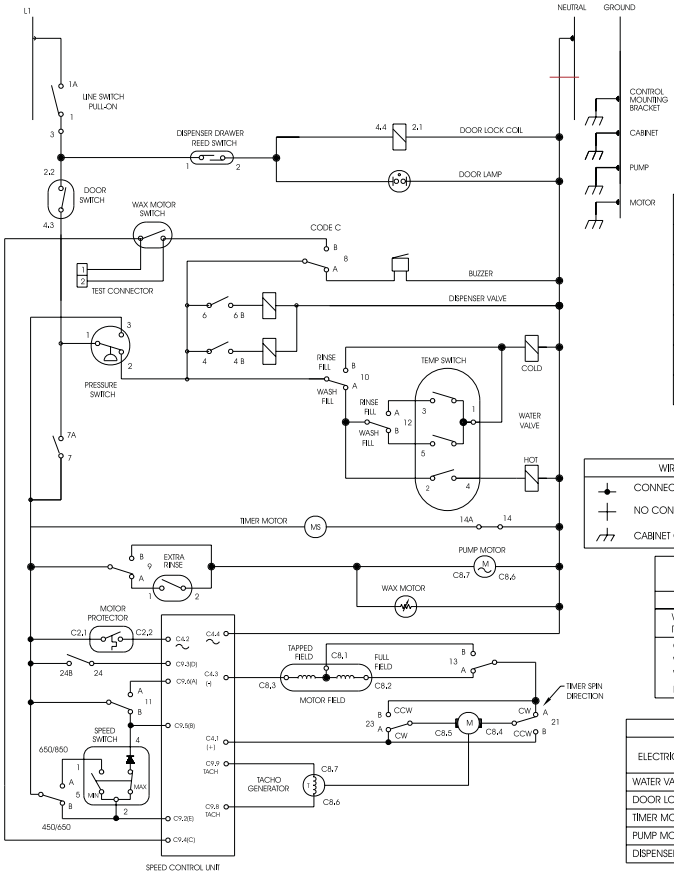

⚠ WARNING TO REDUCE THE RISK OF ELECTRICAL SHOCK DISCONNECT THIS APPLIANCE FROM THE POWER SUPPLY BEFORE ATTEMPTING ANY USER MAINTENANCE. TURNING THE CONTROLS TO THE OFF POSITION DOES NOT DISCONNECT THIS APPLIANCE FROM THE POWER SUPPLY.

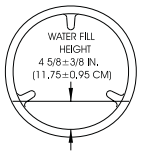

NO LOAD, START POSITION OF PERMANENT PRESS

SPEED CONTROL UNIT OPERATION

DRUM RPM	PHASE DESCRIPTION	CODE	E 5 A B	D 24B	C 8B	B 11B	A 11A
0	NO ACTION	/	X	0	0	0	X
0	NO ACTION	/	X	X	0	0	0
0	NO ACTION	/	X	0	0	1	X
0	NO ACTION	/	X	X	0	1	1
0	NO ACTION	/	X	0	X	1	1
0	NO ACTION	/	X	X	1	1	1
52	AGIT - CONTINUOUS	N	X	1	0	0	1
52	AGIT - DUTY CYCLE	D	X	1	0	1	0
450	INTERVAL SPIN	S1+S1	X	X	1	0	1
450	SPIN - CONTINUOUS	S1	X	X	1	0	0
650	SPIN - CONTINUOUS	S2	1	X	1	1	0
850	SPIN - CONTINUOUS	S3	0	X	1	1	0

1=120 VAC 0=0 VAC X=DON'T CARE (1 OR 0)

WIRING CODES
- CONNECTION
- NO CONNECTION
- CABINET GROUND

TEMPERATURE SWITCH

CIRCUIT	WASH/ RINSE	1-3	1-5	2-4
C/C			X	
W/C			X	X
W/W		X	X	X
H/C				X

CONNECTOR POSITION

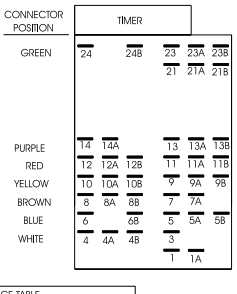

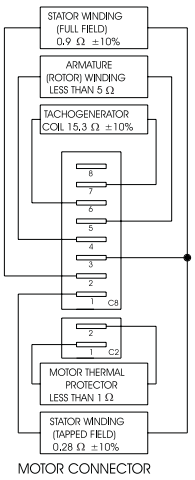

MOTOR CONNECTOR

COMPONENT RESISTANCE TABLE

ELECTRICAL COMPONENT	RESISTANCE Ω ± 10% @ 77°F(25°C)
WATER VALVE SOLENOIDS	880
DOOR LOCK SOLENOID	380
TIMER MOTOR	2070
PUMP MOTOR	4.6
DISPENSER VALVE SOLENOIDS	880

WIRING DIAGRAM
P/N 131808100