

# Instruction Sheet

## for Drawer Shim Kit W10576211

Kit Contains:  
 4 Plastic Shims  
 1 Instruction Sheet

**IMPORTANT:** Shim location after installation - There should be 1 shim in each available gap, 2 per side, moderately centered. See *Figure 1*.

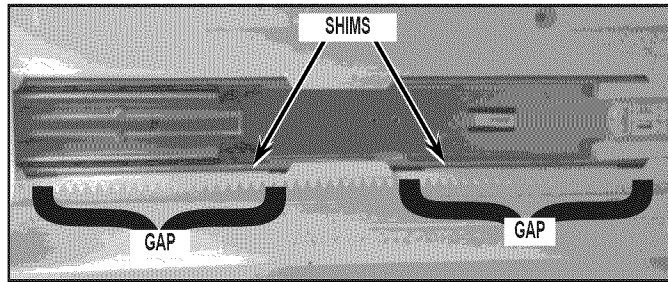


FIGURE 1

1. Remove two (2), 1/4" screws on top/inside of freezer door and lift off the freezer door.
2. Pull out lower basket as far as possible to access basket stops.
3. Insert a stiff blade putty knife behind the rail past the basket stop and force the rail inward while inserting a small blade screwdriver into the square slot in the rail. Pry out the stop. Only one stop needs to be removed. See *Figure 2*.

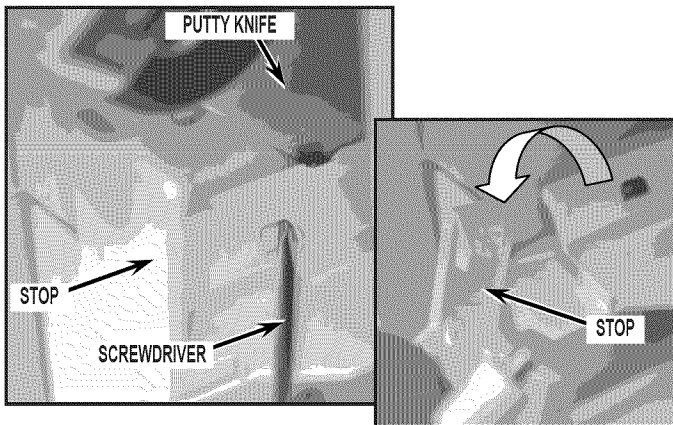


FIGURE 2

4. With the basket stop removed, pull out both baskets. Lift out the upper basket. Push the lower basket toward the rear slightly to disengage the hook and lift off.
5. Insert shims. The shim should just push in. If it's a tight fit, try pushing up on the t-bracket/slide. See *Figure 3*.

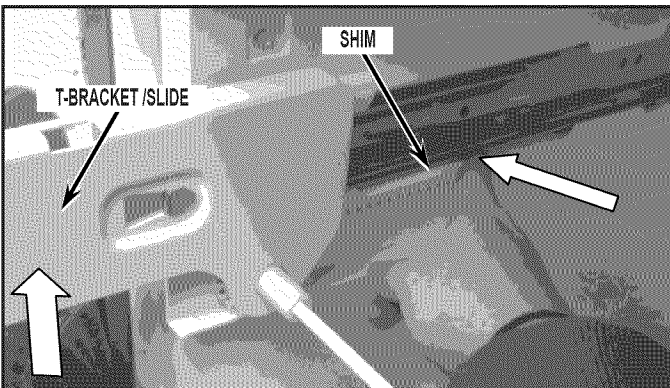


FIGURE 3

6. To make sure that the shim is completely in place, use a flathead screwdriver to push the shim in (it will stop once it hits the back of the side adapter). See *Figure 4*.

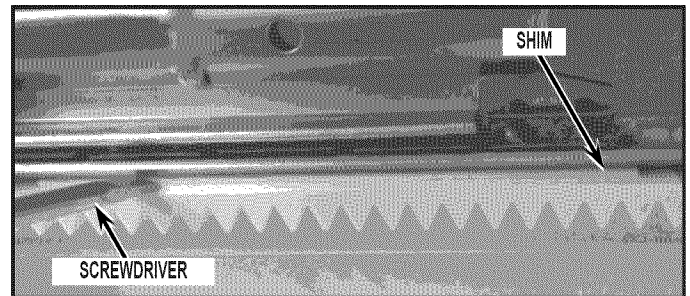


FIGURE 4

7. Reinstall baskets, basket stop and freezer door.

**NOTE:** Shim Removal (if needed) - To take the shim out, use a flathead screwdriver on the short end of the shim to rock it out of place. If it's too tight to grab with your fingers, you can use pliers to put it out. See *Figure 5*.

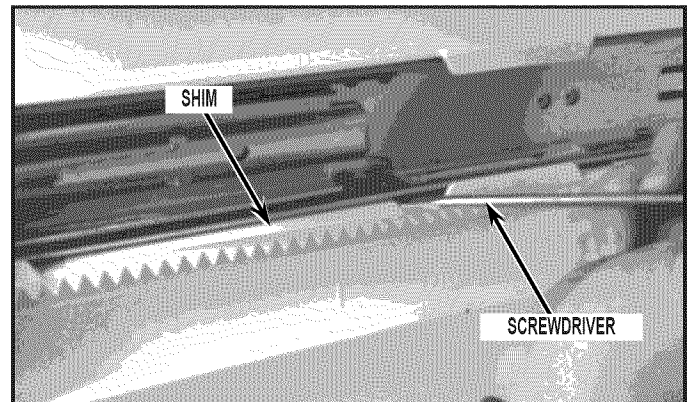


FIGURE 5