CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING. LABEL ALL WIRES PRIOR TO DISCONNECTION WHEN SERVICING CONTROLS. WIRING ERRORS CAN CAUSE IMPROPER AND DANGEROUS OPERATION. VERIFY PROPER OPERATION AFTER SERVICING.

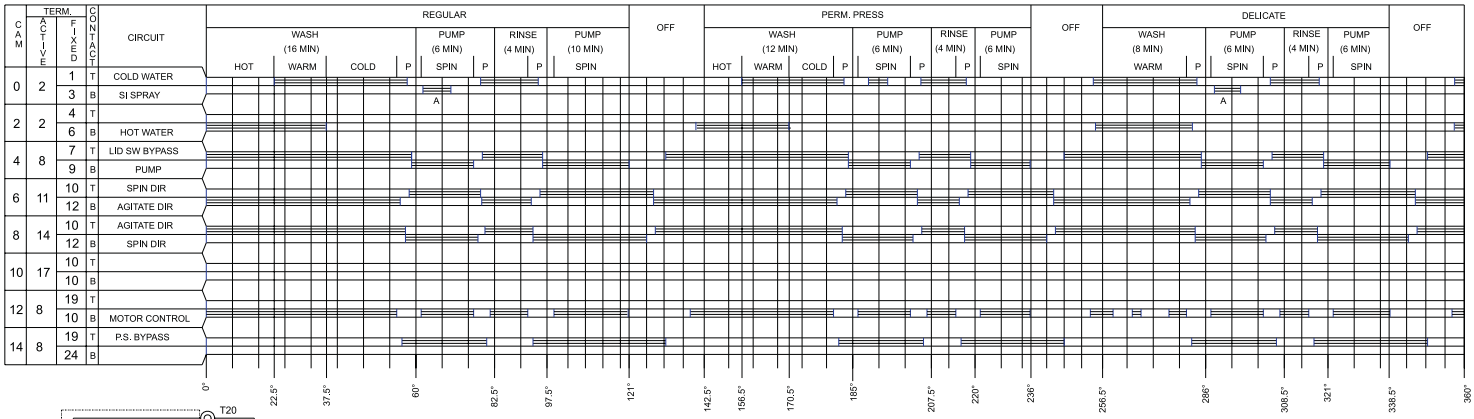

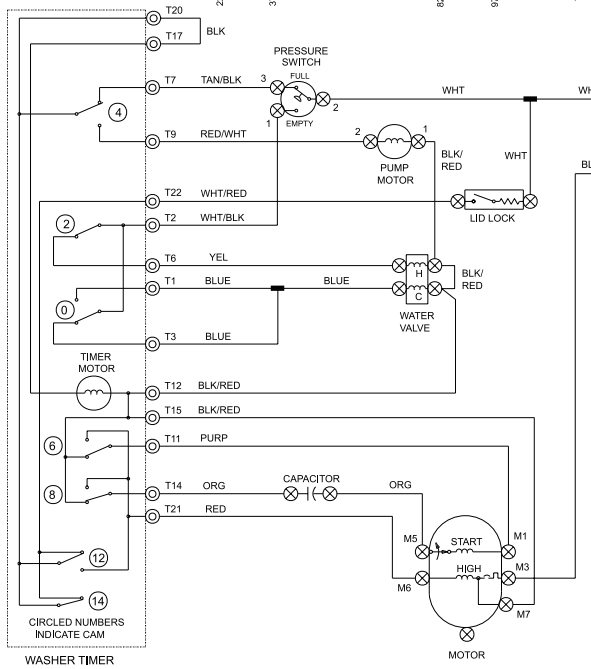





WIRING CODES	
⊙	PLUG-IN TIMER
⊗	QUICK DISCONNECT TERMINAL
⊥	CONNECTION
+	NO CONNECTION
	MOTOR SWITCH
	SPLICE
	MOTOR PROTECTOR
	CHASSIS (CABINET) GROUND
○	SCREW TERMINAL
	HARNESS CONNECTOR TERMINAL
⊗	INSULATED TERMINAL

NOTES;
1. ALL WIRING MUST CONFORM TO LOCAL ELECTRICAL CODES.
2. CONNECT DRYER TO 15 AMP INDIVIDUAL BRANCH CIRCUIT.
3. DRYER TIMER SHOWN IN OFF POSITION DOOR SWITCH CLOSED, MOTOR AT REST, AN THERMOSTAT CLOSED.

WASHER TIMER SHOWN IN ON POSITION AND PRESSURE SWITCH FULL.

CYCLES

CIRCUIT		OFF	32 MIN AUTO DRY	OFF	90 MIN TIMED DRY	OFF	31 MIN AIR FLUFF
HEATER	B-A						
THERM HTR	D-E						
MOTOR	B-C						
TMR MTR	X-TM						

THE BAR CHART ABOVE REPRESENTS ONE COMPLETE REVOLUTION OF TIMER SHAFT.

SHADED PORTION OF BAR CHART INDICATES THE PROPORTIONAL TIMES THAT INTERNAL TIMER CONTACTS ARE CLOSED.

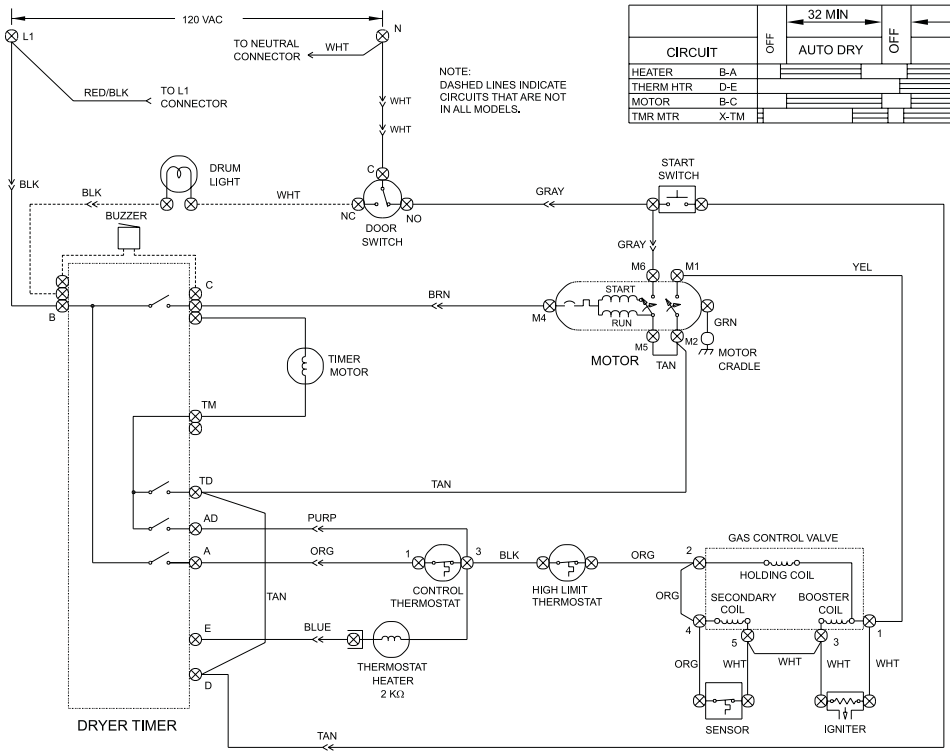

G

WIRING DIAGRAM
P/N 131990600 A