CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING

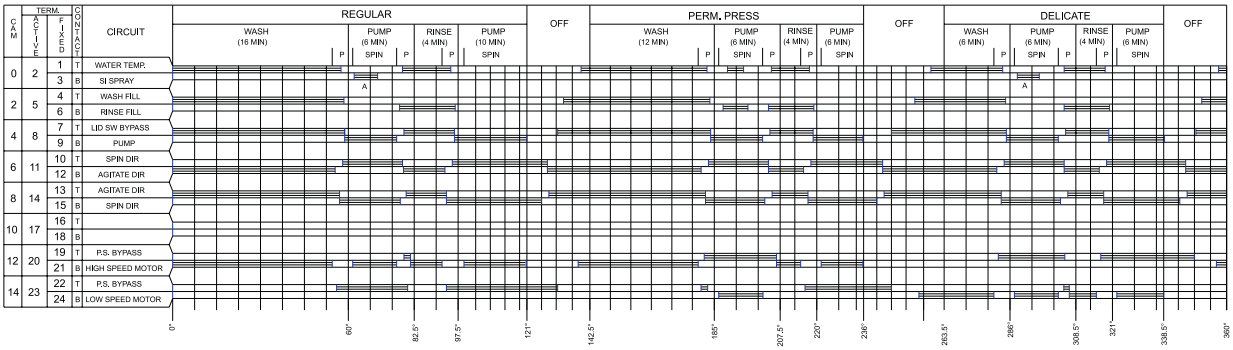

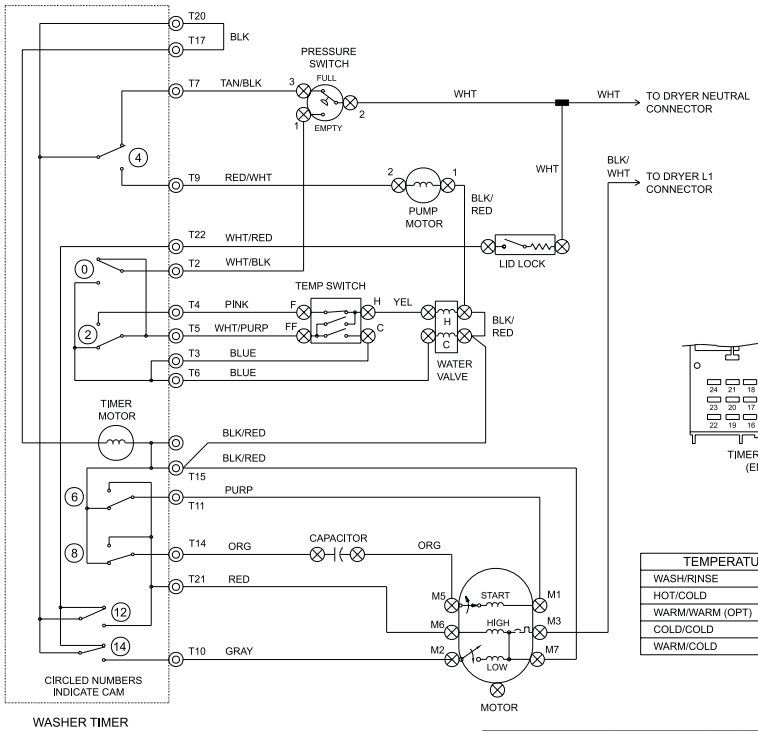

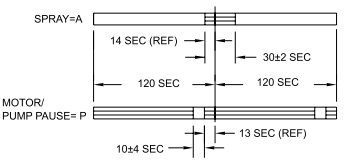

DETAIL FOR SPRAY SUBINTERVAL AND PAUSE FOR MOTOR AND PUMP CONTROL CIRCUITS.



TIMER PLUG-MALE (END VIEW)

TEMPERATURE SWITCH CIRCUIT			
WASH/RINSE	F-H	FF-H	FF-C
HOT/COLD	X	O	O
WARM/WARM (OPT)	O	X	X
COLD/COLD	O	0	X
WARM/COLD	X	O	X

X=CLOSED O=OPEN

WIRING CODES
PLUG-IN TIMER
QUICK DISCONNECT TERMINAL
CONNECTION
NO CONNECTION
MOTOR SWITCH
SPLICE
MOTOR PROTECTOR
CHASSIS (CABINET) GROUND
SCREW TERMINAL
HARNESS CONNECTOR TERMINAL
INSULATED TERMINAL

CYCLES



SHADED PORTION OF BAR CHART INDICATES THE PROPORTIONAL TIMES THAT INTERNAL TIMER CONTACTS ARE CLOSED.

BAR CHART ABOVE REPRESENTS ONE COMPLETE REVOLUTION OF TIMER SHAFT.

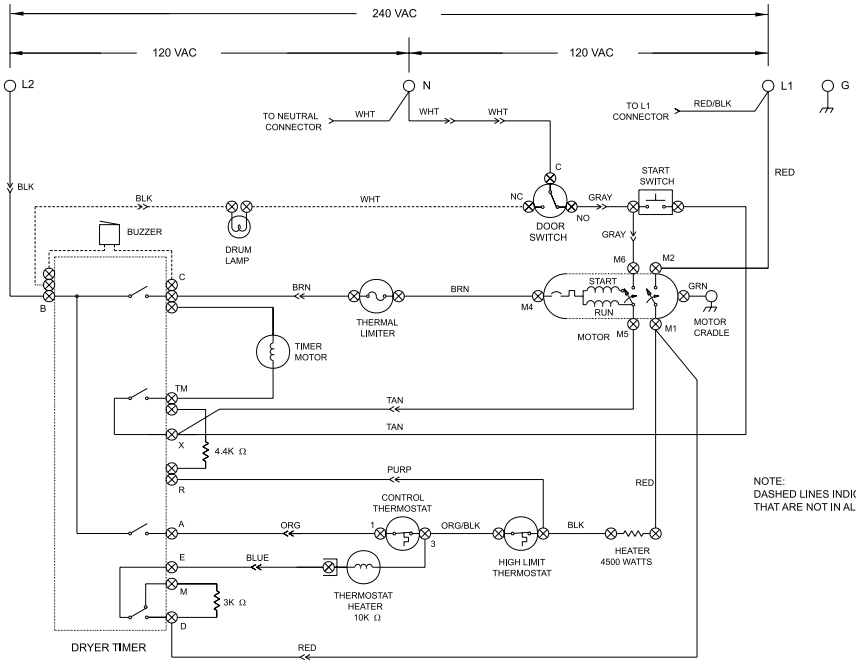

NOTE:
DASHED LINES INDICATE CIRCUITS THAT ARE NOT IN ALL MODELS.

NOTES:
1. ALL WIRING MUST CONFORM TO LOCAL ELECTRICAL CODES.
2. CONNECT DRYER TO 30 AMP INDIVIDUAL BRANCH CIRCUIT.
3. DRYER TIMER SHOWN IN OFF POSITION DOOR SWITCH CLOSED, MOTOR AT REST, AN THERMOSTAT CLOSED.

WASHER TIMER SHOWN IN ON POSITION TEMPERATURE SELECTOR SWITCH AT HOT WASH/COLD RINSE, AND PRESSURE SWITCH FULL.

E

WIRING DIAGRAM
P/N 131998800