


KitchenAid[®]

Superba™ Selectra
Solid State Dishwasher
With Whisper Quiet™ System

Model KUDA22ST

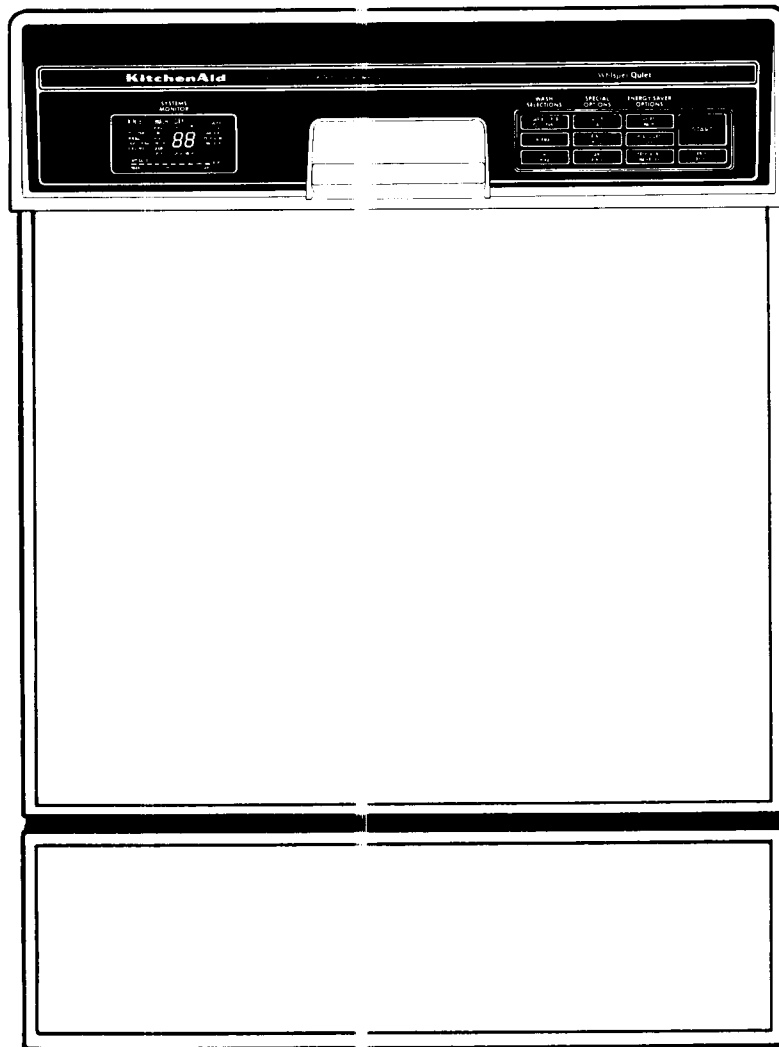

USE and CARE GUIDE

Table of Contents

| | |
|--|------------|
| Important Safety Instructions | 3 |
| Ownership Registration Card | 4 |
| Important Facts | 4 |
| Dishwasher Features | 5 |
| Operating Your Dishwasher | 6 |
| Sure-Temp™ Water Heating | 6 |
| Energy Saving Tips. | 7 |
| Programming Your Dishwasher | 7 |
| Dishwasher Cycles | 8-10 |
| Energy Saver Options | 10 |
| Systems Monitor | 11 |
| Loading Your Dishwasher | 12 |
| Upper Rack. | 13 |
| Flex-O-Dividers™ | 13 |
| Lower Rack | 14 |
| Silverware Basket. | 15 |
| Small Items Basket. | 15 |
| Filling The Detergent Dispenser | 16 |
| How Much Detergent To Use. | 17 |
| Caring For Your Dishwasher | 18 |
| Sure-Scrub™ Wash System | 18-19 |
| Low Phosphate Detergents | 19 |
| Rinse Agents | 20 |
| Seasonal Storage | 20 |
| Drain Air Gap | 20 |
| Problem, Cause, Solution Chart | 21-22 |
| Removing Spots And Film | 22 |
| Changing Front Panels | 23-25 |
| Optional Front Panels | 25 |
| Special Tips On Dishwasher Use | 26 |
| If You Need Service Or Assistance. | 27 |
| Warranty | Back Cover |

It is your responsibility to be sure your dishwasher:

- Is installed by a qualified installer.
- Has been installed where it is protected from the elements.
- Has been installed on a floor strong enough to support its weight.
- Has been properly connected to electricity, water and drain.*
- Has been properly electrically grounded.*
- Has had all hang tags and temporary labels removed.
- Is not used by children or anyone unable to operate it properly.
- Is properly maintained.

**See Installation Instructions for complete information.*

Important Safety Instructions

To reduce the risk of fire, electrical shock, or injury when using your dishwasher, follow basic precautions including the following:

1. Read all instructions before using the dishwasher.
2. This dishwasher must be properly connected to electricity and water.
3. Use the dishwasher only for its intended function.
4. Use only detergents and rinse agents recommended for use in a dishwasher, and keep them out of the reach of children.
5. When loading items to be washed:
 - a. Locate sharp items so that they are not likely to damage the door seal.
 - b. Load sharp knives with the handles up to reduce risk of cut-type injuries.
6. **DO NOT** wash plastic items unless marked "dishwasher safe" or the equivalent. For plastic items not so marked, check the manufacturers' recommendations.
7. **DO NOT** touch the heating element during or immediately after use. Element must cool at least 20 minutes to avoid injury.
8. **DO NOT** operate your dishwasher unless all enclosure panels are properly in place.
9. **DO NOT** abuse, sit on or stand on the door or dish rack of the dishwasher.
10. To reduce the risk of injury, do not allow children to play in or on a dishwasher.
11. If hot water has not been used recently (usually two weeks or longer), hydrogen gases may build up in the water heater and the hot water pipes. **HYDROGEN GAS IS EXPLOSIVE.** To prevent injury or damage, before using your dishwasher, turn on all hot water faucets and allow water to run for several minutes. This will allow gases to escape. Do not smoke or use any open flame near the faucet while it is open.
12. When discarding an old dishwasher, always remove the door to prevent accidental entrapment.
13. Install the dishwasher on a floor that is level and strong enough to support the weight.
14. To prevent electrical shock, disconnect electrical power supply to dishwasher before attempting to service.

SAVE THESE INSTRUCTIONS

Ownership Registration

Before you use your dishwasher, please fill out and mail your ownership registration card packed with the Use and Care Guide. This card will enable us to contact you in the unlikely event of a product safety notification and assist us in complying with the provisions of the Consumer Product Safety Act. Return of this card is not necessary to validate your warranty.

Keep a copy of the sales receipt showing the date of purchase and /or date of installation of your dishwasher. **PROOF OF PURCHASE WILL INSURE YOU OF FULL-WARRANTY SERVICE.**

Write down the following information. You will need it if your dishwasher ever requires service.

Model Number* _____

Serial Number* _____

Date Purchased _____

Date Installed _____

Dealer's Name _____

Address _____


Phone _____

*Model and Serial Numbers are located on a label at the left side of the door opening.

Important Facts

- KitchenAid dishwashers operate on 115 volts, 60 hertz A.C. house current. They cannot be converted to operate on 220 volts, 50 or 60 hertz house current.
- To protect against possible rupture of fill valve, **BE SURE** water lines leading to the dishwasher as well as water lines in the dishwasher are protected against freezing. Such ruptures are *not* covered by the warranty. See page 20.
- To prevent accidental entrapment, remove the door when removing an old dishwasher from service or discarding it.

Dishwasher Features

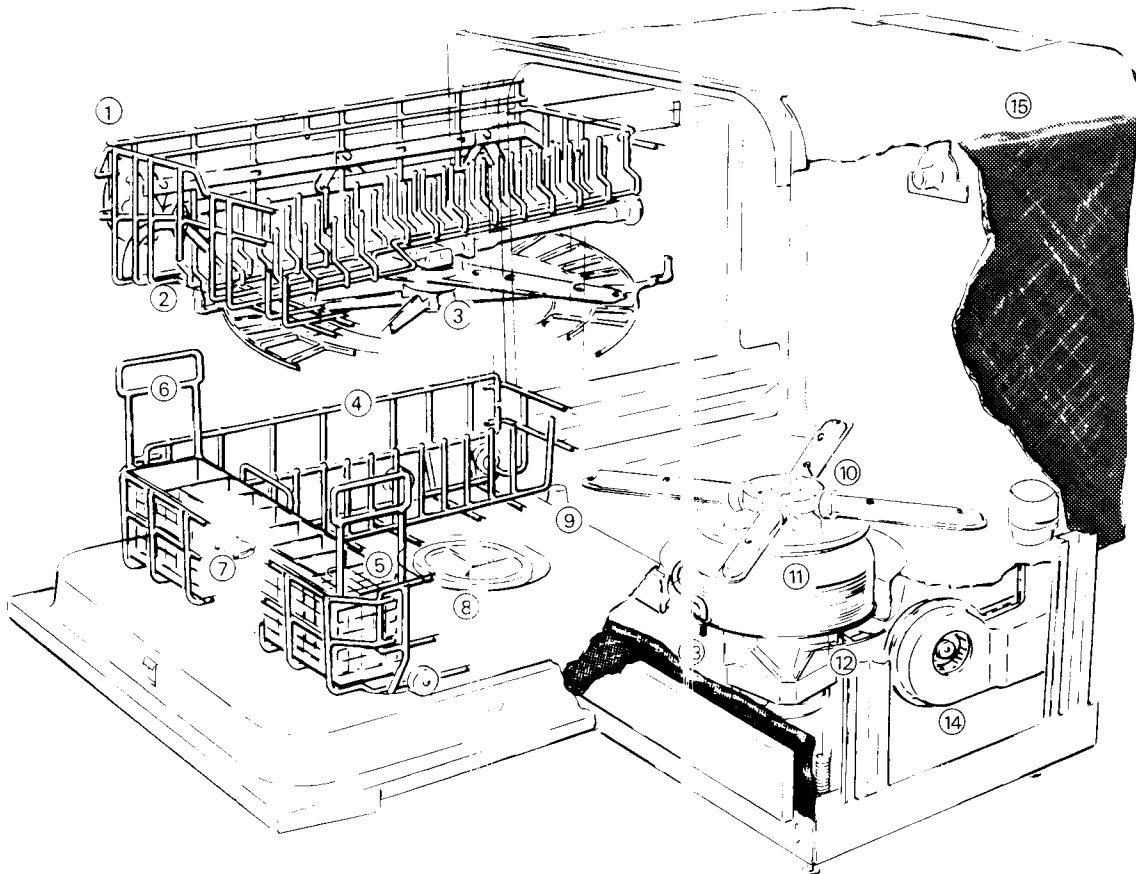

- | | |
|---|--|
| 1. 16-Position Adjustable Upper Rack with Durakote™ Nylon | 8. Detergent Dispenser |
| 2. Stay-Put Flex-O-Dividers™ | 9. Overflow Protection Float |
| 3. Upper Level Power Wash with ChinaGuard™ | 10. 4-Way Hydro Sweep Wash |
| 4. Lower Rack with Durakote™ Nylon | 11. Self-Cleaning Filter with Jet Spray |
| 5. Small Items Basket | 12. Removable Coarse Strainer |
| 6. Cutlery/Silverware Basket | 13. Water-Heating Element |
| 7. Automatic Rinse Agent Dispenser | 14. Flo-Thru™ Drying Fan/Heater |
| | 15. Triple Layer High Density Insulation |

Operating Your Dishwasher

Step 1 Load dishes into racks according to instructions on pages 12-16.

Do not operate dishwasher without racks in place. Water leakage and flooding may result.

Step 2 Add detergent to detergent dispenser. See page 17.

Step 3 Firmly close the door and latch it by pushing the door handle down.

Step 4 Touch desired cycle pad. See page 8 for description of cycles. The rest is automatic. The dishwasher will wash and dry dishware according to the cycle selected.



KitchenAid Whisper Quiet™ System

Your KitchenAid dishwasher is equipped with a unique sound reduction system. The Whisper Quiet™ System is designed to eliminate the common sounds heard while a dishwasher is operating. A triple layer of high density insulation brings you such an unusually quiet operation, you may wonder if your dishwasher is actually on.

Sure-Temp™ Water Heating

The first wash portion of the cycle selected (excluding Rinse and Hold, Light/China and Quick Glass cycles) is delayed until the water is heated to approximately 140°F (60°C). This means that you can turn your home water heater down to provide a minimum of 120°F (49°C) incoming water to the dishwasher rather than 140°F (60°C) — saving you approximately 10% of your total household water heating energy.

If the water temperature inside the dishwasher is 120°F, it will take about 7 minutes to heat the first water fill to 140°F. Higher water temperatures will shorten the cycle time.


The PREHEATING WATER display will glow while water is being heated in the dishwasher, prior to the wash portion of the selected cycle. If the SANI RINSE option is selected, the PREHEATING WATER display will come on again while water is being heated, just prior to the last rinse of the cycle. No water circulation takes place during these water heating periods. The wash and/or rinse portion of the cycle is delayed until the water reaches the correct temperature.

For best dishwashing results, water should be at least 120°F (49°C) as it enters the dishwasher. To check the temperature, use the faucet closest to your dishwasher.

1. Set the faucet control for the hottest water possible. Run water into a glass set in the sink for at least one minute, allowing it to overflow.
2. Place a candy or meat thermometer in the glass and read it at the maximum setting.
3. If the temperature is too low, raise the setting on your water heater.

Energy Saving Tips

- Use the HEATED DRY OFF option whenever possible. If you don't need your dishes right away, it pays to air dry them.
- Flash dry dishes. Because of the heat buildup in dishware during the wash cycle, they can be flash dried (a process which causes water to evaporate very quickly). To flash dry your dishware, push CANCEL pad shortly after dry light comes on; when dry light goes out, open the door and pull out the racks. REMEMBER: In hard water areas, flash drying can increase the likelihood of spotting and filming.
- Turn the temperature setting on your home water heater down to provide a minimum of 120°F (49°C) incoming water to the dishwasher.
- Use the Light/China Wash Cycle when possible. This cycle uses less time than any other wash cycle and is the most energy efficient.
- Run the dishwasher only with a full load.
- Do not rinse dishware before loading.
- Use only the cycle and options that you need.
- Run the dishwasher at night during the summer to avoid daytime heat load.

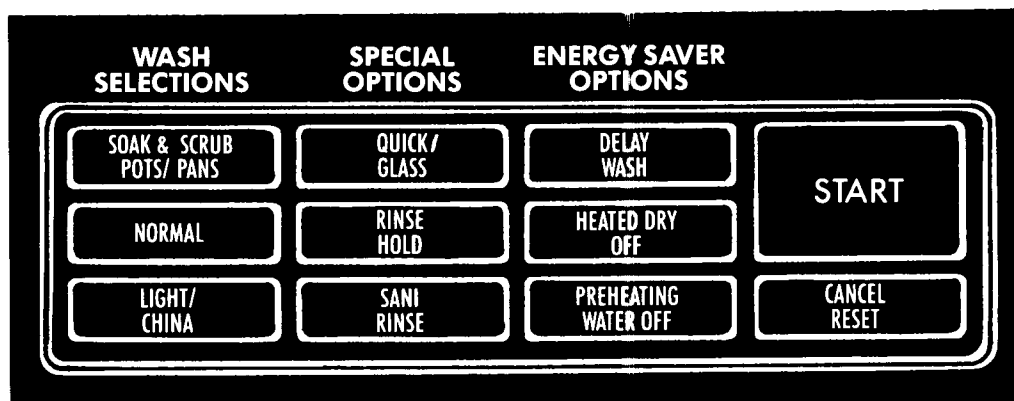

Programming Your Dishwasher

Start at the left side of the controls and work to the right.

To select a cycle, touch the cycle pad you want. Be sure to touch the center of each pad when making selections. A tone signal will be heard and the cycle name will appear in the SYSTEMS MONITOR window.

The lights will go out 30 seconds after the last pad is touched, but the selection is still in the dishwasher's memory.

Adding Dishware During A Cycle

You can add a forgotten item to the dishwasher anytime before the detergent is released in the wash portion of the cycle. To stop the cycle, just unlatch the door handle. However, opening the door during a cycle decreases the cleaning power, so try to load all items before starting the cycle.

To Restart Dishwasher


Close the door and latch the handle. The cycle will start exactly where it stopped.

RINSED ONLY reminds you that dishware has only been rinsed and not washed, using the Rinse & Hold Cycle.

SYSTEMS MONITOR tells you the cycle and what phase of a cycle the dishwasher is in at any time.

ENERGY USE INDICATOR shows the relative amount of energy used for any cycle combination.

WATER TEMPERATURE INDICATOR The Water Temperature Indicator will display progress of the water temperature during Preheating Water and Sani Rinse. The temperature display bars will light from left to right (WARM-HOT-SANI) as the water temperature increases.

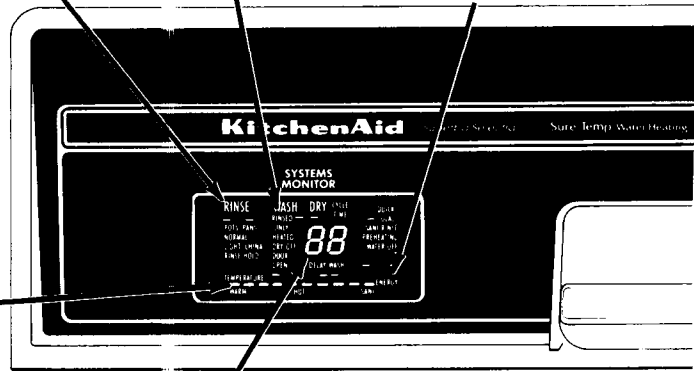

CYCLE TIME WINDOW a count-down timer which shows the amount of time left in a cycle, the number of hours you have selected to delay a cycle, and a number of other special signals.

Dishwasher Cycles

WASH SELECTION

Soak & Scrub (Pots/Pans) Cycle is used to soak, wash and dry hard-to-clean heavily soiled pots, pans and casseroles along with regular tableware. Choose this cycle for your toughest jobs.

This cycle starts with a soak and scrub period, followed by two wash periods with two rinses, and a heated dry period.

| CYCLE SEQUENCE | | | | | | | TOTAL CYCLE TIME (minutes) | WATER USED (gallons) |
|------------------------|--------------|------|-------|------|-------|-----|----------------------------|----------------------|
| SCRUB SOAK & POTS/PANS | Soak & Scrub | Wash | Rinse | Wash | Rinse | Dry | 95 | 12 |


Normal Wash Cycle is used to wash and dry daily loads with moderate amounts of food soil.

There are two wash periods and two rinses, followed by a heated dry period.

| CYCLE SEQUENCE | | | | | | | TOTAL CYCLE TIME (minutes) | WATER USED (gallons) |
|----------------|------|-------|------|-------|-----|-----|----------------------------|----------------------|
| NORMAL WASH | Wash | Rinse | Wash | Rinse | Dry | Off | 73 | 9.75 |

WASH SELECTION
choose from Soak & Scrub (Pots/Pans), Normal Wash and Light/China Wash.

ENERGY SAVER OPTIONS
choose from Delay Wash, Heated Dry Off and Preheating Water Off.

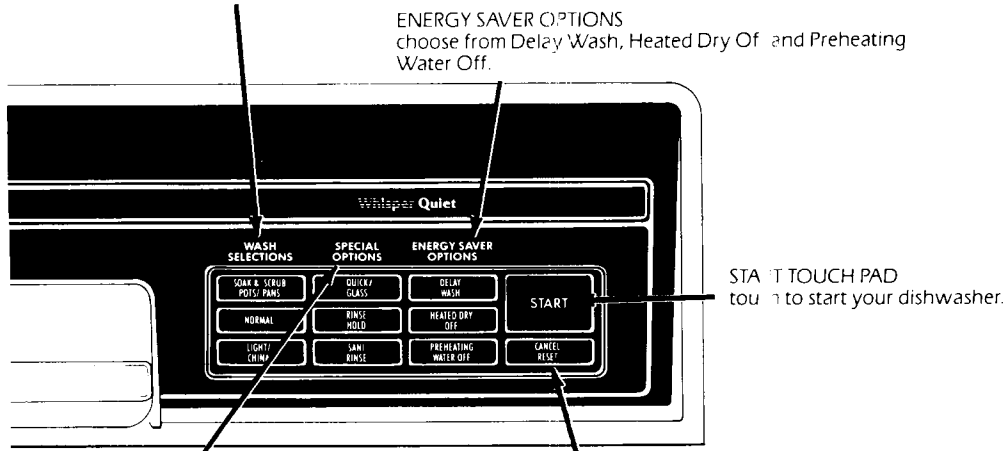

SPECIAL OPTIONS
choose from Quick/Glass, Rinse & Hold and Sani Rinse.

CANCEL/RESET TOUCH PAD
touch to stop the dishwasher's action anytime and reset it for the next cycle.

START TOUCH PAD
touch to start your dishwasher.

Light/China Cycle is used to wash and dry daily loads with light to normal amounts of food soil. This cycle uses less time than any other wash cycle and is the most energy efficient.

There are two wash periods and two rinses, followed by a heated dry period.

| CYCLE SEQUENCE | | TOTAL CYCLE TIME (minutes) | WATER USED (gallons) |
|----------------|--|----------------------------|----------------------|
| LIGHT/CHINA | | 44 | 9.75 |

SPECIAL OPTIONS

Quick/Glass Cycle is used to quickly wash daily loads with light amounts of food soil such as glasses, coffee cups, saucers and dessert dishes.

There is one wash period with before and after rinses and a heated dry period. Water is not heated during this cycle.

Important: To save time and energy, touch the HEATED DRY OFF pad. The total cycle time is then reduced by one-half.

| CYCLE SEQUENCE | | TOTAL CYCLE TIME (minutes) | WATER USED (gallons) |
|----------------|--|--|----------------------|
| QUICK/GLASS | | 30 w/heated dry 14 w/heated dry off | 7.5 |

Rinse & Hold Cycle is used to rinse food soil from partial loads of dishes until a full load is accumulated. No detergent is used. Dishware is kept moist until a complete wash and dry cycle can be run.

This cycle provides one rinse. Following this cycle, the RINSED ONLY LIGHT on the left side of the control panel will glow when the door is unlatched as a reminder that the dishes have only been rinsed, not washed. The SANI RINSE and HEATED DRY OFF options do not function with the RINSE & HOLD CYCLE.

| CYCLE SEQUENCE | TOTAL CYCLE TIME (minutes) | WATER USED (gallons) |
|----------------|----------------------------|----------------------|
| RINSE & HOLD | 6 | 2.25 |

Sani Rinse can be used with any Wash Selection (except Quick/Glass) to heat the

final rinse water to approximately 160°F (71°C) to sanitize the dishware.

Energy Saver Options

Delay Wash is used to delay starting a cycle for up to 9 hours, in one hour increments. After making all Wash and Option Selections, press the DELAY WASH pad the appropriate number of times for the number of hours you want to delay a cycle; then touch the START pad.

The DELAY WASH option counts down in reverse. Therefore, you touch once for 9 hour delay, twice for 8 hours, three times for 7 hours, and so on. "H" will flash in the CYCLE TIME WINDOW until you touch START. The number of hours before the cycle begins will always appear in the CYCLE TIME WINDOW. Once the cycle starts, the cycle time will appear in the CYCLE TIME WINDOW.

The dishwasher's memory will remember the last DELAY WASH setting. So if the last setting was for a 6 hour delay, a "6H" will appear in the CYCLE TIME WINDOW and the count-down will begin when the start pad is touched.

To Cancel Delay Wash

If you change your mind and decide not to delay the start of the cycle, cancel the DELAY WASH by touching the CANCEL pad twice; then touch START. The dishwasher will wash and dry your dishware immediately, according to the program previously selected.

Preheating Water Off can be selected with Pots/Pans and Normal cycles. This option eliminates the initial water preheating period which may be desirable if the incoming water temperature is already approximately 140°F.

Heated Dry Off can be used with Pots/Pans, Normal, and Light/China cycles. This option shuts off the heating element as the fan continues to operate, recirculating room temperature air over the dishes.

Start is touched after all selections are made. The dishwasher will wash and dry your dishware according to the program you have selected.

Cancel/Reset is used to cancel any cycle in progress. When this pad is touched, you will hear the sound of water draining. This is normal. The dishwasher will then automatically turn itself off.

To select a new cycle, touch the appropriate pads and then touch START. If a new program is not selected, the previously programmed WASH SELECTION will remain in the dishwasher's memory and may be reselected by touching the START pad only. All SPECIAL OPTIONS and ENERGY SAVER OPTIONS are canceled when the CANCEL pad is touched so these must be reselected.

If your home is equipped with a water softener, make sure the dishwasher is not timed to start during regeneration of the softener.

Systems Monitor

Letters, words, and numbers will appear in the Systems Monitor to let you know what's happening inside your dishwasher. The Systems Monitor tells you . . .



1. Cycle Name

The Cycle Name appears after a cycle selection pad is touched.

2. Cycle Time

The Cycle Time appears and counts down the time remaining in the cycle after the START pad is touched.

3. Cycle Phase

The Cycle Phase will appear after the START pad is touched to let you know what portion of the cycle is being performed, i.e., WASH, RINSE and DRY.

4. Energy Savers

"HEATED DRY OFF", "PREHEATING WATER OFF", and "DELAY WASH" Energy Savers will appear if selected. Otherwise, "HEATED DRY" will be indicated with all Wash Selections. "PREHEATING WATER" will be indicated with Pots/Pans and Normal cycles. "DELAY WASH" can be used with any Wash Selection. This permits the dishwasher to cycle only during desired off peak hours.

5. Water Temperature Indicator

The Water Temperature Indicator will display progress of the water temperature during Preheating Water and Sani Rinse. The temperature display bars will light from left to right (WARM-HOT-SANI) as the water temperature increases.

6. Energy Use Indicator

The Energy Use Indicator will display the relative amount of energy used for any cycle combination. The display bars will light from left to right to indicate more or less energy depending on the wash selection and options chosen.

Other displays include:



Cancel

If the CANCEL pad is touched, CA will appear.



Power Failure

If the power in the house or in the dishwasher has gone off for more than 5 seconds, PF will appear.*



Door Open

If the door has been left open during a cycle, DOOR OPEN will appear.



Cycle Delay

If a cycle delay has been selected, the number of hours will appear, for example "9H."

*This includes an open circuit breaker, a blown fuse, or a loss of service from your local utility. The PF will appear after Power has been restored to the dishwasher and the door is latched. To eliminate the PF, close and latch door, then touch CANCEL. Check the detergent dispenser and refill if empty. Reselect your Wash Cycle, Special Options, and Energy Saver Options, and then touch the START pad.

Important: If the door is closed but not latched, an "L" will appear.

Loading Your Dishwasher

Your KitchenAid dishwasher is designed with lots of loading space. Glasses, mugs, saucers and saucepans can be loaded in either the upper or lower rack. For best results, dishware should be loaded so soiled surfaces face the rotating wash arm.

No hand rinsing is necessary before loading your KitchenAid dishwasher. *Just scrape* leftover food, bones, toothpicks and other hard items from the dishware.


Some foods like eggs, rice, pasta, and cooked cereals may be hard to remove if they are left to dry over a period of time. If you do not plan to wash your dishes fairly soon after use, run a RINSE & HOLD CYCLE to keep them moist until you are ready to run the next wash cycle. Never prewash dishes with a hand dishwashing detergent. It will cause sudsing in the dishwasher and result in poor cleaning and/or spotting and filming on the dishware.

DuraKote™ Nylon Upper and Lower Racks


Your KitchenAid dishwasher is equipped with DuraKote™ Nylon upper and lower racks with Cushion-Tips™ that provide extended life and better protection for your dishes. These racks have an extended three year limited warranty. See your dishwasher warranty on back cover for details.

Adjustable Upper Rack


Your KitchenAid dishwasher features a 16-position upper rack which can easily be adjusted whether empty or full.

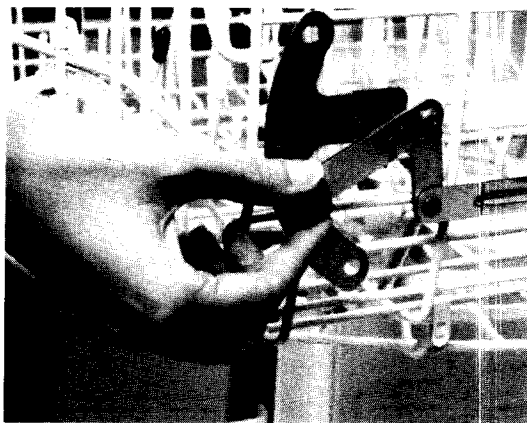


- Pull the upper rack out so the knobs on either side of the rack are easily reached.
- Pull knob on side of rack out from the retainer plate, raise or lower to desired level, and place knob pin into one of the four holes in the retainer.

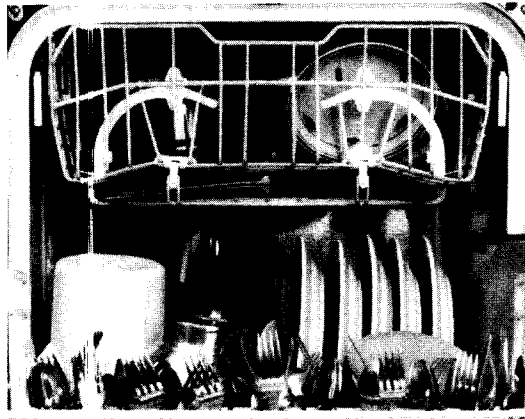

Use the *High Position* when loading platters, trays, large roasting pans and other baking utensils in the lower rack.

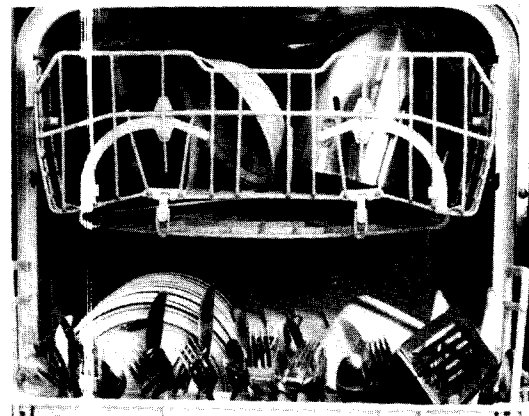


Use the *Low Position* when loading pitchers, deep bowls, and tall stemware in the upper rack.

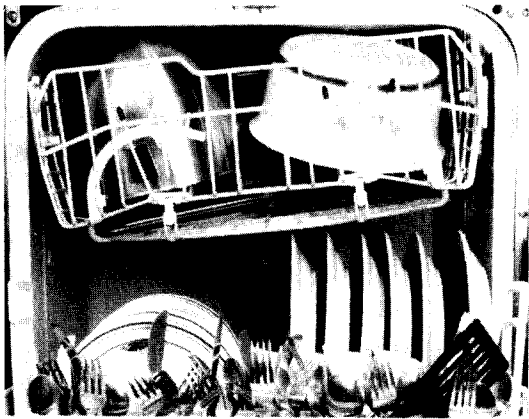


For a *Combination/Tilted Position*, either side of the rack may be raised or lowered independently of the other to accommodate extra large items in both racks.

Flex-O-Dividers™


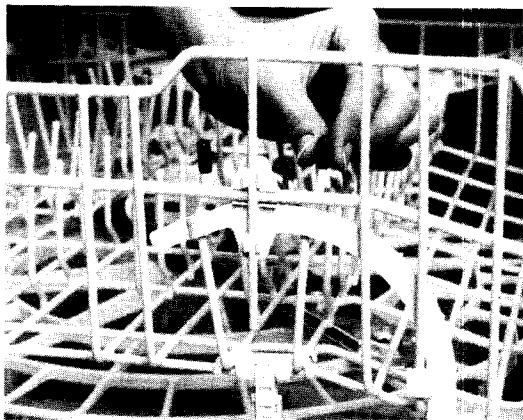


Two adjustable dividers are located on either side of the fixed center row pins. Each divider works independently of the other and can be changed to fit loading needs. To adjust, place thumb and index fingers on pins and squeeze towards each other. Secure pin into selected notch or fold down flat. The outside row folds towards the outside of the rack, and the inside row folds towards the center pins.

Upper Rack Loading Examples

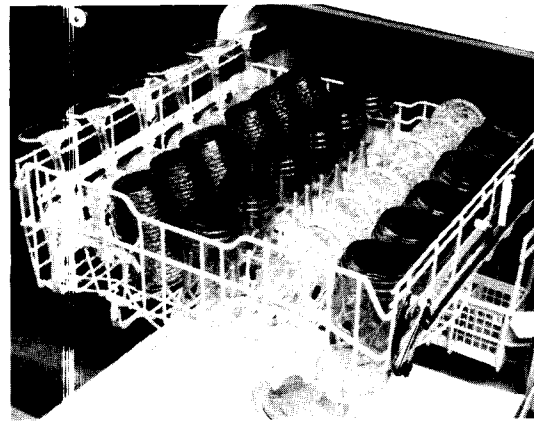


- Lightweight plastics, or glassware and stemware should be locked into place using the outside row of Flex-O-Dividers™. Additional glasses, cups, bowls, saucers, and pans, may also be loaded in the upper rack between and over pins in a stable manner.

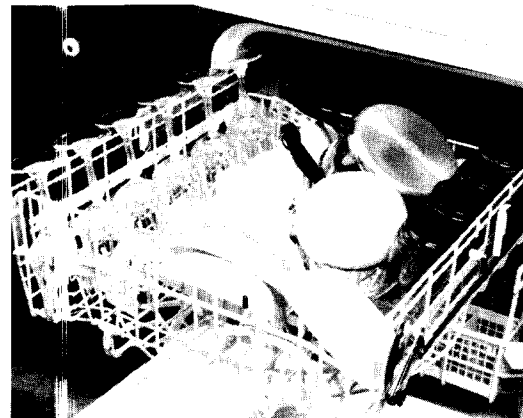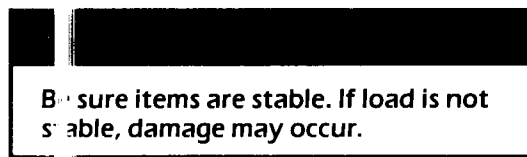


- Load coffee cups and mugs in positions illustrated to insure proper drainage. Tilt cups and mugs with concave bottom surfaces to aid drainage.

Loading Your Dishwasher


Lower Rack Loading Examples

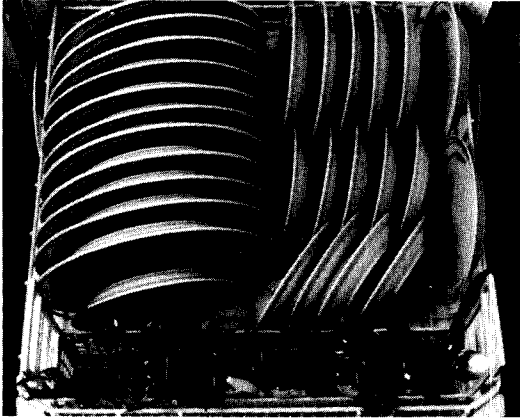


- For maximum capacity and stability of an all-plate load, overlap or "butterfly" small plates on right side, as shown.

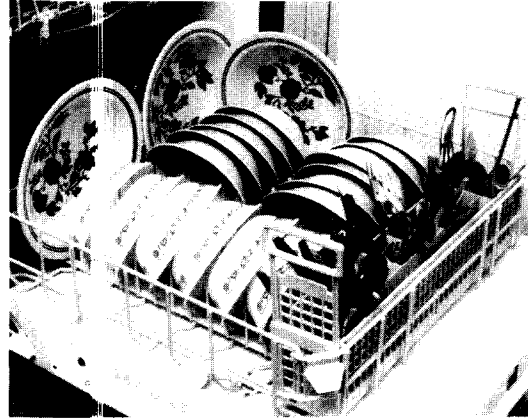

- Cereal/soup bowls may be loaded front to back, side to side and along the edges depending upon the shape of the bowls.

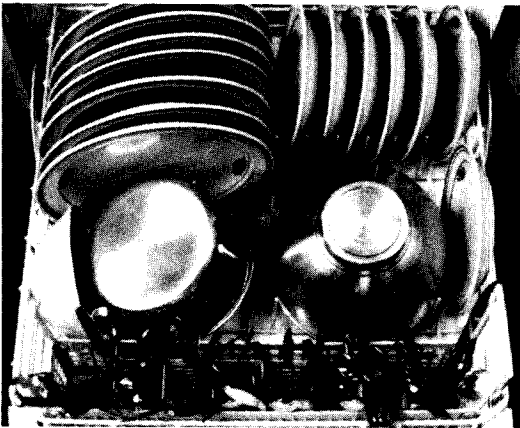

- Plates may be loaded front to back or side to side with pots, pans and large cookware.

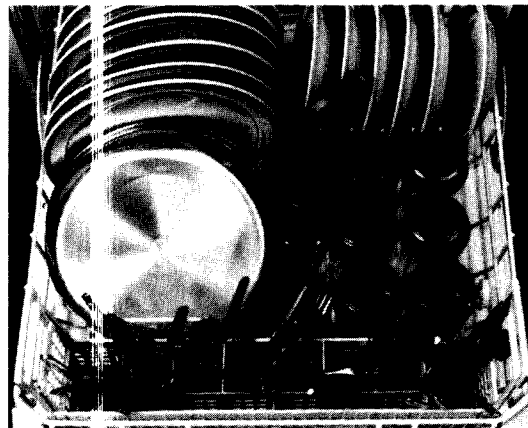


- Glasses may be loaded in the lower rack along with plates, bowls and saucepans.

Silverware Basket


The silverware/cutlery basket can be removed for loading and unloading.

For best washing results:

- Load slim handled silverware with handles up to prevent them from protruding through the basket, possibly causing damage to the silverware or dishwasher.

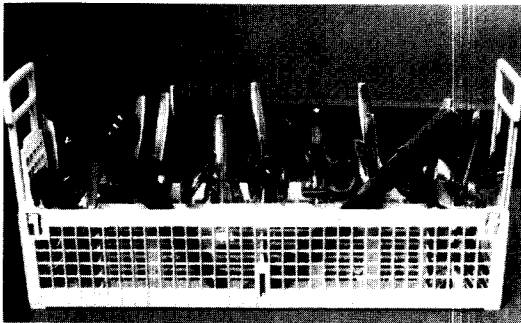


- Load forks and spoons with handles up and down so they do not nest together. Nested items cannot be properly washed.

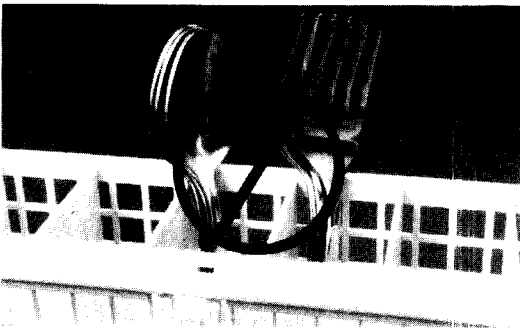


Sharp utensils should be loaded with handles up to prevent possible injury.

- The cutlery section in the front of the basket is for long-handled utensils and long knives.

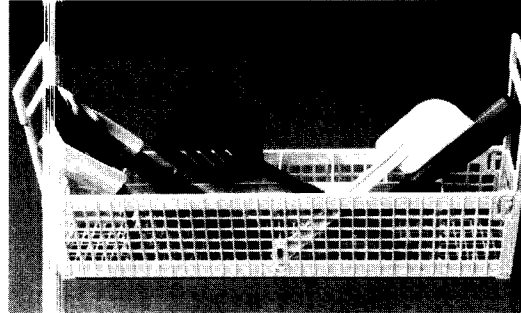

Silver and stainless steel flatware may be damaged if exposed to foods containing salt, vinegar, milk products or fruit juices for long period of time. Use the RINSE & HOLD CYCLE if flatware is not washed immediately after use.

Small Items Basket

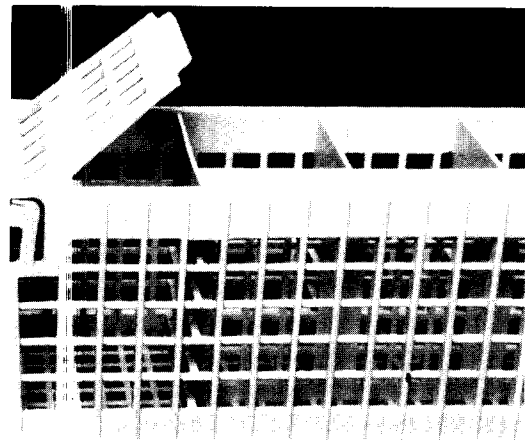

This basket is used for baby bottle nipples, corn holders, measuring spoons, and other small items. It can be placed in either dishwasher rack.



Silverware Basket (cont'd)

Plate Lift Out Section


- The plate lift out section provides added versatility for racking. There are two positions available (C and D).

To Remove: Push back handle (A) to unhook from locking position and lift up and out.

To Replace: While holding handle, position rear of section (B) under back of top cross wire and slip detent (locking device C) into proper retainer (D) or (E).

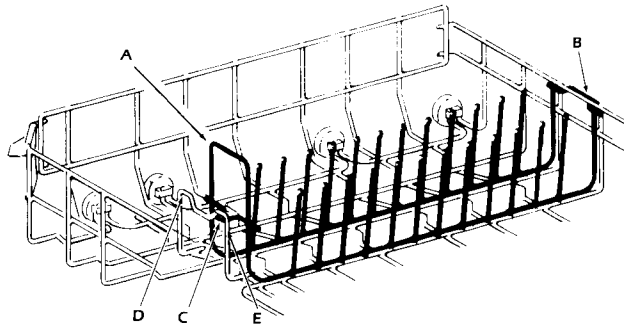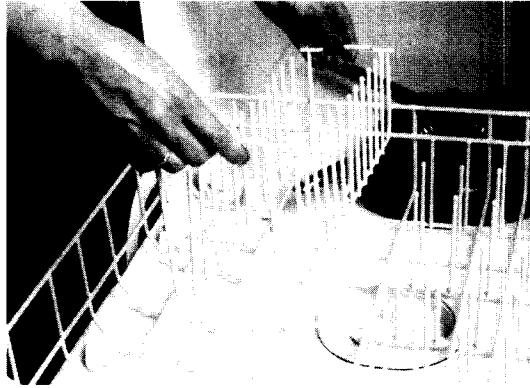


- The silverware basket can be relocated in the lower rack for additional loading flexibility. By positioning plate lift out section into rack retainer on right side (see plate lift out illustration), the basket can be located along the left side (front to back) of the lower rack.

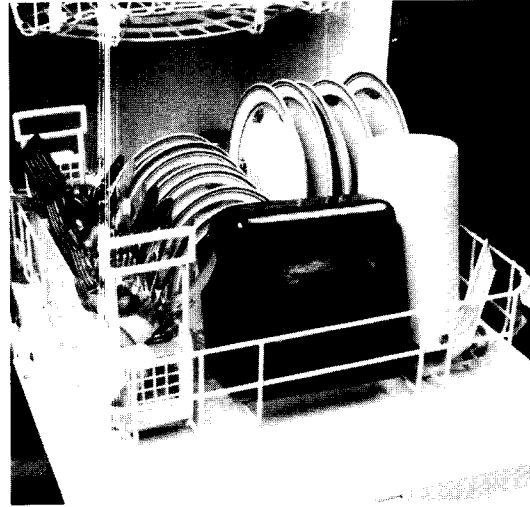

Filling The Detergent Dispenser


1. **USE AUTOMATIC DISHWASHER DETERGENTS.** Never use soap, hand dishwashing detergent, laundry detergent or laundry enzyme products. They will produce excessive suds and slow down the wash arm action which could cause flooding.
2. Add detergent to the dispenser immediately before starting. Detergent exposed to moisture over a period of time may become caked and ineffective. An open box of detergent should stay fresh for about one month.
3. Fill the dispenser with the proper amount of detergent, and close the compartment. The indentation is used for the SOAK AND SCRUB CYCLE ONLY.

Single Fill

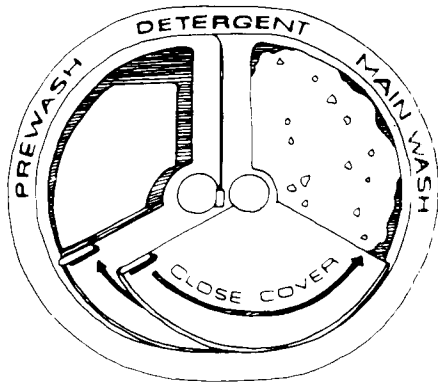


Single Fill is used for the Quick/Glass Cycle and occasionally for the Light/China Wash Cycle when dinnerware is lightly soiled.

Double Fill

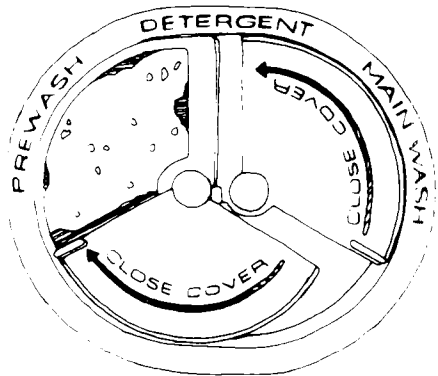

Double Fill is used for the Light/China Cycle and the Normal Wash Cycle when dishes are heavily soiled.

Triple Fill

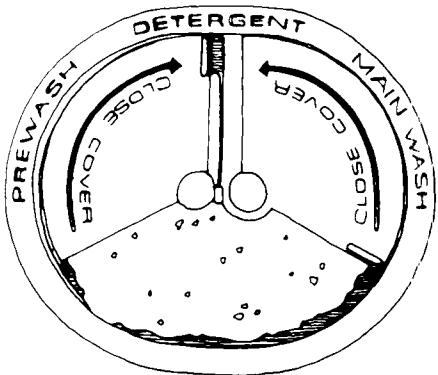

Triple Fill is used for the Soak & Scrub Cycle only.

How Much Detergent To Use


Personal Injury Hazard
Dishwasher detergents and rinse agents can be harmful if taken internally. Store these products out of children's reach.

ALWAYS use at least one tablespoon of automatic dishwashing detergent in Main Wash compartment because there are ingredients in detergent to help protect your dinnerware. The amount of detergent needed depends on the amount of food soil on the dishes and the hardness of water. If you have hard water, you will have to use more detergent than if you have soft water. Excessive amounts of detergent combined with soft water may cause etching of glass. Contact your local water utility, area water softening company or state university extension agent to determine whether your water is hard or soft.

| Water Hardness | Amount of Detergent |
|--|--|
| Soft Water 0-4 grains per gallon | Fill each dispenser half full (approximately 2 tablespoons per dispenser) |
| Medium Hard Water 4-8 grains per gallon | Fill each dispenser ¾ full (approximately 2½ tablespoons per dispenser) |
| Hard Water 8-12 grains per gallon | Fill each dispenser completely (approximately 3 tablespoons per dispenser) |

Sure-Scrub™ Wash System


The Sure-Scrub™ Wash System in your dishwasher provides excellent cleaning results. The wash water is continuously filtered by a triple filtration and soil collector system to prevent food particles from re-depositing on clean dishes. The triple filtration system consists of a removable filter (A), an ultrafine filter (B) and a removable coarse strainer (C).

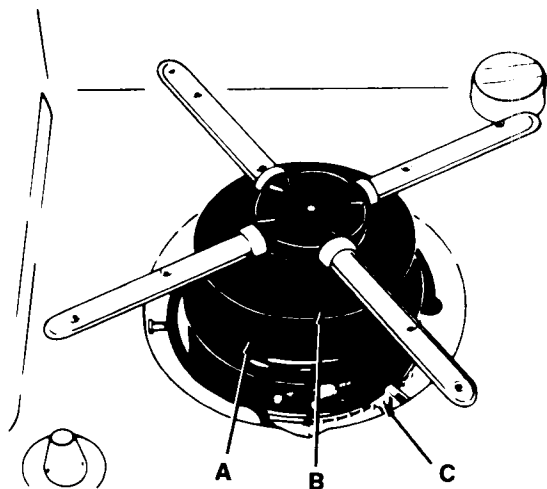

The removable filter continuously filters the wash water, trapping the food particles that have been removed from the dishes on the outside of the filter. These trapped food particles are removed from the filter by the jet spray action of water from the single spray nozzle (D) located under the wash arm. The ultrafine filter is cleaned by the nine water jets (E) beneath the 4-Way Hydro Sweep Wash Arm.

The removable coarse strainer (C) prevents bones, pits and other large objects from entering the pump system. Occasionally check the strainer for such items such as these that may have mistakenly gotten into the dishwasher.

The 4-Way Hydro Sweep Wash Arm, the removable filter and the coarse strainer may be removed and cleaned if necessary.

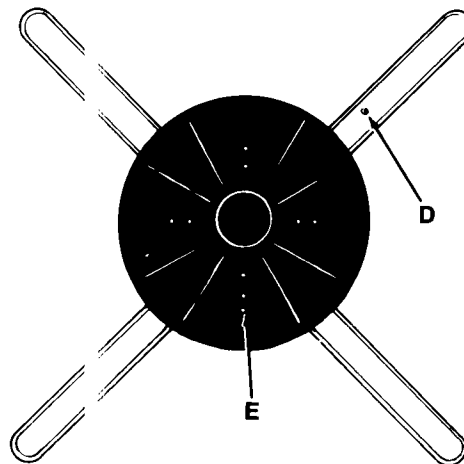

TO REMOVE the filter, first lift the 4-Way Hydro Sweep Wash Arm straight up. Check underside of wash arm to make sure the spray nozzle (D) and the nine water jets (E) are not blocked with food or large objects.

Caring For Your Dishwasher

General Cleaning

The porcelain enamel interior of your dishwasher will seldom need cleaning. However, if mineral deposits from hard water accumulate, the interior can be cleaned with a mild scouring powder or the methods indicated in the section "Removing Spots and Film" on page 22.


DO NOT use any type of cleanser that may cause foaming or sudsing. Run the dishwasher through a normal cycle.

The control panel can be wiped clean with a damp cloth, then dried. NEVER use detergents or abrasive or powdered cleansers which can mar the finish.

The enamel or wood fronts and sides can be cleaned with a soft cloth and a mild, non-abrasive soap and water solution. NEVER use paper towels for cleaning. Always dry with a soft cloth.


Periodically check the sump area for small items which may have fallen from the racks.

Next, lift the removable filter straight up and out. TO CLEAN, scrub filter with a stiff brush under running water. TO REPLACE, snap removable filter over the ultrafine filter and then replace the wash arm. When replacing wash arm, be sure that water jets on the wash arm are facing up.

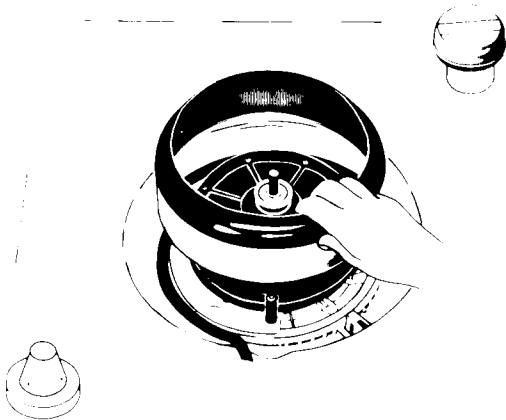

The Overflow Protection Float (G) in the front left corner of the dishwasher tank prevents the dishwasher from overflowing. The float must be in place for the dishwasher to operate.

Important: A small amount of water always remains in the bottom of the dishwasher (under the ultrafine filter) to keep the seal moist and prevent it from drying out and cracking.

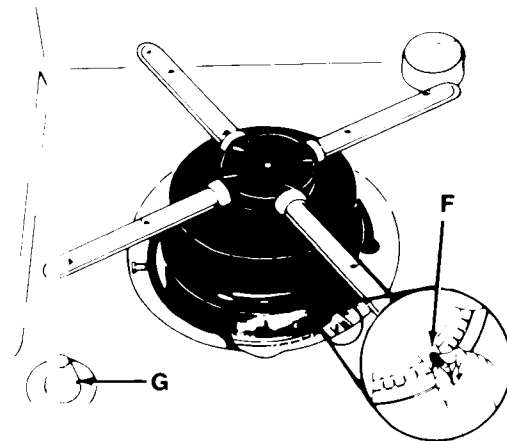

The coarse strainer may be removed if necessary. TO REMOVE, lift strainer out by squeezing center section (F) and remove. TO REPLACE, squeeze center section so clips snap into square notch.

Low Phosphate Detergents

If you live in a state that mandates low-phosphate dishwasher detergents (phosphate content of 8.7 percent or less), you may have to use more detergent, particularly if you have hard water.

Rinse Agents

Your dishwasher uses a liquid rinse agent. A rinse agent helps water to sheet off dishware faster than normal, reducing water spots and speeding up the drying process.


Possible Burn Hazard

Heating element will be hot immediately following use. Do not touch. To avoid burns wait at least 20 minutes after a cycle for the heating element to cool down.

Low phosphate detergents usually work well in soft water, but in hard water they can cause spotting and filming, even if the amount of detergent used is increased.

To fill the rinse agent dispenser, unscrew the cap located to the left of the detergent dispenser. This reservoir will hold 7 fluid ounces of rinse agent, enough to last a few

months. Be sure to replace the cap after filling the reservoir. A small amount of rinse agent is automatically released during the final rinse. Liquid rinse agents such as JET-DRY® are available in your local supermarket.

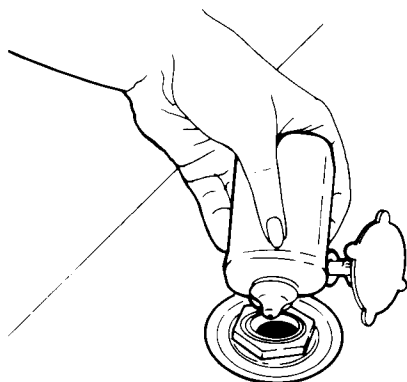

Seasonal Storage

The Summer Season:

Two simple steps will safeguard your KitchenAid dishwasher during an idle summer:

1. Turn off the water supply.
2. Turn off electricity to the dishwasher.

The Winter Season:

To protect against possible rupture of fill valve, BE SURE water lines leading to, as well as in the dishwasher, are well protected against freezing. RUPTURES OF THIS KIND ARE NOT COVERED BY THE WARRANTY.

To safeguard your KitchenAid dishwasher when it is exposed to freezing temperatures in a seasonal dwelling, have a local qualified person do the following:

1. Close and latch the door. Touch the cancel pad and drain dishwasher.
2. Turn off electricity to the dishwasher.
3. Shut off water supply. Place pan under fill valve, and disconnect fill valve at both inlet and outlet sides. Drain water into pan.
4. Place a pan under the drain valve outlet, and disconnect the flexible tubing at the drain valve. Drain machine water into pan. Leave fill and drain valve disconnected.

To restore service, reconnect the fill valve and the connection at the drain valve. Turn on the electricity and the water supply. Close door. Select QUICK/GLASS CYCLE, firmly latch door and let the machine complete its cycle. Check connections to make sure they are water tight and do not leak.

Drain Air Gap

Some state or local plumbing codes require the addition of a drain air gap between a built-in dishwasher and the home drain system. This device protects your dishwasher against water backing up into it when a drain clogs.

The drain air gap is usually located on top of the sink or countertop near the dishwasher, as shown in illustration. Drain air gap accessory part number 300096 is available from KitchenAid.


REMEMBER: This external plumbing device is not part of your KitchenAid Dishwasher.

To Clean the Drain Air Gap:

Clean the drain air gap periodically to insure proper drainage of your dishwasher. Follow drain air gap cleaning instructions provided by the manufacturer. With most types, just lift off the chrome cover, unscrew the plastic cap, and then check for any buildup of soil. Clean, if necessary.

Check the Air Gap Anytime Your Dishwasher Isn't Draining Well

REMEMBER: The warranty provided with your dishwasher does not cover service costs directly associated with the cleaning or repair of the external drain air gap.

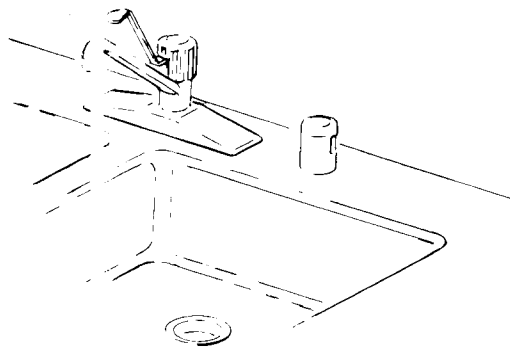

Problem, Cause, Solution Chart

A convenient checklist for handling minor performance problems. Go over this list before calling for service. If you can't solve your dishwasher's problem, turn to page 27 for service information.

| PROBLEM | CAUSE | SOLUTION |
|--|--|--|
| Food Soil Left On Dishes | Slowdown of wash arm due to high suds | Use recommended dishwasher detergents only. Never use soap or laundry detergent. Add more dishwasher detergent to increase amount of suds-inhibitors. |
| | Improper loading | See "Loading Your Dishwasher," pages 12-15. |
| | Insufficient fill due to low water pressure | Home water pressure should be 20 to 120 psi for proper dishwasher fill. A booster pump on the water supply may be necessary if pressure is too low. |
| | Use of incorrect, too little or ineffective detergent | Use recommended dishwasher detergents only. See "How Much Detergent To Use," page 17. Never use less than one tablespoon per load. Detergent must be fresh to be effective. Always store it in a cool, dry area, preferably in an airtight container. |
| | Detergent cakes in dispenser | Use fresh detergent only. Do not allow detergent to sit for several hours in a wet dispenser. Have dispenser checked to make sure it is working properly. |
| | Water temperature is too low | Turn home water heater up so water entering dishwasher is 120°F (49°C) minimum. See recommended procedure "Sure-Temp™ Water Heating," page 6. |
| Spotting and Filming | Filter cleaning spray nozzle on wash arm is blocked | Remove lower wash arm and turn upside down. Check single stainless steel spray nozzle and nine water jets located on underside of wash arm. See page 18. Check to make sure nozzles are not blocked. |
| | Hard water or high mineral content in water | Conditioning the final rinse water with a liquid rinse agent helps eliminate spotting and filming. Keep the dispenser full with a rinse agent, such as JET DRY®, at all times. May be necessary to install a water softener. |
| | Water temperature is too low | Turn home water heater up so water entering dishwasher is 120°F (49°C) minimum. See recommended procedure "Sure-Temp™ Water Heating," page 6. |
| | Use of incorrect detergents | Use recommended dishwasher detergents only. |
| | Incorrect amount of detergent | See "How Much Detergent To Use," page 17. Heavy soil and/or hard water generally require extra detergent. |
| | Use of ineffective detergents | Detergent should be fresh. Store in a cool, dry place, preferably in an airtight container. Discard lumpy detergent. |
| Cycle Takes Extremely Long Time | Insufficient fill caused by low water pressure | Home water pressure should be 20 to 120 psi for proper dishwasher fill. A booster pump on the water supply may be necessary if pressure is too low. |
| | Water temperature is too low | Turn home water heater up so water entering dishwasher is 120°F (49°C) minimum. See recommended procedure "Sure-Temp™ Water Heating," page 6. |
| Dishes Do Not Dry Completely | Dishes do not drain properly | Dishes must have proper water drainage. Do not overload. Follow instructions for loading in dishwasher Use and Care Guide. Use a liquid rinse agent to speed draining. |
| | Plastics | Some plastics, due to material, may need to be towel dried. |
| Silica Film or Etching (Silica Film is a White Iridescent Deposit; Etching is a Cloudy Film) | A water chemical reaction with certain types of glassware. Usually caused by some combination of soft or softened water, alkaline washing solutions, insufficient rinsing, overloading the dishwasher, and heat of drying. | It may not be possible to prevent problem, except by hand washing. To retard this process, use a minimum amount of detergent but not less than one tablespoon per load. Use a liquid rinse agent and underload the dishwasher to allow thorough rinsing. Remove glasses from dishwasher before dry cycle. Silica film and etching are permanent and cannot be removed. Use HEATED DRY OFF. |

| | | | |
|--|--|--|--|
| Black or Gray Marks on Dishes | Aluminum markings | Aluminum pieces should not be dishwasher washed because they may break down and cause marking. Aluminum markings can be removed by using a mild abrasive cleanser. | Dishes should be loaded so that they will not rub against each other. Throw-away aluminum items should not be washed because they may break down and cause marking. Aluminum markings can be removed by using a mild abrasive cleanser. |
| Brown Stains on Dinnerware and Dishwasher Interior | High iron or manganese content in water supply | Remove by washing dishes (after food soil has been removed) with 1 teaspoon to 1 tablespoon of citric acid crystals added to Main Wash compartment of detergent dispenser. Do not use detergent. Follow with a LIGHT/CHINA WASH CYCLE with detergent. If treatment is needed more often than every other month, the installation of an iron removal unit is recommended. | Remove by washing dishes (after food soil has been removed) with 1 teaspoon to 1 tablespoon of citric acid crystals added to Main Wash compartment of detergent dispenser. Do not use detergent. Follow with a LIGHT/CHINA WASH CYCLE with detergent. If treatment is needed more often than every other month, the installation of an iron removal unit is recommended. |
| White Spots on Cookware with Non-Stick Finish | Seasoning removed by dishwasher detergents | Re-season cookware after dishwasher washing. | Re-season cookware after dishwasher washing. |
| Odor in the Dishwasher | Dishes only washed every two to three days | Run a RINSE & HOLD cycle at least once or twice a day until a full load is accumulated. | Run a RINSE & HOLD CYCLE at least once or twice a day until a full load is accumulated. |
| Chipping of Dishware | Improper loading | Load dishes and glassware so that they are stable and do not strike together from washing action. (Note: Some types of china and glassware are too delicate for automatic dishwashing and should be hand washed; for example: antiques, featheredged and similar types.) Moving racks in and out smoothly will also minimize chipping. | Load dishes and glassware so that they are stable and do not strike together from washing action. (Note: Some types of china and glassware are too delicate for automatic dishwashing and should be hand washed; for example: antiques, featheredged and similar types.) Moving racks in and out smoothly will also minimize chipping. |
| Stainless Steel Filter Needs Frequent Cleaning | Filter is not placed in dishwasher correctly | Make sure stainless steel filter is seated properly under wash arm. See page 19. | Make sure stainless steel filter is seated properly under wash arm. See page 19. |
| | Spray nozzle on wash arm is blocked | Remove lower wash arm — see page 18 — and turn upside down. On under side of each tube is an indentation. In one of these indentations is a nozzle (hole) which cleans filter. If this nozzle is blocked, clean out with toothpick. | Remove lower wash arm — see page 18 — and turn upside down. On under side of each tube is an indentation. In one of these indentations is a nozzle (hole) which cleans filter. If this nozzle is blocked, clean out with toothpick. |
| | Dishes not scraped before loading | Make sure leftover food, bones, toothpicks and other hard items are scraped from dinnerware before loading. | Make sure leftover food, bones, toothpicks and other hard items are scraped from dinnerware before loading. |

Removing Spots and Film

To remove spots and film on dishware and glasses, or hard water film on the interior of the dishwasher, you may want to use stripping products. These products are available in the detergent section of your local grocery store; follow the manufacturers' directions.

Or you may use vinegar with the following procedure:

1. Load clean dishes and glasses in dishwasher in regular manner. Do not load silverware or other metals in the dishwasher.
2. Close and latch door and select QUICK/GLASS CYCLE and HEATED DRY OFF. Do not use detergent. When dishwasher has filled, unlatch and open door. Add 2 cup of household vinegar. Close and latch door.
3. For a final polish, put two tablespoons of non-precipitating type water conditioner in the right-hand Main Wash compartment of detergent dispenser and run dishwasher through QUICK/GLASS CYCLE with HEATED DRY OFF.

Changing Front Panels

Your new KitchenAid dishwasher comes with a stainless steel trim kit and two reversible front panels installed one behind the other. You can choose from almond or white (front and back of one panel) and black or harvest wheat (front and back of the second panel).


If you want to change the color of the panels, follow the instructions below:

Electrical Shock Hazard


Disconnect electrical power supply to dishwasher before changing panels. Failure to do so could result in electrical shock or personal injury.

Upper Panel:

1. Disconnect electrical power supply.
2. Pull door open. Remove the two screws (A) on each side of the dishwasher door that secure the upper panel assembly.
3. Close door while holding upper panel in place. Pull out lower edge of panel until top edge of panel drops down.
4. Place panel on a smooth, flat surface and remove three screws (B) from either side of panel to remove the trim strip (C).
5. Slide the panel out. Handle carefully so the panel will not be scratched or bent. Turn the panel to the desired color. Place the color panel in position then push the filler panel in behind it.

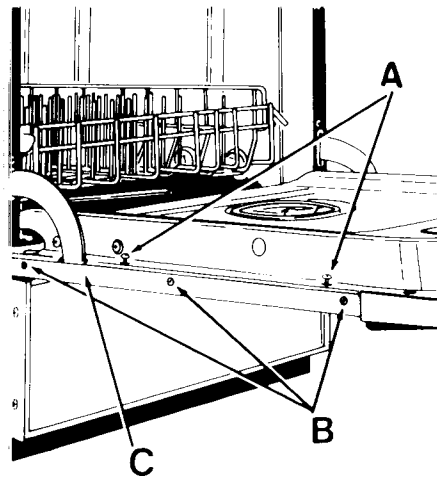


6. Replace the trim strip and the three screws.
7. With hands placed at sides of panel trim, slide the top edge of the panel up into position under the control panel (see illustration to the right).
8. Hold the panel in place and open the door.
9. Hold panel in position with one hand. Replace the two screws (A) on each side of the dishwasher door that secure the panel assembly.

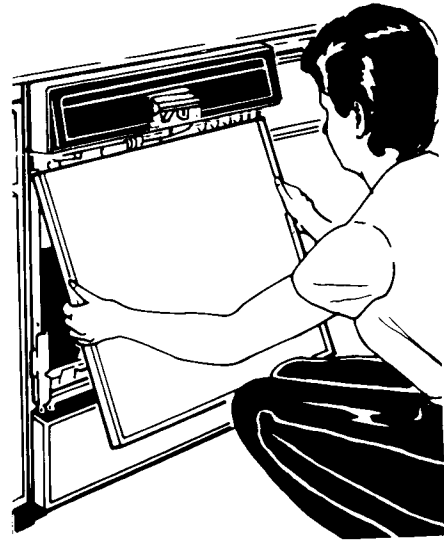

Lower Panel:

1. Remove two screws (D) located under panel.
2. With hands placed under ends of panel, lift support tabs (E) and pull out until tabs clear kick plate (F).
3. Pull lower panel down until side flanges (G) clear the support strip (H). Lower panel is then removed from dishwasher.
4. Place panel on a smooth, flat surface and remove the two screws (I) from either side of the trim. Take off the loosened piece of trim.

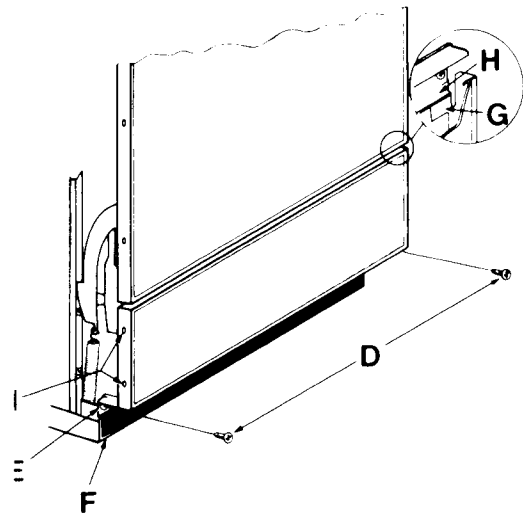

Optional Front Panels

5. Slide the panel out. Handle carefully so the panel will not be scratched or bent. Turn the panel to the desired color. Place the color panel in position then push the filler panel in place.
6. Replace the trim and screws (I).
7. Holding the assembled lower panel, slide the panel up onto the dishwasher front so that the side flanges (G), fit up behind the support strip (H). If this is done improperly, the lower panel will be loose and may fall off the dishwasher.
8. Lift support tabs (E) of panel up and push lower portion of panel back until support tabs (E) rest on kick plate (F).
9. Replace the screws (D).
10. Check that upper and lower panels are secure.
11. Reconnect electrical power supply.

1. Wood and Decorative Panels

The stainless front trim will accommodate a custom wood front or a decorative panel inserted 1/4 inch thick. Some wood panels and decorative panels are heavy and may require readjustment of the door springs. For more information on installing a custom wood front refer to the Dishwasher Installation Instructions. If you have misplaced these instructions, please write to:

Consumer Relations Department
KitchenAid, Inc.
P.O. Box 558
East Troy, MI 49085-0558

2. Solid Colors

If the four colors provided with your dishwasher do not match your kitchen decor, optional panels are available from your KitchenAid dealer in a variety of decorator colors.

Special Tips on Dishwasher Use

What Can and Cannot Be Washed in Your Dishwasher

Most tableware, cookware and silverware can be safely washed in your KitchenAid dishwasher. If you have any doubts about a particular piece of dishware, check with the manufacturer to see if it is dishwasher safe.

REMEMBER: It is the user's responsibility to determine if dishware should be washed in a dishwasher.

| Material | Dishwasher Safe? | Exceptions/ Special Information | Material | Dishwasher Safe? | Exceptions/ Special Information |
|----------------------|------------------|--|--------------------------------|------------------|---|
| Aluminum | Yes | High water temperature and detergents may affect finish of anodized aluminum. | Disposable Plastics | No | Cannot withstand high water temperatures and detergents. |
| Cast Iron | No | Seasoning will be removed, and iron will rust. | Plastics | Yes | Always check manufacturers' recommendations before washing. Plastics vary in their capacity to withstand high water temperatures and detergents. |
| China/ Stoneware | Yes | Always check manufacturers' recommendations before washing. Antique, hand-painted or over-the-glaze patterns may fade. Gold leaf may discolor. | Stainless Steel | Yes | Run a RINSE & HOLD CYCLE if not washing immediately. Prolonged contact with foods containing salt, vinegar, milk products or fruit juice could damage finish. |
| Crystal | Yes | Always check manufacturers' recommendations before washing. Some types of leaded crystal may etch with repeated washings. | Sterling Silver or Silverplate | Yes | Run a RINSE & HOLD CYCLE if not washing immediately. Prolonged contact with food containing salt, acid or sulfide (eggs, mayonnaise and seafood) could damage finish. |
| Gold | No | Gold-colored flatware will discolor. | Tin | No | May rust. |
| Glass | Yes | Milk glass will yellow with repeated dishwasher washing. | Wooden Ware | No | Always check manufacturers' recommendations before washing. Untreated wood may warp, crack or lose its finish. |
| Hollow-Handle Knives | No | Handles of some knives are attached to the blade with adhesives which may loosen if dishwasher washed. | | | |
| Pewter | No | High water temperatures and detergent may discolor or pit finish. | | | |

If You Need Service or Assistance

Follow These Steps

1. If your dishwasher should fail to operate, review the following list before calling your dealer. You could save the cost of a service call.

- Has a fuse blown, or is the circuit breaker open?
- Is the door closed and latched, and a cycle selected?
- Is the overflow protection float in place? See page 19.
- Is the water supply to the dishwasher turned on?

2. If your dishwasher is not washing properly, refer to the Problem, Cause, Solution chart on page 21 and 22 before you make a service call.

3. If the problem is not due to one of the above items, see "How To Arrange for Service" listed in the Warranty Statement.

4. If you are not satisfied with the action taken, contact the Major Appliance Consumer Action Panel (MACAP). MACAP is a group of independent consumer experts that voices consumer views at the highest levels of the major appliance industry. Contact them only when the dealer, authorized servicing outlet, wholesale distributor, and KitchenAid, Inc., have failed to resolve your problem.

Major Appliance Consumer
Action Panel
20 North Wacker Drive
Chicago, IL 60606

MACAP will in turn inform us of your action.

In all correspondence about your dishwasher, please include:

- Date
- Your Name, Address and Telephone Number
- Type of Appliance
- Brand
- Model Number
- Serial Number
- Date Purchased
- Dealer from Which Purchased (include address)
- Servicing Agent (include name and address if different from dealer's)
- Location of Appliance
- A Clear Description of the Problem and the Service Required

Dishwasher Warranty

SOLID STATE DISHWASHER

| LENGTH OF WARRANTY: | KITCHENAID WILL PAY FOR: | KITCHENAID WILL NOT PAY FOR: |
|--|---|--|
| ONE YEAR FULL WARRANTY: FROM DATE OF INSTALLATION. | Replacement parts and repair labor to correct defects in materials or workmanship. Service must be provided by an authorized KitchenAid servicing outlet. | A. Service calls to: 1. Correct the installation of the dishwasher. 2. Instruct you how to use the dishwasher. 3. Replace house fuses or correct house wiring. 4. Correct house plumbing. |
| THREE YEAR LIMITED WARRANTY: ONE YEAR FULL PLUS SECOND AND THIRD YEARS LIMITED FROM DATE OF INSTALLATION. | Replacement parts for the upper or lower dishware rack if the rack rusts due to defective materials or workmanship. | B. Repairs when dishwasher is used in other than normal home use. C. Damage resulting from accident, alteration, misuse, abuse, improper installation or installation not in accordance with local electrical and plumbing codes. |
| FIVE YEAR LIMITED WARRANTY: ONE YEAR FULL PLUS SECOND THROUGH FIFTH YEAR LIMITED FROM DATE OF INSTALLATION. | Replacement parts (labor costs not included) for the one-half horsepower motor if defective in materials or workmanship. Replacement parts (labor costs not included) for the solid state controls (solid state controller or touch pads) if defective in material or workmanship. | D. Any labor costs during the limited warranty. E. Replacement parts or repair labor costs for units operated outside the United States. |
| TEN YEAR LIMITED WARRANTY: ONE YEAR FULL PLUS SECOND THROUGH TENTH YEAR LIMITED FROM DATE OF INSTALLATION. | Replacement parts (labor costs not included) for the TriDura™ Porcelain-on-steel tank or inner door if the tank or inner door develops a water leak as the result of defective materials or workmanship. | |

KITCHENAID, INC. DOES NOT ASSUME ANY RESPONSIBILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.